

Leading the Future in Refrigeration Technology



EMERSON **ZB Scroll Compressor** **Product Manual**



EMERSON. CONSIDER IT SOLVED.™

ZB Series

Index

General Information			1
Description of Features			2
Nomenclature & BOM			3
Application Envelope			4-5
R22			4
R404A/R507 & R134a			5
Application Guide			
1. Scroll Compression process			6-6
2. Compressor Internal Protections			7-8
3. Compressor Information			8-10
4. System Protection Guidelines			10-11
5. Testing Guidelines			11-13
6. Field & Installation Guidelines			13-14
Performance Data			15-43
R22	50Hz	1-Phase	15-16
R22	50Hz	3-Phase	17-21
R404A/R507	50Hz	1-Phase	22
R404A/R507	50Hz	3-Phase	23-25
R134a	50Hz	1 & 3-Phase	26-28
R22	60Hz	1-Phase	29-30
R22	60Hz	3-Phase	31-35
R404A/R507	60Hz	1-Phase	36-37
R404A/R507	60Hz	3-Phase	38-40
R134a	60Hz	1 & 3-Phase	41-43
Technical Data			44-45

Dimensions		46-65
Brazing Connection		46-49
ZB15~ZB29	(BOM 524)	46
ZB38~ZB48	(BOM 524)	47
ZB58	(BOM 524)	48
ZB66~ZB88	(BOM 524)	49
Rotalock Connection		50-53
ZB15~ZB29	(BOM 523)	50
ZB38~ZB48	(BOM 523)	51
ZB58	(BOM 523)	52
ZB66~ZB88	(BOM 523)	53
Brazing & Sight Glass		54-55
ZB15~ZB29	(BOM 558)	54
ZB38~ZB48	(BOM 558)	55
Brazing, Sight Glass & Oil Schrader Valve		56-59
ZB58	(BOM 550)	56
ZB66~ZB88	(BOM 550)	57
ZB95~ZB114 TFD	(BOM 550)	58
ZB95~ZB114 TW7/TW5	(BOM 550)	59
Rotalock & Sight Glass		60-61
ZB15~ZB29	(BOM 559)	60
ZB38~ZB48	(BOM 559)	61
Rotalock, Sight Glass & Oil Schrader Valve		62-65
ZB58	(BOM 551)	62
ZB66~ZB88	(BOM 551)	63
ZB95~ZB114 TFD	(BOM 551)	64
ZB95~ZB114 TW7/TW5	(BOM 551)	65
Electrical Wiring Diagram		66-67
ZB15-ZB114		66
ZB15-ZB114 Control Circuit		67

ZB Series


General Information

ZB Scroll Compressors For Refrigeration And Process Cooling:

In the years since Emerson Climate Technologies Introduced ZB scroll compressors for medium-high temperature refrigeration and process cooling applications, it has been well received by our customers. ZB scroll compressors are revolutionizing this segment of the industry by the providing following benefits to our customers.

- * Complete range between 2-15 HP
- * Proven reliability
- * Superior efficiency
- * Low sound levels
- * Availability for HFC and HCFC refrigerants
- * All voltage offering
- * Oil sight glass & Rotalock features

Customers can be confident that ZB scroll compressors are coming from Emerson Climate Technologies experience of over 80 million scroll compressors. ZB scroll compressors are manufactured in our scroll factories in Suzhou, China and Rayong, Thailand. To our customers, this gives additional value by lower inventory and reduced shipping cost.

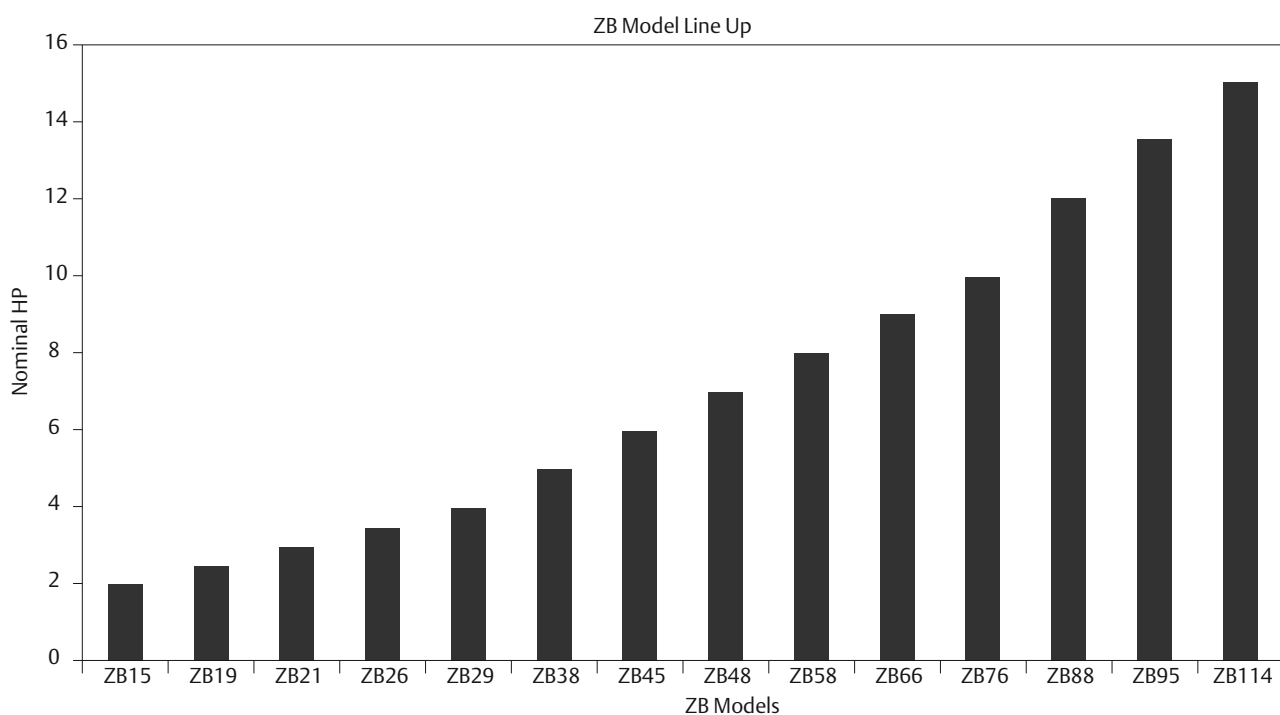

ZB Series

Description of Features

Dual Compliance

Compliance means sealing between the orbiting and fixed scroll involutes. Dual compliance means the sealing is on both the axial and radial directions. This prevents refrigerant leak back across successive scroll pressure pockets. Compliance design also allows the scroll involutes to separate in both the radial and axial directions. This allows debris or liquid refrigerant to pass through the scroll involutes without damaging the compressor. Benefits of Dual Compliance are:

- * Increased efficiency
- * Better liquid handling capability
- * Better handling of debris

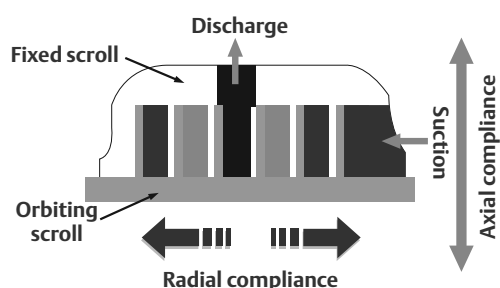


Figure 1

Scroll Wear In

The scroll involutes of Copeland scroll compressor wear in, rather than wear out. So unlike in other compressor technologies among similar categories, there is no constant degradation of performance with time due to wear out.

Lower sound, vibration and pulsation

The compression process in a scroll set is symmetrical and continuous. This inherently reduces the sound, vibration and pulsation. This eliminates the need for use of vibration absorbers and suction or discharge mufflers in most of the applications. In further, ZB scroll compressors are engineered to produce smooth sound spectrum which improves the quality of sound.

Unloaded Start

The scroll sets separate at the instant of compressor shutdown. This allows the scroll set internal pressures to equalize on compressor stops. In addition to this, the scroll sets are not engaged at the instant of starting. Scroll sets engage only after few milliseconds of startup. This allows easier startup of ZB scroll compressors. Due to this design feature, typically a start assist kit is not required even on single phase compressors.

DU bearings

A space age bearing material comprising of porous bronze with PTFE-lead overlay. These bearings are used in ZB scroll compressors in the scroll drive and main bearings. DU bearings work with exceptionally low friction between the load bearing surfaces. In addition, DU bearings can operate safely for a short time with loss of lubrication. This situations could happen on compressor applications due to oil pump out during a flooded start or heavy oil dilution after a defrost cycle.


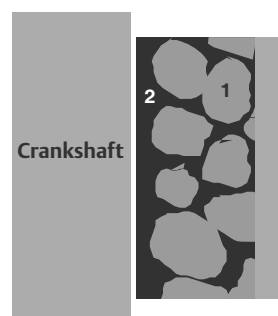


Figure 2

All specifications in this catalogue are subject to change without notice.

ZB Series

Nomenclature & BOM

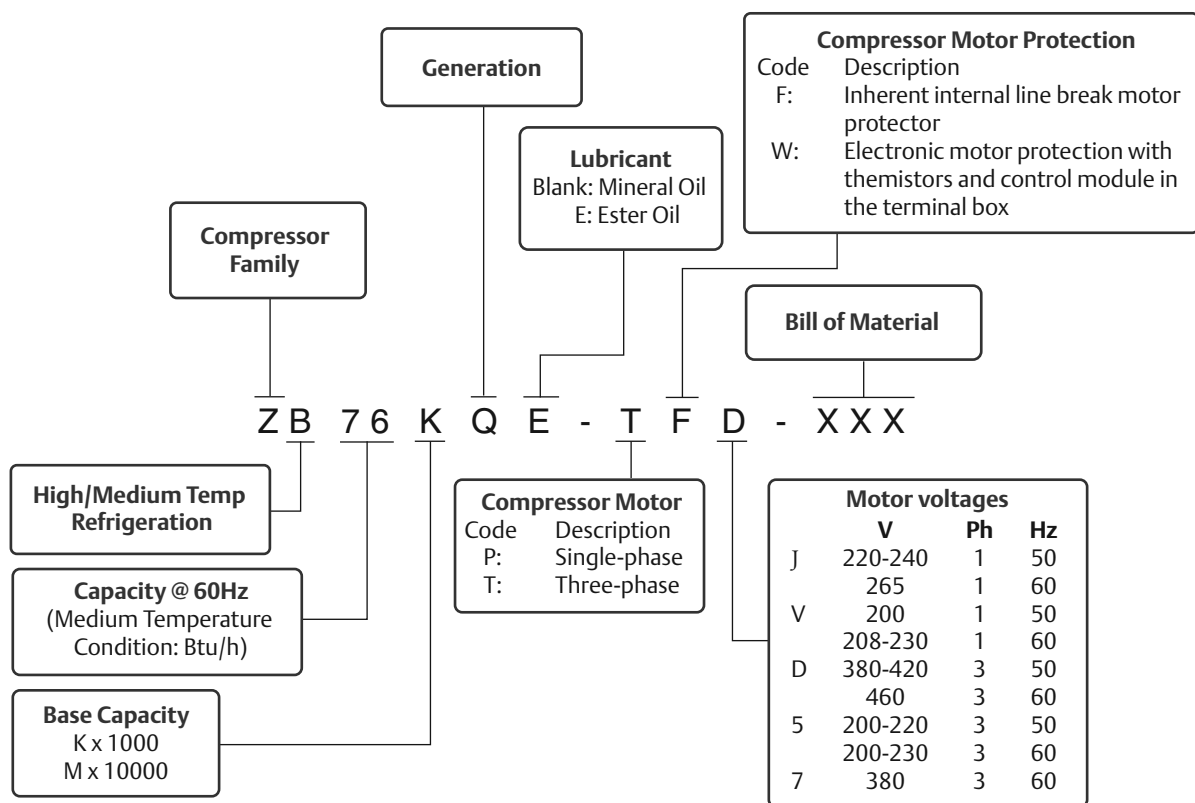

Bill of Material (BOM)

Compressor Model	BOM Number	Suction & Discharge Brazing Connection	Suction & Discharge Rotalock Connection	Oil Sight Glass	Schrader Valve
ZB15-ZB48	523		X		
	524	X			
	558	X		X	
	559		X	X	
ZB58-ZB114	523*		X		
	524*	X			
	550	X		X	X
	551		X	X	X


*Not applicable for ZB95/114 models.

ZB Series

Application Envelope

R22


ZB15~ZB88

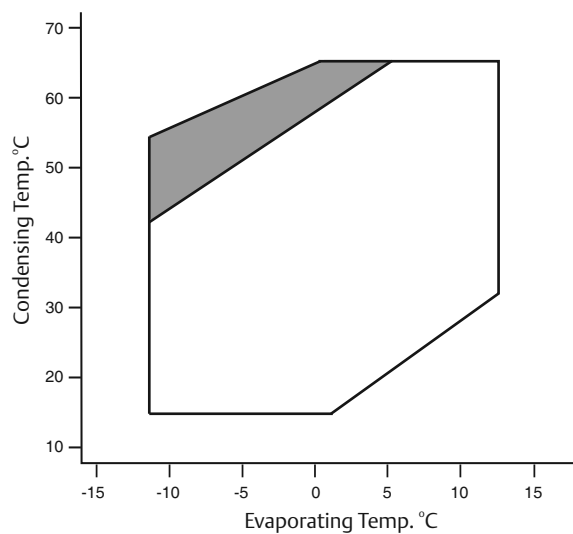

Note:

1. Envelope In Non Shaded Region, max return gas temperature of 18.3°C
2. Envelope In Shaded Region, Max superheat of 11K only


ZB95/ZB114 (TFD Motor Only)

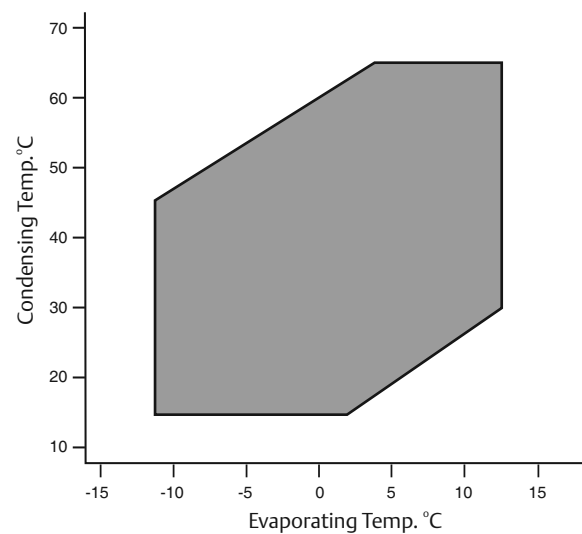

Note:

1. Envelope In Non Shaded Region, max return gas temperature of 18.3°C
2. Envelope In Shaded Region, Max superheat of 11K only

ZB95/ZB114 (TW7, TW5 Motors)

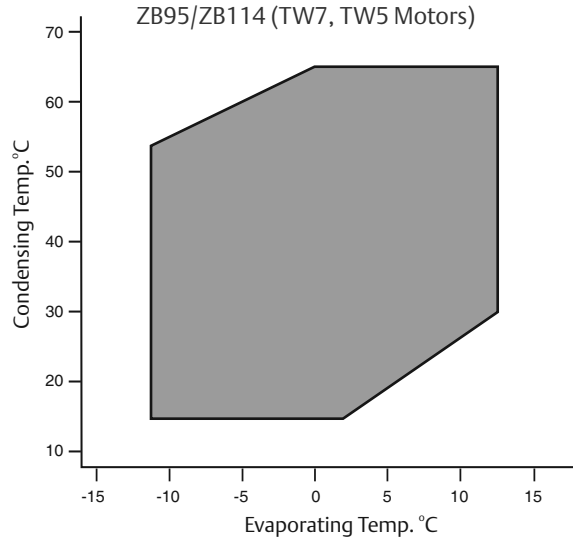


Note:

1. Envelope In Non Shaded Region, max return gas temperature of 18.3°C
2. Envelope In Shaded Region, Max superheat of 11K only
3. TW5-R22 approved only at 60Hz.

ZB Series


Application Envelope

R404A/R507 & R134a

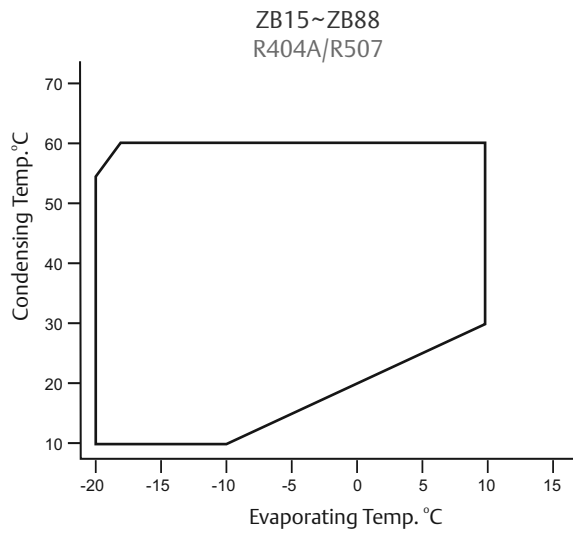


Note:

1. Envelope In Non Shaded Region, max return gas temperature of 18.3°C
2. Envelope In Shaded Region, Max superheat of 11K only

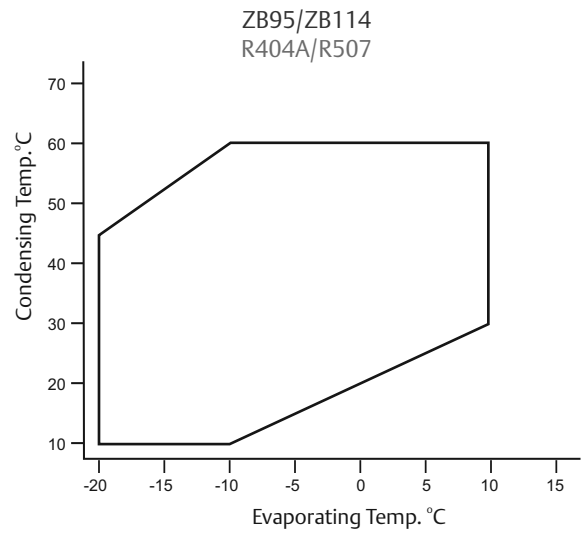

Note:


1. Envelope In Non Shaded Region, max return gas temperature of 18.3°C
2. Envelope In Shaded Region, Max superheat of 11K only

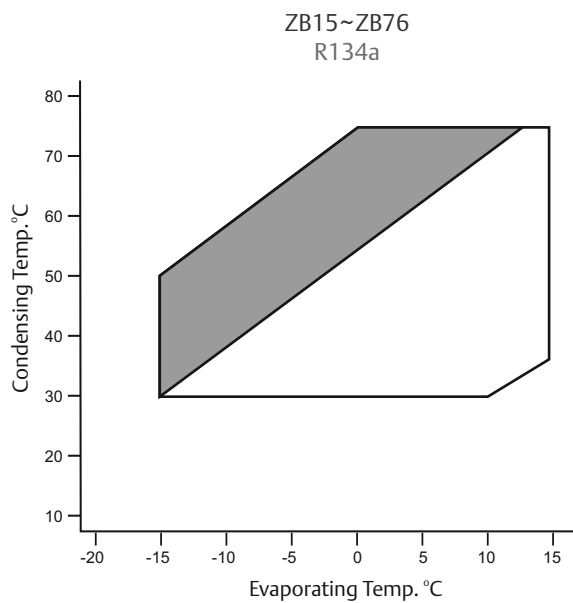


Note:

1. Envelope In Non Shaded Region, max return gas temperature of 18.3°C
2. Envelope In Shaded Region, Max superheat of 11K only


1. Scroll Compression process

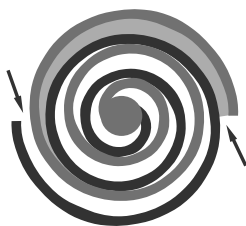


Compression in the scroll is created by the interaction of an orbiting spiral and a stationary spiral. Gas enters the outer openings as one of the spirals orbits.

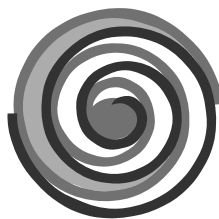


The open passages are sealed off as gas is drawn into the spiral.

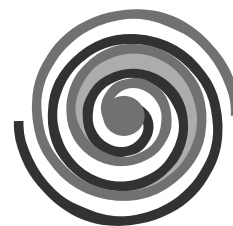

As the spiral continues to orbit, the gas is compressed into two increasingly smaller pockets.

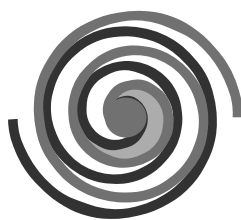

By the time the gas arrives at the center port, discharge pressure has been reached.

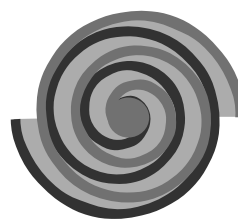

Actually, during operation, all six gas passages are in various stages of compression at all times, resulting in nearly continuous suction and discharge.

The scroll is a simple compression concept first patented in 1905. A scroll is an involute spiral which, when matched with a mating scroll form as shown above, generates a series of crescent-shaped gas pockets between the two members. During compression, one scroll remains stationary (fixed scroll) while the other form (orbiting scroll) is allowed to orbit (but not rotate) around the first form. As this motion occurs, the pockets between the two forms are slowly pushed to the center of the two scrolls while simultaneously being reduced in volume. When the pocket reaches the center of the scroll form, the gas, which is now at a high pressure, is discharged out of a port located at the center. During compression, several pockets are being compressed simultaneously, resulting in a very smooth process. Both the suction process (outer portion of the scroll members) and the discharge process (inner portion) are continuous.

2. Compressor Internal Protections

2.1 Internal Pressure Relief Valve:

Models ZB15- ZB48 has internal pressure relief valve, which open at a discharge to suction differential pressure of 375 to 450 psi. This action will trip the motor protector and remove the motor from the line.

Models ZB58 - ZB114 do not have internal pressure relief valves. To ensure safe operation, a high pressure control must be used in all applications.

The high pressure control should have a manual reset feature for the highest level of system protection. Maximum cut out settings are listed in **Table 1** If the compressor is fitted with a Rotalock valve the high pressure switch **MUST** be connected on the compressor side of the valve.

Compressors require a low pressure control for loss of charge protection. If allowed to go undetected, loss of system charge will result in overheating and damage to the scrolls and floating seal. Prolonged operation with low charge will result in decomposition of the oil that might require complete system replacement. Minimum cut out settings are listed in **Table 1**. The low pressure cut-out, if installed in the suction line to the compressor, can provide additional protection against a TXV failed in the closed position, a closed liquid line service valve, or a blocked liquid line screen, filter, orifice, or TXV. All of these can starve the compressor for refrigerant and result in compressor failure. The low pressure cut-out should have a manual reset feature for the highest level of system protection. If a compressor is allowed to cycle after a fault is detected, there is a high probability that the compressor will be damaged and the system contaminated with debris from the failed compressor and decomposed oil. If the compressor is fitted with a Rotalock valve the low pressure switch **MUST** be connected on the compressor side of the valve.

Table 1
Pressure Setting Recommendations

Model	Control Type	R22	R404A/R507	R134a
ZB15-ZB48	Low	1.3Kg/cm ²	1.2Kg/cm ²	0.3Kg/cm ²
ZB58-ZB114	High	28.7Kg/cm ²	31.88Kg/cm ²	23.9Kg/cm ²
	Low	1.3Kg/cm ²	1.2Kg/cm ²	0.3Kg/cm ²

2.2 Internal Scroll Temperature Protection

Events such as loss of charge, condenser fan failure, or low side charging with inadequate pressure will cause the discharge gas to quickly rise. Excessively high discharge gas temperatures would affect the scroll compressor reliability. To prevent damage to scroll compressors ZBKQ/E scroll compressors are built-in with internal scroll temperature protection.

Compressor models ZB15-ZB48 incorporate a thermo disc which is a temperature-sensitive snap disc device located at the scroll discharge port. It is designed to open and route hot discharge gas back to the motor protector thus removing the compressor from the line.

Compressor models ZB58-ZB114 models incorporate ASTP feature (Advanced Scroll Temperature Protection). ASTP feature will cause the scrolls to separate and stop pumping but allow the motor to continue to run. After the compressor runs for some time without pumping gas, the motor protector will open.

Depending on the heat build up in the compressor, it may take up to two hours for the motor protector to reset.

2.3 Motor Protection


For the models with a motor protection code "F", an internal line break motor protector is located in the center of the Y of the motor windings. This protector disconnects all three phases in case of an overload or over-temperature condition. The protector reacts to a combination of motor current and motor winding temperature. The internal protector protects against single phasing. Time must be allowed for the motor to cool down before the protector will reset. If current monitoring to the compressor is available, the system controller can take advantage of the compressor internal protector operation. The controller can lock out the compressor if current draw is not coincident with contactor energizing, implying that the compressor has shut off on its internal protector. This will prevent unnecessary compressor cycling on a fault condition until corrective action can be taken.

Models ZB95KQ/E and ZB114KQ/E with motor protection code “W” use a combination of sensors and an electronic module (INT69SU) for motor protection. For the INT69SU, there are four PTC (positive temperature coefficient) internal thermistors connected in series that react with avalanche resistance in the event of high temperatures. All four are used to sense motor temperature. The thermister circuit is connected to the protector module terminals S1 and S2. When any thermister reaches a limiting value, the module interrupts the control circuit and shuts off the compressor. After the thermister has cooled sufficiently, the resistance will decrease, thus allowing the module to reset. However, the module has a 30-minute time delay before reset after a thermister trip. If the INT69SU module is applied in conjunction with a Programmable Logic Controller, it is important that a minimum load is carried through the M1-M2 control circuit contacts. The minimum required current through the module relay contacts needs to be greater than 100 milliamps but not to exceed 5 amps. If this minimum current is not maintained, this has a detrimental effect upon the long-term contact resistance of the relay and may result in false compressor trips. PLC operated control circuits may not always provide this minimum current. In these cases modifications to the PLC control circuit are required. Consult your application engineering department for details.

3. Compressor Information

3.1 Fusite (Terminal)

Fusite (Terminal) pin orientation for single-phase and three phase refrigeration scroll compressors are shown in **Figure 1** and inside the terminal box.

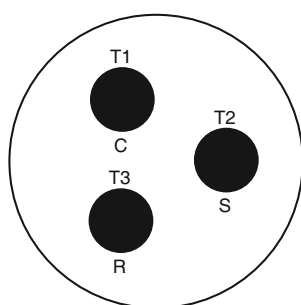

Motor Terminal (Fusite) Connections for Single Phase and Three Phase Scrolls

Figure 1

3.2 Rotation Direction of Three Phase Scroll Compressors

Scroll compressors will only compress in one rotational direction. Direction of rotation is not an issue with single phase compressors since they will always start and run in the proper direction. Three phase compressors will rotate in either direction depending upon phasing of the power. Since there is a 50-50 chance of connecting power in such a way as to cause rotation in the reverse direction, it is important to include notices and instructions in appropriate locations on the equipment to ensure proper rotation direction when the system is installed and operated. Verification of proper rotation direction is made by observing that suction pressure drops and discharge pressure rises when the compressor is energized. Reverse rotation of a scroll compressor also results in substantially reduced current draw compared to specification sheet values. Suction temperature will be high, discharge temperature will be low and the compressor may be abnormally noisy. There is no negative impact on durability caused by operating three phase Copeland Scroll compressors in the reversed direction for a short period of time (under one hour). In models ZB58 - ZB114 oil may be lost. This oil loss can be prevented during reverse rotation if the suction tubing is routed at least six inches (15 cm) above the compressor. After several minutes of operation in reverse, the compressor's motor protection system will trip the compressor off. If allowed to repeatedly restart and run in reverse without correcting the situation, the compressor will be permanently damaged.

All three phase scroll compressors are identically wired internally. As a result, once the correct phasing is determined for a specific system or installation, connecting properly phased power leads to the same terminals will maintain proper rotation direction.

Application Guide

Brief Power Interruptions

Brief power interruptions (less than ½ second) may result in powered reverse rotation of single-phase refrigeration scroll compressors. High-pressure discharge gas expands backward through the scrolls at power interruption causing the scroll to orbit in the reverse direction. If power is reapplied while this reversal is occurring, the compressor may continue to run noisily in the reverse direction for several minutes until the compressor internal protector trips. This has no negative effect on durability. When the protector resets, the compressor will start and run normally.

No time delay is required on three phase models to prevent reverse rotation due to power interruptions.

3.3 Oil Types

In HCFC R-22 applications, mineral oil is used in the compressor. Polyol ester lubricants must be used with HFC refrigerants (R404A, R507 and 134a). Compressors using polyol ester oil are identified with an "E" in the model number. A separate form may be requested (**Form 93-11**) which lists Emerson approved lubricants that may be used to recharge these compressors or if the addition of oil is required. See compressor nameplate for original oil charge. A complete recharge should be four ounces (118 ml) less than the original oil charge. If the oil level is above the sight glass, it may lead to oil circulation rates higher than 1.5% which may lead to decreased capacity as the oil coats the evaporator coils.

3.4 Deep Vacuum Operation

WARNING: DO NOT RUN A REFRIGERATION SCROLL COMPRESSOR IN A VACUUM. FAILURE TO HEED THIS ADVICE CAN RESULT IN PERMANENT DAMAGE TO THE COMPRESSOR.

A low-pressure control is required for protection against vacuum operation. See the section on pressure controls for the proper set points. (See Table 1)

Scrolls compressors (as with any refrigeration compressor) should never be used to evacuate refrigeration or air conditioning systems.

The scroll compressor can be used to pump-down refrigerant in a unit as long as the pressures remain within the operating envelope. Low suction pressures will result in overheating of the scrolls and permanent damage to the compressor drive bearing or cause the scroll temperature protection to activate.

3.5 Shell Temperature

Certain types of system failures, such as condenser or evaporator fan blockage or loss of charge, may cause the top shell and discharge line to briefly but repeatedly reach temperatures above 350°F (177°C) as the compressor cycles on its internal protection devices. Care must be taken to ensure that wiring or other materials, which could be damaged by these temperatures, do not come in contact with these potentially hot areas.

3.6 Suction and Discharge Fittings

Scroll compressors are available with stub tube or Rotalock connections. The stub tube version has copper plated steel suction and discharge fittings. These fittings are far more rugged than copper fittings used on other compressors. Due to the different thermal properties of steel and copper, brazing procedures may have to be changed from those commonly used. Assembly and brazing procedures are explained in the later part of application guide.

3.7 Starting Characteristics Of Single-Phase Compressors

Single-phase scroll compressors are designed with PSC type motors and therefore will start without the need of start assist devices in most applications. However, if low voltage conditions exist at start up, protector trips can result. Therefore, start assist devices (start capacitors and relays) are available to maximize starting characteristics under abnormal conditions.

3.8 Special handling consideration for ZB58-ZB114

ZB58- ZB114 model compressors have the suction fitting located low on the shell. Due to this, its recommended to leave the suction connection plug in place until the compressor is set into the unit. The discharge connection plug should be removed first before pulling the suction connection plug to allow the dry air pressure inside the compressor to escape. Pulling the plugs in this sequence prevents oil mist from coating the suction tube making the brazing difficult.. The copper coated steel suction tube should be cleaned before brazing. No object (example a swaging tool) should be inserted deeper than 50mm into the suction tube or it might damage the suction screen and motor.

4. System Protection Guidelines

4.1 Accumulator Requirement:

Due to the scrolls' inherent ability to handle liquid refrigerant in flooded start and defrost cycle operation conditions, accumulators may not be required. An accumulator is required on single compressor systems when the charge limitations exceed those values listed in **Table 2**. On systems with defrost schemes or transient operations that allow prolonged uncontrolled liquid return to the compressor, an accumulator is required.

Excessive liquid flood back or repeated flooded starts will dilute the oil in the compressor causing inadequate lubrication and bearing wear. Proper system design will minimize liquid flood back, thereby ensuring maximum compressor life.

Table 2
Charge Limitations

Models	Charge Limits
ZB15- ZB48	4.5 Kgs
ZB58-ZB114	7 Kgs

4.2 Crankcase Heaters Requirement

Single-phase models

No crankcase heaters are required on single-phase scroll compressors.

Three-phase models

ZB15–ZB48- outdoor only

Crankcase heaters are required on three phase compressors where the system charge exceeds 4.5 Kgs. Table 3 lists the specification of applicable crankcase heaters.

ZB58-ZB114

Crankcase heaters are required where the system charge exceeds 7 Kgs. The crankcase heater must be located below the suction inlet. Table 3 lists the specification of applicable crankcase heaters.

Table 3
Crankcase Heater

Model	Part No	Volts	Watts	Length
ZB15-ZB48	018-0072-04	240	70	48" (122 mm)
ZB58-ZB114	018-0067-01	240	90	48" (122 mm)

The listed crankcase heaters are intended for use only when there is limited access (Table 3). The heaters are not equipped for use with electrical conduit. Where applicable, electrical safety codes require lead protection, a crankcase heater terminal box should be used. Recommended crankcase heater terminal box and cover part kit numbers are available with Copeland Application Engineering Department.

The crankcase heater must remain energized during the compressor off cycles.

The initial start in the field is a very critical period for any compressor because all load bearing surfaces are new and require a short break-in period to carry high loads under adverse conditions. **The crankcase heater must be turned on a minimum of 12 hours prior to starting the compressor.** This will prevent oil dilution and bearing stress on initial start up. If it is not feasible to turn on the crankcase heater 12 hours in advance of starting the compressor, then use one of the techniques listed below to prevent possible flooded start damage to the compressor: 1) Direct a 500 watt heat lamp or other safe heat source at the lower shell of the compressor for approximately 30 minutes to boil off any liquid refrigerant prior to starting; or 2) Bump start the compressor by manually energizing the compressor contactor for about one second. Wait five seconds and again manually energize compressor for one second. Repeat this cycle several times until the liquid in the shell has been boiled off and the compressor can be safely started and run continuously.

Application Guide

4.3 Pump-Down Cycle

A pump-down cycle for control of refrigerant migration may be used instead of, or in conjunction with, a crankcase heater when the compressor is located so that cold air blowing over the compressor makes the crankcase heater ineffective. **A separate external check valve must be added to the discharge line if pump-down is used.** The built-in scroll discharge check valve is designed to stop extended reverse rotation and prevent high pressure gas from leaking rapidly into the low side after shut off. High side leak-back through the check valve may exceed amounts typically found in reciprocating compressors with reed valves. This can cause the compressor to recycle more frequently. Repeated short-cycling of this nature can result in low compressor oil and consequent damage to the compressor. The recommended external check valve will prevent the frequent recycling due to leak-back. The low pressure control cut-in and cut-out settings have to be reviewed since a relatively large volume of gas will re-expand from the high side of the compressor into the low side on shut down. Emerson recommends that the cut out setting of the pump-down pressure control be set no more than a few degrees of equivalent saturated pressure below the lowest expected normal operating pressure. It is not necessary to pump-down into nearly a vacuum to remove all liquid refrigerant for the low side. To achieve a fairly wide control differential the cut in setting should be set a few degrees of equivalent saturated pressure below the lowest expected temperature of the medium that is cooled. Copeland Scroll compressors trap a considerable volume of high pressure gas between the muffler plate and the top cap. When the compressor shuts down the trapped gas will expand back into the suction side of the system. This frequently causes a pulse of pressure to propagate down the suction line and can cause the low pressure switch to reset. The compressor must not be allowed to short cycle which may result in oil pump out. The electrical circuitry should be arranged so that compressor restart is triggered by demand from the thermostat rather than a reset low pressure switch. Setting a wider differential between the cutout and cut in pressures of a low pressure switch may solve the short cycling problem but may also result in unacceptable temperature swings in the cooled space. If short cycling cannot be avoided, using a 3 minute time delay will limit the cycling of the compressor to an acceptable level.

4.4 Filter Screens In System

The use of screens finer than 30 x 30 mesh (0.6 mm openings) anywhere in the system is not recommended. Field experience has shown that finer mesh screens used to protect thermal expansion valves, capillary tubes, or accumulators can become temporarily or permanently plugged with normal system debris and block the flow of either oil or refrigerant to the compressor. Such blockage can result in compressor failure.

5. Testing Guidelines

5.1 Compressor Hi-Pot Testing

Refrigeration scroll compressors are configured with the motor in the bottom of the shell. Unlike most other hermetic compressors, the motor of a scroll compressor can be immersed in refrigerant when liquid is present in the shell. Hi-Pot tests with liquid refrigerant in the shell can show higher levels of current leakage due to the higher electrical conductivity of liquid refrigerant vs. refrigerant vapor and oil. This phenomenon can occur with any compressor when the motor is immersed in refrigerant and does not present any safety issue. To lower the current leakage reading, operate the system for a brief period of time redistributing the refrigerant to a more normal configuration and test again. Under no circumstances should the Hipot test be performed while the compressor is in vacuum.

5.2 Scroll Compressor Functional Check

A functional compressor test with the suction service valve closed to check how low the compressor will pull suction pressure is not a good indication of how well a compressor is performing. Such a test will almost certainly damage a scroll compressor. The following diagnostic procedure should be used to evaluate whether a Copeland Scroll compressor is working properly.

1. Proper voltage to the unit should be verified.
2. The normal checks of motor winding continuity and short to ground should be made to determine if the inherent overload motor protector has opened or if an internal motor short or ground fault has developed. If the protector has opened, the compressor must be allowed to cool sufficiently to allow it to reset.

3. Proper indoor and outdoor blower/fan operation should be verified.
4. With service gauges connected to suction and discharge pressure fittings, turn on the compressor. If suction pressure falls below normal levels, the system is either low on charge or there is a flow blockage in the system.
5. In single Phase Compressors, if suction pressure does not drop and discharge pressure does not rise to normal levels the compressor is faulty. But in Three Phase compressors, reverse any two of the compressor power leads and reapply power to make sure compressor was not wired to run in reverse direction.
6. Before replacing, be certain that the compressor is actually defective. As a minimum, recheck a compressor returned from the field in the shop or depot for Hipot, winding resistance, and ability to start. Experience shows that more than one third of compressors are determined to have nothing found wrong. They were mis-diagnosed in the field as being defective. Replacing working compressors unnecessarily costs everyone.
7. **NEVER** test a scroll compressor by closing the suction valve or the liquid feed to the evaporator and pumping the compressor into a vacuum.

5.3 Electronic Motor Protection Module and Sensor Functional Check

The following field troubleshooting procedure can be used to evaluate the solid state control circuit: Refer to **Table 4** for a technical data summary.

Module Voltage Supply Troubleshooting

- Verify that all wire connectors are maintaining a good mechanical connection. Replace any connectors that are loose.
- Measure the voltage across T1-T2 to ensure proper supply voltage.

- Determine the control voltage by using a voltmeter and then measure the voltage across the M1-M2 contacts:
 - a. If the measured voltage is equal to the control volts then the M1-M2 contacts are open.
 - b. If the measurement is less than 1 volt and the compressor is not running, then the problem is external to the INT69SU module.
 - c. If the voltage is greater than 1 volt but less than the control voltage, the module is faulty and should be replaced.

Sensor Troubleshooting

- Remove the leads from S1-S2, and then by using an ohmmeter measure the resistance of the incoming leads.

CAUTION: Use an Ohmmeter with a maximum of 9 VDC for checking – do not attempt to check continuity through the sensors with any other type of instrument. Any external voltage or current may cause damage requiring compressor replacement.

 - a. During normal operation, this resistance value should read less than 4500 ohms $\pm 20\%$.
 - b. If the M1-M2 contacts are open, the measured S1-S2 value is above 2750 ohms $\pm 20\%$ and the compressor has been tripped less than 30 minutes then the module is functioning properly.

- If the S1-S2 wire leads read less than 2750 ohms $\pm 20\%$ and the M1-M2 contacts are open, reset the module by removing the power to T1-T2 for a minimum of 5 seconds.

- Replace all wire leads and use a voltmeter to verify the M1-M2 contacts are closed.

- If the M1-M2 contacts remain open and S1-S2 are less than 2500 ohms, remove leads from the M1-M2 contacts and jumper together;

CAUTION: Compressor should start at this time. HOWEVER DO NOT LEAVE JUMPER IN PLACE FOR NORMAL SYSTEM OPERATIONS. THE JUMPER IS USED FOR DIAGNOSTIC PURPOSES ONLY.

- Go to Compressor Supply Voltage Troubleshooting.

Compressor Supply Voltage Troubleshooting

- Remove phase sensing leads from the module from L1/L2/L3.
- Use a voltmeter to measure the incoming 3 phase voltage on L1/L2/L3.
WARNING: L1/L2/L3 could be at a potential up to 600VAC.
- Ensure proper voltage on each phase.
- Remove power to the module for a minimum of 5 seconds to reset and replace all wire leads. Reenergize the module. If the M1-M2 contacts are open with proper voltage to T1-T2, L1/L2/L3 and proper resistance to S1-S2 then the module is faulty and should be replaced.

Table 4
Technical Data Summary Of Module

Emerson P/N	071-0641-00
Manufacturer P/N Kriwan 69SU	Kriwan 69SU
T1-T2 Module Power	
Voltage Supply	120V & 240V
Frequency	50Hz & 60Hz
M1-M2 Module Output Contacts	
Maximum Voltage	250VAC
Maximum Current	5 Amps
Minimum Current	100 milliamps
Relay Output	5 A, 300 VA
Power Output	<3 VA
S1-S2 Thermal Protection	
Trip Out Resistance	4500W ± 20%
Reset Resistance	2750W ± 20%
Reset Time	30 min ± 5 min
Manual Reset	T1-T2 interrupt for minimum of 5 sec
L1-L2-L3 Phase Monitoring	
Phase Sensor	Non Phase Sensing
Phase Monitoring Circuit Rating	Non Phase Sensing
Trip Delay	Non Phase Sensing
Lockout	Non Phase Sensing
Reset For Lockout	Non Phase Sensing

6. Field & Installation Guidelines

6.1 Assembly Line And Field Brazing

ZB Scroll compressors are available with stub tube and Rotalock connections. The stub tube version has copper plated steel suction and discharge fittings. Due to the different thermal properties of steel and copper, brazing procedures may have to be changed from those commonly used. The guidelines below give a description for assembly line and field brazing procedures.

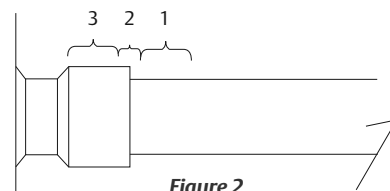


Figure 2

New Installations

- The copper-coated steel suction and discharge tubes on scroll compressors can be brazed in approximately the same manner as any copper tube.
- Recommended brazing materials: Any silfos material is recommended, preferably with a minimum of 5% silver. However, 0% silver is acceptable.
- Be sure compressor tube fittings I.D. and connecting tube O.D. are clean prior to assembly. If oil film is present wipe with denatured alcohol, Dichloro-Trifluoroethane or other suitable solvent.
- Using a double-tipped torch apply heat in Area 1. As tube approaches brazing temperature, move torch flame to Area 2.
- Heat Area 2 until braze temperature is attained, moving torch up and down and rotating around tube as necessary to heat tube evenly. Add braze material to the joint while moving torch around joint to flow braze material around circumference.
- After braze material flows around joint, move torch to heat Area 3. This will draw the braze material down into the joint. The time spent heating Area 3 should be minimal.
- As with any brazed joint, overheating may be detrimental to the final result.

Field Service

Unbrazing System Components

CAUTION!

If the refrigerant charge is removed from a scroll unit by bleeding the high side only, it is sometimes possible for the scrolls to seal preventing pressure equalization through the compressor. This may leave the low side shell and suction line tubing pressurized. If a brazing torch is then applied to the low side, the pressurized refrigerant oil mixture could ignite as it escapes and contacts the brazing flame. It is important to check both the high and low sides with manifold gauges before unbrazing. In the case of an assembly line repair, remove the refrigerant from both the high and low sides. Instructions should be provided in appropriate product literatures and assembly areas

- To disconnect: Reclaim refrigerant from both the high and low side of the system. Cut tubing near compressor.
- To reconnect: Recommended brazing material is Silfos with minimum 5% silver or silver braze material with flux. Insert tubing stubs into fitting and connect to the system with tubing connectors. Follow **New Installation** brazing instructions.

Brazing Procedure

Figure 2 discusses the proper procedures for brazing the suction and discharge lines to a Copeland Scroll compressor. It is important to flow nitrogen through the system while brazing all joints during the system assembly process. Nitrogen displaces the air and prevents the formation of copper oxides in the system.

If allowed to form, the copper oxide flakes can later be swept through the system and block screens such as those protecting capillary tubes, thermal expansion valves, and accumulator oil return holes. The blockage - whether it is of oil or refrigerant - is capable of doing damage resulting in compressor failure.

6.2 Compressor Replacement after Motor Burn

In the case of a motor burn, the majority of contaminated oil will be removed with the compressor. The rest of the oil is cleaned through use of suction and liquid line filter dryers. A 100% activated alumina suction filter drier is recommended but must be removed after 72 hours. Separate bulletins are available on request for clean up procedures and for liquid line filter drier recommendations. AE Bulletin 24-1105 for clean up procedures AE Bulletin 11-1297 for liquid line filter drier recommendations.

It is highly recommended that the suction accumulator be replaced if the system contains one. This is because the accumulator oil return orifice or screen may be plugged with debris or may become plugged shortly after a compressor failure. This will result in starvation of oil to the replacement compressor and a second failure.

6.3 System Charging Procedure

Systems should be charged with liquid on the high side to the extent possible. The majority of the charge should be pumped into the high side of the system to prevent hi pot failures, and bearing washout during first time start. If additional charge is needed, it should be added as liquid, in a controlled manner, to the low side of the system with the compressor operating. Pre-charging on the high side and adding liquid on the low side of the system are both meant to protect the compressor from operating with abnormally low suction pressures during charging.

Do not start the compressor while the system is in a deep vacuum. Internal arcing may occur when a compressor is started in a vacuum. Do not operate compressor without enough system charge to maintain at least 7 psig (0.5Kg/cm²) suction pressure. Do not operate with a restricted suction. Do not operate with the low pressure cut-out jumpered. Allowing pressure to drop below 2°F (-16°C) for more than a few seconds may overheat scrolls and cause early drive bearing damage or cause the scroll temperature protection to activate. Do not use compressor to test opening set point of high pressure cutout. Bearings are susceptible to high load damage before they have had several hours of normal running for proper break in. Never install a system in the field and leave it unattended with no charge, or with the service valves closed without securely locking out the system. This will prevent unauthorized personnel from accidentally operating the system and potentially ruining the compressor by operating with no refrigerant flow.

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB15KQ	Q	15	4000	4350	5250	6250		
		20	3850	4200	5050	6050	7200	
		30	3550	3850	4700	5600	6650	7900
		40	3250	3500	4250	5150	6100	7250
		50	2650	2900	3850	4600	5500	6550
		55		2700	3400	4350	5200	6200
		60			3150	3900	4850	5800
		65				3600	4500	5400
	P	15	870	870	870	890		
		20	960	950	960	970	990	
		30	1150	1150	1150	1160	1170	1180
		40	1400	1400	1390	1400	1400	1410
		50	1730	1720	1710	1710	1710	1700
		55		1910	1900	1900	1890	1880
		60			2120	2110	2090	2080
		65				2360	2340	2330
ZB19KQ	Q	15	4650	5000	6050	7250		
		20	4450	4800	5850	6950	8300	
		30	4100	4450	5400	6450	7700	9100
		40	3700	4050	4900	5900	7050	8350
		50	3050	3350	4400	5300	6350	7550
		55		3100	3900	5000	6000	7150
		60			3600	4500	5600	6700
		65				4150	5200	6250
	P	15	980	980	980	1000		
		20	1080	1070	1080	1090	1110	
		30	1300	1290	1290	1300	1320	1330
		40	1580	1570	1570	1570	1580	1580
		50	1940	1930	1930	1920	1920	1920
		55		2150	2140	2140	2130	2120
		60			2390	2380	2370	2350
		65				2650	2640	2620
ZB21KQ	Q	15	5850	6300	7650	9100		
		20	5600	6100	7350	8800	10450	
		30	5150	5600	6800	8150	9700	11500
		40	4700	5100	6200	7450	8900	10550
		50	3850	4200	5550	6700	8000	9550
		55		3950	4900	6300	7550	9000
		60			4550	5650	7050	8450
		65				5200	6550	7850
	P	15	1360	1360	1370	1390		
		20	1500	1490	1500	1520	1550	
		30	1800	1800	1800	1810	1830	1850
		40	2200	2190	2180	2190	2200	2200
		50	2700	2690	2680	2680	2680	2670
		55		3000	2980	2970	2970	2950
		60			3320	3310	3300	3270
		65				3690	3670	3640

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB26KQ	15	6750	7300	8800	10500			
	20	6450	7000	8500	10150	12050		
	30	5950	6450	7850	9400	11200	13300	14450
	40	5400	5900	7150	8600	10250	12200	13300
	50	4400	4850	6400	7750	9250	11000	12050
	55		4550	5700	7250	8700	10400	11350
	60			5250	6550	8150	9750	10650
	65				6000	7550	9050	9950
	15	1470	1460	1470	1500			
	20	1610	1600	1610	1630	1660		
	30	1940	1930	1930	1950	1970	1980	1980
	40	2360	2350	2340	2350	2360	2360	2360
	50	2900	2890	2880	2870	2870	2860	2850
	55		3220	3200	3190	3190	3170	3150
ZB29KQ	60			3570	3550	3540	3520	3500
	65				3960	3940	3910	3890
	15	7850	8550	10250	12050			
	20	7600	8300	10000	11800	13800		
	30	7000	7650	9300	11100	13050	15350	16650
	40	6400	6950	8500	10150	12050	14300	15600
	50	5400	5900	7650	9150	10900	13000	14250
	55		5650	6850	8600	10250	12250	13450
	60			6500	7800	9600	11500	12650
	65				7350	9000	10750	11800
	15	1640	1660	1710	1770			
	20	1790	1800	1850	1900	1940		
	30	2120	2130	2170	2210	2250	2270	2280
	40	2530	2540	2580	2610	2650	2670	2670
	50	3030	3050	3090	3130	3160	3180	3190
	55		3340	3390	3430	3470	3490	3500
	60			3720	3770	3810	3840	3850
	65				4150	4200	4230	4240

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB15KQ	Q	15	4050	4400	5250	6200		
		20	3900	4250	5100	6050	7150	
		30	3550	3900	4700	5650	6700	7850
		40	3200	3500	4250	5150	6100	7250
		50	2650	2900	3800	4550	5450	6500
		55		2700	3350	4250	5100	6100
		60			3100	3850	4750	5700
		65				3550	4400	5250
	P	15	780	780	800	830		
		20	870	870	890	920	960	
		30	1090	1090	1100	1120	1150	1180
		40	1350	1350	1370	1390	1410	1420
		50	1680	1680	1700	1720	1740	1740
		55		1880	1890	1920	1940	1940
		60			2110	2140	2160	2160
		65				2380	2410	2410
ZB19KQ	Q	15	4650	5050	6050	7150		
		20	4500	4850	5850	7000	8200	
		30	4100	4450	5450	6500	7700	9050
		40	3700	4050	4900	5900	7050	8350
		50	3050	3300	4350	5250	6300	7500
		55		3100	3850	4950	5900	7050
		60			3600	4400	5500	6550
		65				4100	5050	6050
	P	15	880	880	900	940		
		20	990	990	1010	1040	1090	
		30	1240	1240	1250	1280	1310	1340
		40	1540	1540	1550	1570	1600	1620
		50	1910	1910	1930	1950	1970	1980
		55		2130	2150	2180	2200	2210
		60			2400	2430	2450	2460
		65				2710	2730	2740
ZB21KQ	Q	15	5900	6350	7650	9050		
		20	5650	6150	7400	8800	10350	
		30	5200	5650	6850	8200	9700	11450
		40	4650	5100	6200	7450	8900	10500
		50	3800	4200	5500	6650	7950	9450
		55		3900	4850	6200	7450	8850
		60			4550	5550	6900	8250
		65				5150	6400	7650
	P	15	1150	1150	1170	1220		
		20	1290	1290	1310	1350	1410	
		30	1610	1610	1620	1660	1700	1730
		40	2000	1990	2010	2040	2080	2100
		50	2480	2480	2500	2530	2560	2570
		55		2760	2790	2820	2850	2860
		60			3110	3150	3180	3190
		65				3510	3550	3550

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB26KQ	Q	15	6900	7500	8950	10650		
		20	6650	7200	8700	10350	12350	
		30	6100	6650	8050	9650	11550	13850
		40	5550	6050	7350	8800	10550	12700
		50	4600	5050	6600	7900	9450	11400
		55		4750	5850	7400	8850	10700
		60			5500	6650	8250	9950
		65				6200	7650	9200
	P	15	1230	1200	1200	1220		
		20	1380	1360	1350	1380	1410	
		30	1740	1720	1710	1740	1770	1760
		40	2210	2180	2170	2190	2210	2200
		50	2840	2800	2770	2780	2790	2760
		55		3190	3140	3140	3140	3100
		60			3570	3550	3540	3490
ZB29KQ	Q	15	7900	8550	10250	12150		
		20	7600	8250	9900	11800	13900	
		30	6950	7550	9200	11000	13000	15350
		40	6250	6800	8300	10000	11900	14100
		50	5100	5600	7400	8900	10650	12700
		55		5250	6500	8350	9950	11900
		60			6050	7450	9250	11100
		65				6900	8550	10250
	P	15	1460	1460	1490	1560		
		20	1640	1640	1670	1720	1790	
		30	2050	2040	2060	2110	2160	2210
		40	2540	2540	2560	2600	2640	2670
		50	3150	3160	3190	3230	3260	3280
		55		3520	3550	3600	3630	3650
		60			3960	4010	4050	4060
ZB38KQ	Q	15	9800	10600	12700	15050		
		20	9450	10200	12350	14650	17300	
		30	8650	9400	11400	13650	16150	19050
		40	7750	8450	10300	12400	14800	17550
		50	6350	6950	9200	11050	13250	15750
		55		6500	8100	10350	12400	14800
		60			7550	9250	11500	13800
		65				8550	10650	12750
	P	15	1850	1850	1890	1970		
		20	2070	2070	2100	2180	2270	
		30	2580	2580	2610	2660	2730	2790
		40	3210	3210	3230	3290	3340	3370
		50	3980	3990	4020	4070	4120	4140
		55		4450	4490	4540	4590	4600
		60			5010	5070	5110	5130
ZB48KQ	Q	15	12300	13200	15500	18150		
		20	11850	12700	14750	17150	20350	
		30	10850	11700	13550	15650	18550	22150
		40	9850	10650	12350	14150	16550	19550
		50	8350	9050	10650	12250	14250	16750
		55		8500	10050	11650	13450	15650
		60			9550	11150	12950	15150
		65				10550	12450	14550
	P	15	2070	2070	2100	2180	2270	
		20	2270	2270	2300	2380	2470	2560
		30	2780	2780	2810	2860	2930	3010
		40	3390	3390	3420	3470	3540	3590
		50	4000	4000	4030	4080	4150	4200
		55		4450	4490	4540	4590	4600
		60			5010	5070	5110	5130

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling OK

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB45KQ	15	11800	12750	15350	18350			
	20	11350	12300	14800	17700	21100		
	30	10450	11350	13700	16400	19500	23100	25100
	40	9450	10300	12500	14950	17800	21100	22950
	50	7650	8400	11100	13400	16000	18950	20650
	55		7750	9750	12500	15000	17850	19400
	60			8950	11150	13950	16650	18150
	65				10200	12800	15350	16800
	15	2080	2100	2160	2230			
	20	2340	2360	2410	2470	2550		
	30	2950	2970	3010	3050	3100	3170	3230
	40	3710	3730	3760	3790	3810	3850	3890
	50	4650	4680	4710	4720	4730	4750	4770
	55		5230	5270	5280	5280	5290	5300
ZB48KQ	60			5890	5900	5890	5890	5890
	65				6590	6580	6570	6570
	15	12950	14000	16900	20200			
	20	12500	13500	16300	19500	23200		
	30	11500	12450	15050	18050	21450	25400	27600
	40	10400	11300	13700	16450	19600	23200	25250
	50	8400	9250	12200	14700	17550	20850	22700
	55		8550	10750	13750	16500	19600	21350
	60			9850	12300	15350	18300	19950
	65				11200	14100	16900	18450
	15	2290	2310	2380	2460			
	20	2570	2600	2660	2720	2810		
	30	3250	3270	3310	3350	3400	3490	3550
	40	4080	4100	4140	4160	4190	4240	4280
	50	5120	5140	5180	5200	5200	5220	5240
ZB58KQ	55		5750	5800	5810	5810	5810	5830
	60			6480	6490	6480	6480	6480
	65				7250	7240	7220	7220
	15	15400	16650	20150	24200			
	20	14650	15900	19350	23300	27800		
	30	13300	14500	17750	21450	25700	30500	33150
	40	11850	13000	16100	19600	23550	28050	30500
	50	9250	10350	14150	17450	21150	25300	27600
	55		9300	12250	16200	19800	23800	26000
	60			11000	14250	18250	22150	24250
	65				12750	16600	20300	22350
	15	2740	2760	2790	2860			
	20	3100	3110	3150	3210	3310		
	30	3900	3900	3930	3970	4050	4190	4270
	40	4880	4880	4890	4910	4960	5060	5120
	50	6140	6140	6120	6110	6120	6180	6220
	55		6900	6870	6840	6830	6860	6900
	60			7720	7670	7640	7650	7670
	65				8620	8570	8540	8550

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB66KQ	Q	15	17200	18650	22600	27150		
		20	16550	17950	21750	26150	31200	
		30	15300	16550	20100	24200	28850	34200
		40	13950	15150	18450	22200	26500	31400
		50	11400	12500	16550	20050	23950	28400
		55		11600	14650	18800	22550	26800
		60			13500	16850	21100	25100
		65				15450	19450	23300
	P	15	2840	2850	2900	2970		
		20	3330	3350	3400	3480	3590	
		30	4270	4300	4360	4430	4540	4690
		40	5340	5360	5410	5470	5550	5680
		50	6710	6720	6740	6770	6820	6890
		55		7560	7570	7580	7600	7650
		60			8540	8520	8510	8530
		65				9620	9570	9560
ZB76KQ	Q	15	20300	22000	26750	32250		
		20	19500	21150	25700	30950	36900	
		30	18000	19500	23700	28550	34000	40150
		40	16400	17850	21750	26150	31200	36850
		50	13350	14700	19500	23600	28200	33350
		55		13600	17200	22200	26600	31500
		60			15800	19850	24850	29550
		65				18150	22950	27450
	P	15	3020	3030	3060	3140		
		20	3700	3710	3750	3840	3990	
		30	4950	4970	5030	5110	5240	5470
		40	6270	6300	6360	6430	6530	6700
		50	7930	7950	8000	8040	8100	8210
		55		8980	9020	9040	9070	9150
		60			10210	10210	10210	10240
		65				11580	11550	11540
ZB88KQ	Q	15	23550	25400	30500	36150		
		20	22700	24550	29600	35200	41300	
		30	20850	22600	27500	32900	38850	45350
		40	18750	20400	24950	30100	35800	42000
		50	15100	16600	22050	26800	32100	37950
		55		15300	19300	24950	30000	35650
		60			17650	22150	27800	33150
		65				20100	25400	30500
	P	15	3940	3980	4120	4350		
		20	4470	4500	4610	4800	5100	
		30	5660	5690	5770	5890	6080	6410
		40	7120	7150	7220	7290	7410	7610
		50	8920	8960	9040	9090	9150	9260
		55		10030	10120	10160	10210	10280
		60			11320	11370	11400	11450
		65				12720	12740	12760

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB95KQ	Q	15	25350	27400	33200	39950		
		20	24350	26350	31800	38200	45550	
		30	22350	24200	29350	35150	41800	49350
		40	19550	21450	26500	32050	38250	45200
		50			22450	28050	34100	40700
		55			25350	31450	38000	41500
		60				28350	34900	38400
		65				24600	31250	34750
	P	15	4660	4730	4990	5340		
		20	5170	5220	5410	5680	6040	
		30	6450	6490	6590	6740	6940	7200
		40	8040	8080	8180	8280	8380	8510
		50			10120	10230	10320	10380
		55			11350	11460	11520	11530
		60				12690	12770	12790
		65				14030	14140	14160
ZB114KQ	Q	15	30500	32950	39700	47300		
		20	29400	31800	38400	45850	54250	
		30	26750	29050	35400	42500	50450	59350
		40	23200	25550	31700	38550	46100	54500
		50			27050	33700	41000	48950
		55			30900	38050	45850	50050
		60				34850	42500	46600
		65				31350	38850	42850
	P	15	5730	5790	5990	6250		
		20	6320	6380	6550	6780	7080	
		30	7760	7790	7920	8090	8330	8630
		40	9610	9630	9710	9830	9990	10220
		50			12030	12090	12190	12340
		55			13460	13520	13630	13710
		60				15020	15100	15150
		65				16710	16750	16780

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R404A/R507

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB15KQE	Q	10	3700	4500	5450			
		20	3350	4050	4900	5900	7000	
		30	2950	3600	4350	5250	6200	7300
		40	2550	3150	3800	4550	5400	6350
		50	2150	2600	3150	3800	4500	5350
		60		2050	2500	3000	3600	4250
	P	10	730	740	740			
		20	920	920	930	930		
		30	1150	1150	1160	1160	1150	1140
		40	1440	1450	1450	1450	1450	1440
		50	1800	1810	1810	1810	1810	1800
		60		2250	2260	2250	2250	2240
ZB19KQE	Q	10	4200	5100	6200			
		20	3850	4700	5700	6800	8150	
		30	3450	4200	5050	6100	7250	8600
		40	3000	3650	4400	5300	6300	7450
		50	2450	3000	3650	4400	5250	6200
		60		2350	2850	3400	4100	4900
	P	10	900	900	910			
		20	1140	1140	1140	1140		
		30	1430	1430	1430	1430	1410	1400
		40	1810	1810	1810	1800	1790	1780
		50	2290	2290	2290	2280	2260	2240
		60		2900	2890	2880	2860	2830
ZB21KQE	Q	10	5350	6550	7950			
		20	4900	6000	7250	8700	10400	
		30	4400	5350	6500	7750	9250	10950
		40	3800	4650	5600	6750	8050	9500
		50	3150	3850	4650	5600	6700	7950
		60		3000	3600	4350	5250	6250
	P	10	1150	1150	1150			
		20	1450	1450	1450	1450		
		30	1830	1830	1820	1820	1810	1800
		40	2310	2310	2300	2290	2280	2260
		50	2920	2920	2910	2900	2880	2860
		60		3690	3680	3660	3640	3610
ZB26KQE	Q	10	5950	7300	8900			
		20	5350	6600	8050	9800	11750	
		30	4700	5800	7100	8650	10400	12450
		40	3950	4900	6050	7400	8950	10750
		50	3100	3900	4900	6000	7350	8900
		60		2800	3600	4500	5650	6950
	P	10	1490	1470	1440			
		20	1880	1850	1810	1770	1730	
		30	2380	2330	2280	2230	2160	2100
		40	3000	2950	2880	2810	2720	2630
		50	3800	3730	3640	3550	3440	3320
		60		4710	4600	4480	4350	4200
ZB29KQE	Q	10	7100	8700	10600			
		20	6450	7900	9600	11550	13800	
		30	5700	7050	8550	10300	12250	14500
		40	4900	6050	7400	8900	10650	12550
		50	4000	5000	6150	7400	8850	10500
		60		3800	4750	5800	7000	8300
	P	10	1630	1660	1700			
		20	1930	1960	1990	2020	2070	
		30	2330	2350	2370	2400	2440	2480
		40	2830	2850	2870	2890	2910	2950
		50	3440	3470	3480	3500	3520	3550
		60		4210	4240	4260	4270	4290

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R404A/R507

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB15KQE	Q	10	3650	4450	5450			
		20	3300	4050	4950	5950	7150	
		30	2900	3550	4350	5250	6300	8800
		40	2400	3000	3700	4450	5350	7450
		50	1850	2400	2950	3600	4300	6100
		60		1650	2150	2650	3250	4600
	P	10	780	750	700			
		20	1000	980	950	920	880	
		30	1270	1250	1230	1200	1170	1160
		40	1670	1630	1590	1550	1510	1490
		50	2260	2180	2100	2030	1970	1900
		60		2970	2840	2710	2610	2460
ZB19KQE	Q	10	4350	5350	6500			
		20	4000	4900	5900	7100	8500	
		30	3600	4350	5300	6350	7550	8950
		40	3100	3800	4600	5500	6550	7750
		50	2550	3150	3800	4600	5450	6500
		60		2450	2950	3550	4300	5100
	P	10	930	930	930			
		20	1170	1170	1170	1170	1170	
		30	1480	1480	1480	1470	1470	1460
		40	1870	1870	1860	1860	1840	1830
		50	2360	2360	2360	2350	2330	2310
		60		2990	2980	2960	2940	2920
ZB21KQE	Q	10	5250	6400	7800			
		20	4800	5850	7100	8550	10200	
		30	4300	5250	6350	7600	9050	10750
		40	3700	4550	5500	6600	7850	9300
		50	3100	3750	4550	5500	6550	7750
		60		2900	3550	4300	5150	6100
	P	10	1110	1110	1120			
		20	1400	1400	1400	1400	1400	
		30	1770	1770	1770	1760	1750	1750
		40	2240	2240	2230	2220	2210	2190
		50	2830	2830	2820	2810	2790	2770
		60		3580	3570	3550	3530	3490
ZB26KQE	Q	10	6100	7500	9100			
		20	5600	6850	8300	9950	11900	
		30	5000	6100	7400	8900	10600	12550
		40	4350	5300	6400	7700	9200	10900
		50	3600	4400	5350	6400	7650	9100
		60		3400	4150	5000	6000	7150
	P	10	1300	1300	1310			
		20	1640	1640	1640	1640	1640	
		30	2070	2070	2070	2060	2050	2040
		40	2610	2610	2610	2600	2580	2560
		50	3310	3310	3300	3280	3260	3240
		60		4180	4170	4150	4120	4090
ZB29KQE	Q	10	7100	8700	10550			
		20	6500	7950	9600	11550	13800	
		30	5800	7100	8600	10300	12300	14550
		40	5050	6150	7450	8950	10650	12600
		50	4150	5100	6200	7450	8900	10550
		60		3950	4800	5800	6950	8300
	P	10	1470	1480	1480			
		20	1860	1860	1860	1860	1860	
		30	2340	2350	2340	2340	2330	2310
		40	2960	2960	2960	2950	2930	2910
		50	3750	3750	3740	3730	3700	3670
		60		4750	4730	4710	4680	4630

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R404A/R507

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB38KQE	Q	10	8950	10950	13300			
		20	8200	10000	12150	14600	17400	
		30	7350	8950	10850	13000	15500	18350
		40	6350	7750	9400	11300	13450	15900
		50	5250	6450	7800	9400	11200	13300
		60		4950	6050	7300	8750	10450
	P	10	1860	1870	1870			
		20	2350	2350	2350	2350	2350	
		30	2960	2960	2960	2950	2940	2920
		40	3740	3740	3730	3720	3700	3670
		50	4740	4740	4720	4700	4670	4630
		60	0	5990	5970	5940	5900	5850
ZB45KQE	Q	10	10450	12800	15550			
		20	9600	11750	14200	17100	20400	
		30	8600	10500	12700	15250	18150	21500
		40	7450	9100	11000	13200	15750	18650
		50	6150	7550	9150	11000	13100	15550
		60		5800	7100	8550	10250	12200
	P	10	2110	2110	2120			
		20	2660	2660	2660	2660	2660	
		30	3350	3350	3350	3340	3320	3310
		40	4240	4240	4230	4210	4190	4150
		50	5360	5360	5350	5320	5290	5240
		60		6780	6760	6730	6680	6620
ZB48KQE	Q	10	11500	14100	17100			
		20	10550	12900	15650	18800	22400	
		30	9450	11550	13950	16750	20000	23650
		40	8150	10000	12100	14500	17300	20500
		50	6750	8300	10050	12050	14400	17100
		60		6400	7800	9400	11300	13450
	P	10	2320	2320	2330			
		20	2920	2930	2930	2930	2920	
		30	3690	3690	3680	3670	3660	3640
		40	4660	4660	4650	4630	4600	4570
		50	5900	5900	5880	5860	5820	5770
		60		7460	7440	7400	7350	7280
ZB58KQE	Q	10	13750	16750	20300			
		20	12450	15250	18500	22250	26600	
		30	11100	13650	16600	19950	23800	28200
		40	9450	11850	14500	17450	20800	24600
		50	7400	9650	12000	14600	17500	20700
		60		6850	9000	11250	13700	16350
	P	10	3000	3080	3140			
		20	3640	3730	3820	3870	3870	
		30	4480	4540	4620	4690	4730	4710
		40	5630	5630	5670	5720	5770	5770
		50	7210	7120	7080	7090	7100	7100
		60		9130	8980	8900	8850	8800
ZB66KQE	Q	10	15700	19200	23350			
		20	14300	17450	21150	25450	30400	
		30	12750	15550	18800	22550	26900	31900
		40	11050	13500	16350	19550	23250	27500
		50	9100	11250	13650	16350	19450	22950
		60		8650	10650	12850	15350	18150
	P	10	3370	3450	3550			
		20	4100	4170	4260	4370	4510	
		30	5030	5090	5160	5250	5350	5480
		40	6240	6290	6340	6390	6460	6540
		50	7830	7850	7880	7900	7920	7950
		60		9890	9870	9850	9830	9800

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R404A/R507

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB76KQE	Q	10	18400	22400	27150			
		20	16700	20350	24700	29700	35450	
		30	14900	18250	22150	26600	31700	44000
		40	12900	15900	19350	23250	27650	38300
		50	10600	13250	16200	19500	23250	32200
		60		10050	12550	15250	18300	25550
	P	10	3930	4030	4110			
		20	4750	4870	4980	5070	5130	
		30	5820	5930	6030	6130	6220	6300
		40	7230	7310	7390	7480	7560	7650
		50	9100	9120	9160	9210	9260	9330
		60		11480	11440	11430	11430	11420
ZB95KQE	Q	10	22750	27700	33700			
		20	20800	25300	30500	36700	43900	
		30	18550	22700	27400	32750	38950	54500
		40	15600	19600	23850	28550	33900	47050
		50		15500	19500	23750	28350	39400
		60			13950	17850	21900	31150
	P	10	4880	5050	5220			
		20	5980	6120	6290	6450	6590	
		30	7440	7540	7670	7810	7940	8040
		40	9400	9430	9500	9590	9690	9780
		50		11940	11920	11940	11980	12020
		60			15070	14990	14950	14920
ZB114KQE	Q	10	27350	33300	40300			
		20	24850	30350	36700	44050	52450	
		30	21900	27000	32750	39350	46800	55350
		40	18300	23050	28250	34100	40700	48200
		50		18250	23000	28200	33950	40450
		60			16750	21350	26350	31900
	P	10	5930	6080	6240			
		20	7240	7390	7540	7710	7880	
		30	8940	9050	9170	9310	9450	9610
		40	11220	11260	11310	11380	11470	11570
		50		14200	14150	14120	14110	14130
		60			17870	17710	17570	17460

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R134a

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1 & 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C							
		-15	-10	-5	0	5	10	15	
ZB15KQE	Q	30	1900	2400	3000	3700	4500	5400	
		35	1800	2300	2900	3500	4300	5200	
		45	1600	2000	2600	3200	3900	4700	5600
		55		1700	2200	2700	3400	4100	4900
		65			1800	2300	2900	3500	4200
		75				1900	2400	3000	3500
	P	30	800	800	800	800	800	800	
		35	800	800	800	900	900	900	
		45	1000	1000	1000	1100	1100	1100	1100
		55		1300	1300	1300	1300	1300	1300
		65			1600	1600	1600	1600	1600
		75				2000	2000	2000	2000
ZB19KQE	Q	30	2200	2800	3500	4300	5200	6300	
		35	2000	2700	3300	4100	5000	6000	
		45	1800	2300	3000	3700	4500	5400	6400
		55		2000	2500	3100	3900	4700	5700
		65			2100	2700	3300	4100	4900
		75				2200	2700	3400	4000
	P	30	900	900	900	900	900	900	
		35	1000	1000	1000	1000	1000	1000	
		45	1200	1200	1200	1200	1200	1200	1200
		55		1500	1500	1500	1500	1500	1500
		65			1800	1800	1900	1900	1900
		75				2300	2300	2300	2300
ZB21KQE	Q	30	2800	3500	4400	5400	6500	7900	
		35	2700	3300	4200	5100	6200	7500	
		45	2300	2900	3700	4600	5600	6800	8100
		55		2500	3200	4000	4900	6000	7200
		65			2700	3400	4200	5100	6200
		75				2700	3500	4300	5100
	P	30	1100	1100	1100	1100	1100	1100	
		35	1200	1200	1200	1200	1200	1200	
		45	1500	1500	1500	1500	1500	1500	1500
		55		1800	1800	1800	1900	1900	1900
		65			2200	2300	2300	2300	2300
		75				2800	2800	2800	2900
ZB26KQE	Q	30	3200	4100	5100	6200	7600	9100	
		35	3000	3900	4800	5900	7200	8700	
		45	2600	3300	4300	5300	6500	7800	9400
		55		2900	3700	4600	5700	6900	8300
		65			3100	3900	4900	5900	7100
		75				3200	4000	5000	5900
	P	30	1200	1200	1200	1200	1200	1300	
		35	1300	1300	1400	1400	1400	1400	
		45	1700	1700	1700	1700	1700	1700	1700
		55		2100	2100	2100	2100	2100	2100
		65			2600	2600	2600	2600	2600
		75				3200	3200	3200	3300
ZB29KQE	Q	30	3850	4750	5900	7200	8750	10500	
		35	3500	4500	5600	6850	8300	10050	
		45	3050	3900	5000	6100	7450	9000	10100
		55		3300	4200	5250	6550	7950	8950
		65			4000	4450	5550	6800	7650
		75				3600	4550	5600	6250
	P	30	1370	1380	1390	1400	1410	1420	
		35	1540	1550	1560	1570	1580	1590	
		45	1940	1940	1950	1960	1970	1980	1990
		55		2420	2430	2440	2440	2450	2460
		65			3020	3020	3030	3040	3050
		75				3750	3760	3770	3770

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R134a

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1 & 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C							
		-15	-10	-5	0	5	10	15	
ZB38KQE	Q	30	4700	5900	7400	9100	11100	13300	
		35	4300	5600	7000	8600	10500	12700	
		45	3800	4900	6300	7800	9400	11400	13700
		55		4200	5400	6700	8300	10100	12100
		65			4600	5700	7100	8700	10400
		75				4600	5800	7200	8900
	P	30	1700	1700	1700	1800	1800	1800	
		35	1900	1900	1900	2000	2000	2000	
		45	2300	2400	2400	2400	2400	2500	2500
		55		3000	3000	3000	3000	3000	3100
		65			3700	3700	3700	3800	3800
		75				4700	4700	4700	4700
ZB45KQE	Q	30	5700	7100	8900	10900	13300	15900	
		35	5200	6800	8500	10400	12700	15200	
		45	4500	5800	7500	9300	11400	13700	16300
		55		5000	6300	8000	10000	12100	14400
		65			5300	6700	8400	10300	12300
		75				5400	6800	8500	10100
	P	30	2000	2000	2000	2000	2000	2000	
		35	2200	2200	2200	2200	2300	2300	
		45	2700	2700	2800	2800	2800	2800	2800
		55		3400	3400	3500	3500	3500	3500
		65			4300	4300	4300	4400	4400
		75				5400	5400	5400	5400
ZB48KQE	Q	30	6400	8050	9900	12150	14700	17600	
		35	5900	7650	9450	11550	14000	16900	
		45	5200	6600	8450	10350	12550	15100	17300
		55		5700	7200	8950	11050	13350	15250
		65			6050	7600	9450	11450	13100
		75				6200	7800	9600	10850
	P	30	2280	2290	2300	2310	2330	2370	
		35	2540	2560	2570	2590	2610	2650	
		45	3170	3190	3210	3220	3250	3290	3360
		55		4000	4010	4020	4040	4080	4150
		65			5020	5030	5040	5050	5120
		75				6280	6290	6300	6340
ZB58KQE	Q	30	7450	9200	11200	13400	15850	18600	
		35	6250	8700	10600	12700	15100	17650	
		45	5400	6900	9350	11300	13500	15750	18300
		55		5900	7450	9300	11650	13750	16000
		65			6150	7750	9650	11600	13500
		75				6100	7700	9550	10900
	P	30	2690	2710	2760	2820	2880	2910	
		35	3010	3030	3070	3130	3180	3190	
		45	3720	3750	3800	3850	3890	3880	3820
		55		4590	4660	4720	4760	4750	4670
		65			5640	5730	5790	5790	5710
		75				6880	6970	7000	6940
ZB66KQE	Q	30	8550	10500	12750	15300	18150	21200	
		35	7150	9950	12100	14550	17250	20200	
		45	6200	7900	10700	12900	15450	18050	20900
		55		6700	8500	10600	13350	15700	18250
		65			7000	8850	11000	13250	15400
		75				7000	8800	10950	12450
	P	30	3000	3020	3080	3150	3210	3250	
		35	3360	3380	3430	3490	3540	3560	
		45	4150	4190	4250	4300	4340	4340	4270
		55		5120	5210	5280	5320	5310	5220
		65			6300	6410	6470	6470	6390
		75				7690	7790	7820	7760

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R134a

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1 & 3-Phase

50 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-15	-10	-5	0	5	10	15
ZB76KQE	Q	30	9800	12050	14650	17600	20850	24350
		35	8150	11400	13900	16700	19800	23150
		45	7100	9000	12250	14800	17700	20650
		55		7700	9700	12150	15250	17950
		65			8050	10100	12550	15150
		75			8000	10050	12500	14300
	P	30	3520	3550	3610	3700	3770	3800
		35	3940	3960	4020	4100	4150	4160
		45	4870	4900	4970	5040	5080	5070
		55		5990	6080	6160	6200	6190
		65			7350	7460	7540	7540
		75				8950	9070	9110

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB15KQ	Q	15	5800	6250	7450	8850		
		20	5500	5900	7050	8400	9900	
		30	4300	4650	5650	6750	8050	10400
		40	3900	4250	5150	6200	7350	9550
		50	3200	3500	4600	5550	6650	8650
		55		3150	3850	4850	5750	7350
		60			3400	4150	5100	6050
		65				3550	4450	5250
	P	15	1060	1060	1070	1060		
		20	1190	1190	1190	1190	1180	
		30	1370	1360	1360	1370	1390	1400
		40	1660	1660	1650	1660	1670	1660
		50	2050	2040	2030	2030	2030	2010
		55		2590	2590	2590	2580	2570
		60			2890	2890	2880	2870
		65				3220	3210	3190
ZB19KQ	Q	15	5600	6050	7300	8700		
		20	5350	5800	7050	8400	10000	
		30	4950	5350	6500	7800	9250	11950
		40	4500	4900	5950	7100	8500	10100
		50	3650	4050	5300	6400	7650	9150
		55		3750	4700	6000	7200	8600
		60			4350	5400	6750	8100
		65				5000	6250	7500
	P	15	1250	1250	1260	1280		
		20	1370	1370	1380	1400	1420	
		30	1660	1650	1650	1670	1680	1690
		40	2020	2010	2000	2010	2020	2020
		50	2480	2470	2460	2460	2460	2450
		55		2750	2730	2730	2720	2710
		60			3050	3040	3030	3010
		65				3390	3370	3340
ZB21KQ	Q	15	7050	7600	9200	11000		
		20	6750	7350	8850	10600	12600	
		30	6200	6750	8200	9800	11700	13850
		40	5650	6150	7500	9000	10700	12750
		50	4600	5100	6700	8100	9650	11500
		55		4750	5950	7600	9100	10850
		60			5500	6800	8500	10200
		65				6300	7900	9450
	P	15	1590	1590	1600	1630		
		20	1750	1740	1750	1780	1810	
		30	2110	2100	2100	2120	2140	2160
		40	2570	2560	2550	2560	2570	2570
		50	3160	3150	3130	3130	3130	3120
		55		3500	3480	3470	3470	3450
		60			3880	3870	3850	3830
		65				4310	4290	4260

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB26KQ	Q	15	8100	8800	10600	12700		
		20	7800	8450	10250	12250	14550	
		30	7200	7800	9450	11350	13500	16000
		40	6500	7100	8650	10350	12350	14700
		50	5350	5850	7750	9350	11150	13300
		55		5450	6850	8750	10500	12550
		60			6350	7850	9800	11750
		65				7250	9100	10950
	P	15	1820	1820	1830	1860		
		20	2000	1990	2000	2030	2060	
		30	2410	2400	2400	2420	2450	2460
		40	2930	2920	2910	2920	2930	2940
		50	3610	3590	3570	3570	3570	3560
		55		4000	3970	3970	3960	3940
		60			4430	4410	4400	4370
		65				4920	4900	4860
ZB29KQ	Q	15	9500	10300	12400	14550		
		20	9150	10000	12050	14250	16650	
		30	8450	9250	11250	13400	15800	18550
		40	7700	8400	10250	12250	14550	17300
		50	6500	7100	9250	11050	13150	15700
		55		6800	8300	10400	12400	14800
		60			7850	9450	11600	13900
		65				8850	10850	12950
	P	15	2100	2120	2180	2250		
		20	2280	2300	2350	2420	2480	
		30	2710	2720	2770	2820	2860	2900
		40	3220	3240	3290	3330	3370	3400
		50	3860	3880	3940	3990	4030	4060
		55		4260	4320	4380	4420	4450
		60			4740	4810	4860	4900
		65				5290	5350	5390
ZB38KQ	Q	15	12000	12700	15150	18100		
		20	11400	12100	14450	17400	20400	
		30	10400	11000	13200	16100	19100	21900
		40	9450	9950	12000	14750	17750	20550
		50	7700	8150	10550	13150	16100	18950
		55		7450	9150	12250	15100	17950
		60			8250	10750	13950	16750
		65				9550	12650	15400
	P	15	2500	2540	2660	2780		
		20	2720	2750	2860	2970	3060	
		30	3270	3290	3360	3460	3530	3560
		40	3970	3980	4030	4120	4180	4210
		50	4830	4840	4890	4970	5040	5070
		55		5340	5390	5470	5540	5580
		60			5940	6030	6110	6160
		65				6640	6730	6790

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB15KQ	Q	15	4950	5350	6400	7600		
		20	4750	5150	6200	7400	8750	
		30	4300	4650	5650	6750	8000	9450
		40	3850	4200	5100	6150	7350	8700
		50	3150	3450	4550	5500	6550	7800
		55		3350	4200	5350	6400	7600
		60			3900	4850	6000	7100
		65				4500	5600	6650
	P	15	930	940	980	1050		
		20	1040	1050	1080	1130	1200	
		30	1310	1310	1320	1350	1380	1410
		40	1630	1620	1640	1660	1690	1710
		50	2020	2020	2040	2060	2090	2100
		55		2160	2190	2220	2240	2260
		60			2420	2460	2480	2500
ZB19KQ	Q	15	5550	6050	7250	8650		
		20	5350	5800	7000	8400	9950	
		30	4900	5350	6500	7750	9250	10950
		40	4450	4850	5900	7100	8500	10050
		50	3650	4000	5300	6350	7650	9100
		55		3700	4650	5950	7150	8550
		60			4300	5350	6700	8000
		65				4900	6150	7400
	P	15	1200	1200	1200	1210		
		20	1340	1340	1340	1370	1390	
		30	1640	1640	1650	1670	1700	1720
		40	2010	2010	2010	2020	2040	2050
		50	2520	2510	2490	2480	2480	2470
		55		2830	2800	2770	2750	2730
		60			3150	3110	3070	3030
ZB21KQ	Q	15	7150	7750	9300	11100		
		20	6900	7500	9050	10750	12700	
		30	6400	6900	8400	10050	11900	13950
		40	5800	6300	7650	9200	10950	12900
		50	4750	5200	6850	8250	9850	11650
		55		4900	6100	7800	9300	11000
		60			5700	7000	8700	10350
		65				6500	8100	9650
	P	15	1350	1360	1430	1510		
		20	1500	1520	1570	1640	1740	
		30	1870	1880	1910	1960	2020	2100
		40	2300	2310	2340	2380	2420	2470
		50	2810	2830	2870	2910	2940	2970
		55		3130	3180	3220	3250	3280
		60			3510	3560	3600	3620
		65				3940	3980	4000

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB26KQ	Q	15	8400	9050	10950	13050		
		20	8050	8700	10500	12550	14950	
		30	7400	8000	9700	11600	13800	16300
		40	6700	7300	8850	10600	12650	14950
		50	5500	6000	7950	9550	11400	13500
		55		5600	7050	9000	10750	12700
		60			6500	8100	10050	11900
		65				7450	9300	11050
	P	15	1500	1490	1510	1580		
		20	1690	1680	1700	1760	1830	
		30	2140	2120	2130	2190	2260	2280
		40	2700	2670	2680	2730	2780	2800
		50	3410	3380	3380	3410	3460	3460
		55		3810	3790	3820	3860	3850
		60			4260	4280	4310	4300
ZB29KQ	Q	15	9850	10650	12800	15150		
		20	9450	10250	12400	14750	17350	
		30	8650	9450	11450	13700	16250	19150
		40	7800	8500	10350	12450	14850	17600
		50	6350	7000	9200	11100	13300	15800
		55		6550	8150	10400	12450	14850
		60			7550	9300	11600	13850
		65				8600	10700	12800
	P	15	1760	1760	1800	1880		
		20	1980	1980	2010	2080	2160	
		30	2470	2460	2490	2540	2610	2660
		40	3060	3060	3090	3140	3190	3220
		50	3800	3810	3840	3890	3930	3950
		55		4240	4280	4340	4380	4390
		60			4780	4840	4880	4890
ZB38KQ	Q	15	11950	12900	15500	18450		
		20	11550	12500	15050	17950	21200	
		30	10650	11550	14000	16750	19850	23300
		40	9650	10500	12750	15350	18250	21500
		50	7900	8700	11450	13800	16450	19450
		55		8150	10150	13000	15500	18400
		60			9450	11700	14550	17250
		65				10850	13550	16100
	P	15	2260	2290	2400	2540		
		20	2530	2550	2630	2750	2920	
		30	3140	3150	3210	3290	3400	3530
		40	3860	3880	3940	4000	4070	4150
		50	4730	4760	4830	4890	4940	4990
		55		5260	5340	5410	5460	5510
		60			5900	5980	6040	6090
		65				6610	6680	6730

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB45KQ	Q	15	14450	15550	18650	22200		
		20	13900	15000	18050	21500	25400	
		30	12800	13850	16700	20000	23750	27850
		40	11600	12550	15250	18350	21850	25700
		50	9450	10300	13600	16450	19650	23300
		55		9550	11950	15400	18500	21950
		60			11050	13750	17250	20550
	P	65				12650	15900	19050
		15	2560	2580	2670	2840		
		20	2880	2890	2970	3100	3290	
		30	3610	3620	3660	3750	3870	4020
		40	4450	4470	4520	4590	4670	4750
		50	5450	5480	5570	5640	5700	5750
		55		6060	6170	6260	6320	6360
ZB48KQ	Q	60			6830	6940	7010	7050
		65				7690	7780	7820
		15	15900	17100	20500	24400		
		20	15300	16500	19850	23650	27950	
		30	14100	15250	18400	22000	26100	30650
		40	12750	13800	16750	20150	24000	28300
		50	10350	11350	14950	18050	21600	25600
	P	55		10500	13150	16950	20300	24150
		60			12150	15150	18950	22600
		65				13900	17500	20950
		15	2810	2830	2940	3130		
		20	3170	3180	3270	3410	3620	
		30	3970	3980	4030	4130	4260	4420
		40	4900	4920	4970	5050	5130	5230
ZB58KQ	Q	50	5990	6030	6120	6210	6280	6330
		55		6660	6790	6880	6960	7000
		60			7510	7630	7720	7760
		65				8450	8560	8610
		15	18600	20050	24150	28800		
		20	17850	19300	23300	27900	33150	
		30	16300	17700	21550	25950	30950	36600
	P	40	14650	15950	19600	23750	28450	33750
		50	11650	12900	17350	21250	25600	30550
		55		11800	15200	19800	24000	28750
		60			13850	17650	22300	26850
		65				16000	20500	24800
		15	3500	3550	3680	3860		
		20	3940	3970	4070	4220	4420	
		30	4900	4920	4970	5050	5170	5350
	P	40	6040	6040	6070	6100	6170	6270
		50	7420	7430	7440	7450	7470	7530
		55		8230	8250	8250	8270	8300
		60			9150	9160	9160	9180
		65				10170	10170	10180

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R22

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB66KQ	Q	15	20450	22150	26850	32300		
		20	19800	21450	26000	31300	37350	
		30	18400	19950	24200	29150	34750	41200
		40	16850	18300	22250	26800	32000	37850
		50	13800	15150	20050	24200	28950	34300
		55		14150	17800	22850	27300	32400
		60			16550	20600	25650	30450
		65				19100	23850	28400
	P	15	3890	3940	4080	4250		
		20	4360	4400	4530	4680	4870	
		30	5380	5420	5530	5660	5800	5980
		40	6590	6630	6730	6840	6950	7080
		50	8070	8120	8220	8310	8400	8500
		55		8990	9090	9180	9260	9340
		60			10070	10150	10220	10290
		65				11240	11300	11370
ZB76KQ	Q	15	24500	26550	32200	38700		
		20	23750	25700	31150	37350	44400	
		30	22150	23950	28950	34650	41100	48350
		40	20250	21900	26550	31800	37700	44300
		50	16500	18100	23850	28700	34100	40150
		55		16800	21100	27000	32200	37950
		60			19500	24300	30200	35700
		65				22450	28100	33350
	P	15	4810	4870	5040	5250		
		20	5250	5310	5460	5640	5870	
		30	6360	6410	6530	6670	6850	7090
		40	7820	7860	7950	8060	8200	8390
		50	9680	9710	9790	9860	9960	10100
		55		10800	10870	10930	11010	11130
		60			12070	12120	12190	12280
		65				13440	13490	13560
ZB88KQ	Q	15	33400	36250	43650	51200		
		20	30200	32900	40050	47400	54650	
		30	25400	27800	34350	41350	48450	55300
		40	22150	24200	30050	36550	43400	50250
		50	18000	19700	26350	32300	38800	45500
		55		18350	23100	30100	36400	43000
		60			21150	26750	33850	40300
		65				24200	30950	37300
	P	15	5380	5450	5680	5970		
		20	5930	6000	6190	6450	6790	
		30	7210	7270	7420	7610	7860	8200
		40	8790	8850	8980	9130	9310	9560
		50	10780	10840	10970	11090	11220	11400
		55		12020	12160	12270	12390	12530
		60			13480	13590	13700	13820
		65				15070	15170	15270

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series



Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-12	-10	-5	0	5	10	12.5
ZB95KQ	Q	15	30650	33150	40000	47850		
		20	29550	31950	38650	46250	54850	
		30	26950	29300	35650	42800	50800	59750
		40	23850	26050	32100	38850	46400	54700
		50			28050	34400	41450	49250
		55				32000	38800	46300
		60					36000	43250
		65					33000	40000
	P	15	5940	6050	6380	6840		
		20	6510	6590	6850	7220	7710	
		30	8020	8070	8230	8450	8760	9170
		40	9980	10030	10160	10300	10490	10740
		50			12590	12720	12860	13020
		55				14130	14270	14400
		60					15820	15950
		65					17500	17640
ZB114KQ	Q	15	36600	39800	49050	60300		
		20	35050	38050	46550	56850	69200	
		30	32150	34850	42350	51100	61500	73800
		40	28800	31450	38400	46200	55200	65600
		50			33850	41300	49400	58500
		55				38500	46400	55050
		60					43200	51550
		65					39650	47850
	P	15	7290	7390	7740	8230		
		20	7990	8080	8380	8790	9360	
		30	9700	9760	9970	10270	10690	11250
		40	11880	11930	12080	12290	12580	12990
		50			14780	14930	15130	15410
		55				16500	16670	16890
		60					18400	18580
		65					20350	20490

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB15KQE	Q	10	4400	5400	6550			
		20	4000	4900	5900	7050	8400	
		30	3550	4350	5250	6300	7450	8800
		40	3100	3750	4550	5450	6450	7600
		50	2550	3150	3800	4550	5400	6400
		60		2450	3800	3600	4300	5100
	P	10	940	950	950			
		20	1170	1180	1190	1190	1190	
		30	1470	1480	1490	1490	1490	1480
		40	1840	1850	1860	1860	1860	1850
		50	2310	2320	2320	2320	2320	2320
		60		2890	2320	2890	2880	2870
ZB19KQE	Q	10	5500	6750	8150			
		20	5000	6100	7350	8850	10500	
		30	4450	5400	6550	7850	9300	10950
		40	3850	4700	5650	6800	8050	9500
		50	3200	3900	4750	5700	6750	8000
		60		3050	3700	4500	5350	6400
	P	10	1170	1180	1190			
		20	1470	1480	1490	1490	1480	
		30	1840	1850	1860	1860	1860	1850
		40	2300	2310	2320	2330	2330	2320
		50	2890	2890	2900	2900	2900	2890
		60		3610	3610	3610	3600	3580
ZB21KQE	Q	10	6600	8050	9750			
		20	5950	7300	8800	10550	12550	
		30	5300	6450	7800	9350	11100	13100
		40	4600	5600	6800	8100	9650	11150
		50	3800	4650	5650	6800	8100	9550
		60		3650	4450	5350	6400	7650
	P	10	1410	1420	1430			
		20	1760	1770	1780	1790	1780	
		30	2200	2220	2230	2230	2230	2220
		40	2760	2780	2790	2790	2790	2850
		50	3460	3470	3480	3480	3480	3470
		60		4330	4330	4330	4320	4300
ZB26KQE	Q	10	7700	9400	11400			
		20	6950	8500	10300	12350	14650	
		30	6200	7550	9150	10950	13000	15300
		40	5350	6550	7900	9500	11250	13300
		50	4450	5450	6600	7950	9450	11150
		60		4250	5200	6250	7500	8900
	P	10	1640	1660	1660			
		20	2050	2070	2080	2080	2080	
		30	2570	2590	2600	2610	2600	2590
		40	3230	3240	3250	3260	3260	3240
		50	4040	4050	4060	4070	4060	4050
		60		5050	5060	5060	5050	5040

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R404A/R507

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB29KQE	Q	10	8600	10550	12800			
		20	7800	9550	11600	13950	16650	
		30	6900	8500	10350	12450	14800	17500
		40	5900	7350	8950	10750	12850	15150
		50	4800	6050	7400	8950	10700	12700
		60		4600	5750	7000	8450	10050
	P	10	2070	2110	2160			
		20	2460	2500	2530	2580	2640	
		30	2970	3000	3030	3060	3110	3160
		40	3610	3630	3660	3680	3720	3760
		50	4390	4420	4440	4470	4490	4520
		60		5370	5400	5430	5450	5470
ZB38KQE	Q	10	10900	13200	15800			
		20	9900	12100	14600	17400	20450	
		30	8700	10750	13050	15650	18500	21650
		40	7350	9150	11250	13550	16150	19000
		50	6000	7500	9250	11200	13450	16000
		60		5800	7150	8750	10550	12600
	P	10	2550	2630	2750			
		20	3040	3090	3160	3270	3430	
		30	3680	3720	3770	3840	3950	4100
		40	4480	4520	4560	4620	4690	4790
		50	5440	5510	5560	5600	5660	5730
		60		6670	6740	6800	6860	6920

- * Max return gas temperature of 18.3°C in non shaded region
- * Max Suction superheat of 11K only in shaded region
- * Sub cooling 0K

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB15KQE	Q	10	4400	5400	6550			
		20	3950	4850	5900	7100	8550	
		30	3500	4300	5250	6300	7550	8950
		40	2950	3650	4500	5400	6500	7700
		50	2350	3000	3700	4450	5350	6400
		60		2200	2800	3450	4150	5000
	P	10	950	930	910			
		20	1210	1200	1190	1160	1140	
		30	1530	1530	1510	1500	1470	1440
		40	1950	1940	1920	1910	1880	1850
		50	2480	2470	2450	2420	2390	2360
		60		3140	3110	3070	3040	3000
ZB19KQE	Q	10	5450	6700	8100			
		20	4950	6050	7300	8750	10400	
		30	4400	5350	6500	7750	9250	10850
		40	3800	4650	5650	6750	8000	9450
		50	3150	3900	4700	5650	6700	7950
		60		3000	3700	4450	5350	6350
	P	10	1130	1140	1140			
		20	1410	1420	1430	1430	1430	
		30	1760	1780	1780	1790	1790	1780
		40	2210	2220	2230	2240	2230	2230
		50	2770	2780	2790	2790	2790	2780
		60		3470	3470	3470	3470	3460
ZB21KQE	Q	10	6550	8050	9750			
		20	5950	7250	8750	10500	12500	
		30	5300	6450	7800	9350	11100	13050
		40	4600	5600	6750	8100	9600	11350
		50	3800	4650	5650	6750	8050	9500
		60		3600	4400	5350	6400	7600
	P	10	1350	1360	1370			
		20	1690	1700	1710	1720	1710	
		30	2120	2130	2140	2150	2140	2130
		40	2660	2670	2680	2680	2680	2670
		50	3330	3340	3340	3350	3340	3330
		60		4160	4160	4160	4160	4150
ZB26KQE	Q	10	7650	9350	11350			
		20	6900	8450	10200	12250	14550	
		30	6150	7500	9050	10850	12900	15200
		40	5350	6500	7850	9400	11200	13200
		50	4400	5400	6550	7900	9400	11100
		60		4200	5150	6200	7450	8850
	P	10	1580	1590	1600			
		20	1980	1990	2000	2010	2000	
		30	2470	2490	2500	2510	2500	2490
		40	3100	3120	3130	3130	3130	3120
		50	3890	3900	3910	3910	3910	3900
		60		4860	4870	4870	4860	4850
ZB29KQE	Q	10	8700	10600	12850			
		20	7850	9600	11600	13900	16550	
		30	7000	8500	10300	12350	14650	17250
		40	6050	7400	8950	10700	12700	15000
		50	5000	6150	7450	8950	10650	12600
		60		4750	5850	7050	8450	10050
	P	10	1760	1770	1780			
		20	2200	2220	2230	2230	2230	
		30	2760	2770	2790	2790	2790	2770
		40	3460	3470	3480	3490	3490	3480
		50	4330	4340	4350	4360	4350	4340
		60		5420	5420	5420	5410	5400

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R404A/R507

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB38KQE	Q	10	10950	13400	16200			
		20	9900	12100	14600	17550	20850	
		30	8800	10750	13000	15550	18450	25450
		40	7600	9300	11250	13500	16000	22100
		50	6300	7750	9400	11250	13400	18600
		60		6000	7350	8900	10650	14950
	P	10	2220	2240	2250			
		20	2780	2800	2820	2820	2810	
		30	3480	3500	3520	3530	3520	3500
		40	4360	4380	4400	4410	4400	4390
		50	5470	5480	5500	5500	5500	5480
		60		6840	6840	6840	6820	6790
ZB45KQE	Q	10	13000	15900	19250			
		20	11750	14350	17350	20800	24750	
		30	10450	12750	15400	18450	21900	25850
		40	9050	11050	13350	16000	19000	22400
		50	7500	9200	11150	13400	15950	18850
		60		7150	8750	10550	12650	15050
	P	10	2590	2620	2630			
		20	3240	3270	3290	3290	3290	
		30	4060	4090	4110	4120	4110	4090
		40	5090	5120	5140	5150	5140	5120
		50	6380	6400	6420	6420	6420	6400
		60		7980	7990	7990	7980	7960
ZB48KQE	Q	10	14300	17450	21150			
		20	12900	15750	19100	22900	27200	
		30	11500	14000	16950	20300	24100	28400
		40	9950	12150	14700	17600	20900	24650
		50	8250	10100	12250	14700	17500	20700
		60		7850	9600	11600	13900	16550
	P	10	2850	2880	2890			
		20	3570	3600	3620	3620	3610	
		30	4470	4500	4520	4530	4520	4500
		40	5600	5630	5650	5660	5660	5640
		50	7020	7040	7060	7060	7060	7040
		60		8780	8790	8790	8780	8760
ZB58KQE	Q	10	16500	20100	24400			
		20	15100	18350	22200	26700	31950	
		30	13550	16550	19950	23900	28500	33850
		40	11600	14400	17450	20950	24900	29500
		50	9050	11750	14550	17600	21000	24950
		60		8350	10950	13650	16600	19900
	P	10	3680	3800	3910			
		20	4460	4580	4690	4790	4840	
		30	5480	5570	5680	5770	5840	5850
		40	6780	6850	6930	7020	7080	7110
		50	8460	8480	8530	8590	8640	8670
		60		10530	10540	10570	10600	10610
ZB66KQE	Q	10	18950	23200	28200			
		20	17250	21050	25550	30750	36750	
		30	15400	18800	22750	27300	32500	38500
		40	13400	16350	19800	23700	28150	33250
		50	11150	13700	16600	19850	23550	27800
		60		10700	13100	15700	18650	22000
	P	10	4110	4250	4420			
		20	5020	5150	5310	5480	5650	
		30	6130	6260	6400	6550	6700	6840
		40	7520	7640	7770	7900	8020	8120
		50	9240	9350	9460	9570	9660	9740
		60		11440	11540	11620	11690	11740

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-20	-15	-10	-5	0	5	10
ZB76KQE	Q	10	22250	27100	32800			
		20	20200	24650	29850	35850	42800	
		30	18050	22050	26650	32000	38150	53100
		40	15850	19300	23300	27900	33200	46200
		50	13600	16450	19750	23550	27950	38850
		60		13500	16000	19000	22450	31150
	P	10	4800	4960	5150			
		20	5860	6000	6140	6290	6450	
		30	7170	7320	7460	7580	7690	7800
		40	8710	8910	9080	9210	9320	9400
		50	10450	10750	10990	11180	11310	11400
		60		12820	13170	13450	13650	13790
ZB95KQE	Q	10	27350	33350	40450			
		20	25000	30450	36850	44250	52800	
		30	22300	27300	33000	39550	47050	55700
		40	19150	23700	28750	34450	40950	48350
		50		19500	23950	28850	34350	40550
		60			18400	22500	27050	32100
	P	10	6180	6440	6750			
		20	7500	7720	7980	8260	8580	
		30	9240	9400	9600	9830	10080	10350
		40	11500	11610	11750	11910	12100	12290
		50		14430	14510	14610	14720	14840
		60			18010	18040	18080	18110
ZB114KQE	Q	10	32800	40150	48750			
		20	29800	36450	44200	53100	63300	
		30	26500	32550	39450	47350	56350	66550
		40	22750	28150	34250	41200	49000	57900
		50		23200	28500	34450	41150	48700
		60			21950	27000	32550	38800
	P	10	7490	7740	8000			
		20	9070	9330	9600	9860	10100	
		30	11050	11300	11560	11810	12040	12250
		40	13570	13790	14010	14240	14440	14620
		50		16940	17120	17290	17450	17580
		60			21010	21110	21210	21270

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R134a

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1 & 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C						
		-15	-10	-5	0	5	10	15
ZB15KQE	Q	30	2300	2900	3600	4450	5400	6500
		35	2200	2800	3500	4200	5200	6250
		45	1950	2400	3150	3850	4700	5650
		55		2050	2650	3250	4100	4950
		65			2200	2800	3500	4200
		75			2300	2900	3600	4200
	P	30	960	960	960	960	960	
		35	960	960	960	1080	1080	
		45	1200	1200	1200	1320	1320	1320
		55		1560	1560	1560	1560	1560
		65			1920	1920	1920	1920
		75			2400	2400	2400	2400
ZB19KQE	Q	30	2650	3400	4200	5200	6250	7600
		35	2400	3250	4000	4950	6000	7200
		45	2200	2800	3600	4450	5400	6500
		55		2400	3000	3750	4700	5650
		65			2550	3250	4000	4950
		75			2650	3250	4100	4800
	P	30	1080	1080	1080	1080	1080	
		35	1200	1200	1200	1200	1200	
		45	1440	1440	1440	1440	1440	1440
		55		1800	1800	1800	1800	1800
		65			2160	2160	2280	2280
		75			2760	2760	2760	2760
ZB21KQE	Q	30	3400	4200	5300	6500	7800	9500
		35	3250	4000	5050	6150	7450	9000
		45	2800	3500	4450	5550	6750	8200
		55		3000	3850	4800	5900	7200
		65			3250	4100	5050	6150
		75			3250	4200	5200	6150
	P	30	1320	1320	1320	1320	1320	
		35	1440	1440	1440	1440	1440	
		45	1800	1800	1800	1800	1800	1800
		55		2160	2160	2160	2280	2280
		65			2640	2760	2760	2760
		75			3360	3360	3360	3480
ZB26KQE	Q	30	3850	4950	6150	7450	9150	10950
		35	3600	4700	5800	7100	8650	10450
		45	3150	4000	5200	6400	7800	9400
		55		3500	4450	5550	6850	8300
		65			3750	4700	5900	7100
		75			3850	4800	6000	7100
	P	30	1440	1440	1440	1440	1440	1560
		35	1560	1560	1680	1680	1680	1680
		45	2040	2040	2040	2040	2040	2040
		55		2520	2520	2520	2520	2520
		65			3120	3120	3120	3120
		75			3840	3840	3840	3960
ZB29KQE	Q	30	4600	5700	7050	8650	10450	12600
		35	4150	5400	6700	8200	10000	12050
		45	3650	4650	5950	7350	8950	10800
		55		3950	5050	6300	7850	9500
		65			4750	5350	6650	8150
		75			4300	5450	6750	7500
	P	30	1640	1660	1670	1680	1690	1700
		35	1850	1860	1870	1880	1900	1910
		45	2330	2330	2340	2350	2360	2380
		55		2900	2920	2930	2930	2940
		65			3620	3620	3640	3650
		75			4500	4510	4520	4520

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

R134a

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1 & 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C							
		-15	-10	-5	0	5	10	15	
ZB38KQE	Q	30	5650	7100	8900	10950	13350	16000	
		35	5200	6750	8400	10350	12600	15250	
		45	4600	5900	7600	9400	11300	13700	16450
		55		5050	6500	8050	10000	12150	14550
		65			5550	6850	8550	10450	12500
		75				5550	7000	8650	10700
	P	30	2040	2040	2040	2160	2160	2160	
		35	2280	2280	2280	2400	2400	2400	
		45	2760	2880	2880	2880	2880	3000	3000
		55		3600	3600	3600	3600	3600	3720
		65			4440	4440	4440	4560	4560
		75				5640	5640	5640	5640
ZB45KQE	Q	30	6850	8550	10700	13100	16000	19100	
		35	6250	8200	10200	12500	15250	18250	
		45	5400	7000	9000	11200	13700	16450	19600
		55		6000	7600	9600	12000	14550	17300
		65			6400	8050	10100	12400	14800
		75				6500	8200	10200	12150
	P	30	2400	2400	2400	2400	2400	2400	
		35	2640	2640	2640	2640	2760	2760	
		45	3240	3240	3360	3360	3360	3360	3360
		55		4080	4080	4200	4200	4200	4200
		65			5160	5160	5160	5280	5280
		75				6480	6480	6480	6480
ZB48KQE	Q	30	7700	9650	11900	14550	17600	21150	
		35	7100	9150	11300	13850	16800	20250	
		45	6250	7950	10150	12450	15100	18150	20750
		55		6850	8650	10750	13300	16000	18300
		65			7250	9150	11300	13750	15750
		75				7450	9350	11500	13050
	P	30	2740	2750	2760	2770	2800	2840	
		35	3050	3070	3080	3110	3130	3180	
		45	3800	3830	3850	3860	3900	3950	4030
		55		4800	4810	4820	4850	4900	4980
		65			6020	6040	6050	6060	6140
		75				7540	7550	7560	7610
ZB58KQE	Q	30	8950	11050	13400	16100	19050	22300	
		35	7500	10450	12700	15250	18100	21200	
		45	6500	8250	11250	13550	16200	18900	21950
		55		7050	8900	11150	14000	16450	19150
		65			7350	9250	11550	13900	16200
		75				7300	9200	11500	13100
	P	30	3230	3250	3310	3390	3460	3500	
		35	3610	3630	3690	3760	3810	3830	
		45	4470	4500	4560	4630	4670	4660	4580
		55		5500	5590	5670	5710	5700	5610
		65			6760	6870	6940	6950	6860
		75				8250	8360	8390	8330
ZB66KQE	Q	30	10250	12600	15300	18400	21750	25450	
		35	8550	11900	14500	17450	20700	24250	
		45	7450	9450	12850	15500	18550	21650	25050
		55		8050	10150	12750	16000	18850	21900
		65			8400	10600	13200	15850	18500
		75				8400	10550	13100	14950
	P	30	3600	3630	3690	3780	3850	3900	
		35	4030	4050	4120	4190	4250	4270	
		45	4980	5030	5100	5170	5210	5200	5120
		55		6150	6250	6340	6380	6370	6270
		65			7560	7690	7770	7770	7670
		75				9220	9350	9390	9310

- * Max return gas temperature of 18.3°C in non shaded region
- * Max Suction superheat of 11K only in shaded region
- * Sub cooling 0K

ZB Series

R134a

Performance Data

Q=Capacity (Watts) P=Power input (Watts) 1 & 3-Phase

60 Hz

Model	Condensing Temperature °C	Evaporating Temperature °C							
		-15	-10	-5	0	5	10	15	
ZB76KQE	Q	30	11750	14450	17600	21100	25000	29200	
		35	9800	13650	16650	20000	23750	27800	
		45	8500	10800	14700	17750	21250	24800	28700
		55		9200	11650	14550	18300	21550	25050
		65			9650	12100	15100	18150	21200
		75				9600	12050	15000	17150
	P	30	4220	4250	4340	4440	4520	4560	
		35	4730	4750	4830	4920	4980	5000	
		45	5840	5890	5960	6040	6090	6080	5970
		55		7190	7290	7390	7450	7430	7300
	65			8820	8960	9040	9040	8930	
	75				10740	10880	10930	10840	

* Max return gas temperature of 18.3°C in non shaded region

* Max Suction superheat of 11K only in shaded region

* Sub cooling 0K

ZB Series

Technical Data

Model			ZB15KQ ZB15KQE	ZB19KQ ZB19KQE	ZB21KQ ZB21KQE	ZB26KQ ZB26KQE	ZB29KQ ZB29KQE	ZB38KQ ZB38KQE	ZB45KQ ZB45KQE
Motor type	50Hz	PFJ	PFJ	PFJ	PFJ	PFJ			
		TF5	TF5	TF5	TF5	TF5	TF5	TF5	
		TFD	TFD	TFD	TFD	TFD	TFD	TFD	
	60Hz	PFV	PFV	PFV	PFV	PFV			
		TF5	TF5	TF5	TF5	TF5	TF5	TF5	TF5
		TF7	TF7	TF7	TF7	TF7	TF7	TF7	TF7
		TFD	TFD	TFD	TFD	TFD	TFD	TFD	TFD
Displacement (M³/HR)		50Hz	5.9	6.8	8.6	9.9	11.4	14.4	17.1
		60Hz	7.1	8.2	10.4	12.0	13.8	17.3	20.6
LRA	50Hz	PFJ	58.0	61.0	82.0	97.0	114.0		
		TF5/TW5	56.0	70.0	83.0	95.0	98.0	139.0	172.0
		TFD	26.0	32.0	40.0	46.0	50.0	65.5	74.0
		PFV	61.0	72.5	95.0	109.0	137.0		
	60Hz	TF5/TW5	55.0	63.0	77.0	88.0	91.0	128.0	156.0
		TF7/TW7	27.0	30.0	39.0	41.0	54.0	64.0	70.0
		TFD	27.0	31.0	39.0	44.0	50.0	63.0	75.0
RLA	KQ	PFJ	11.4	12.9	16.4	17.1	19.3		
		PFV	13.6	15.0	18.4	20.4	22.1		
		TF5/TW5	8.9	10.0	11.4	13.9	16.4	20.7	20.7
		TF7/TW7	5.0	5.8	7.5	7.3	9.3	10.7	10.7
		TFD	4.3	4.3	5.7	7.1	7.9	10.0	11.5
	KQE	PFJ	13.2	14.6	15.4	18.9	20.0		
		PFV	15.7	17.1	20.7	23.6	25.0		
		TF5/TW5	8.9	10.0	12.1	13.2	17.1	24.0	26.0
		TF7/TW7	5.1	5.9	7.4	7.6	9.6	12.4	12.6
		TFD	5.0	5.0	7.4	6.4	7.9	9.6	10.1
Max Continuous Current	KQ	PFJ	16.0	18.0	23.0	24.0	27.0		
		PFV	19.0	21.0	25.8	28.6	31.0		
		TF5/TW5	12.5	14.0	16.0	19.4	23.0	29.0	29.0
		TF7/TW7	7.0	8.1	10.5	10.2	13.0	15.0	15.0
		TFD	6.0	6.0	8.0	10.0	11.0	13.5	16.1
	KQE	PFJ	18.5	20.5	21.5	26.5	28.0		
		PFV	22.0	24.0	29.0	33.0	35.0		
		TF5/TW5	12.5	14.0	17.0	18.5	24.0	33.6	32.4
		TF7/TW7	7.2	8.3	10.3	10.7	13.5	17.4	17.7
		TFD	7.0	7.0	10.3	9.0	11.0	14.0	14.2
Run Capacitor (1 phase)	50Hz	PFJ	40/440	45/370	60/370	60/370	60/370		
Run Capacitor (1 phase)	60Hz	PFV	40/370	45/370	50/370	60/370	60/440		
Nominal power(HP)			2	2.5	3	3.5	4	5	6
Crankcase Heater(W)			70	70	70	70	70	70	70
Connection Tube size(inch)									
Discharge Tube outer Diameter			1/2	1/2	1/2	1/2	1/2	1/2	1/2
Suction Tube outer Diameter			3/4	3/4	3/4	3/4	7/8	7/8	7/8
Dimension(mm)									
Length			242	242	243	243	242	242	242
Width			242	242	244	244	242	242	242
Height			383	389	412	425	430	457	457
Mounting pants installation size (hole size)			190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)
Oil Recharge(L)									
PFJ/PFV			1.24	1.30	1.45	1.45/1.48	1.36		
TFD/TF5/TF7			1.24	1.36	1.45	1.48	1.36	2.07	1.89
Weight(kg)									
Net			23	25	27	28	33	38	40
Gross			26	29	30	31	37	41	44

ZB Series

Technical Data


Model			ZB48KQ ZB48KQE	ZB58KQ ZB58KQE	ZB66KQ ZB66KQE	ZB76KQ ZB76KQE	ZB88KQ	ZB95KQ	ZB114KQ			
Motor type			50Hz									
				TF5	TF5	TF5	TF5	TF5				
				TFD	TFD	TFD	TFD	TFD	TFD	TFD		
			60Hz							TW5	TW5	
				TF5	TF5	TF5	TF5	TF5				
				TF7	TF7	TF7	TF7	TF7				
				TFD	TFD	TFD	TFD	TFD	TFD	TFD	TFD	
									TW5	TW5	TW7	
Displacement (M³/HR)		50Hz	18.8	22.1	25.7	28.8	33.2	36.4	43.3			
		60Hz	22.6	26.7	31.0	34.8	40.1	43.9	52.3			
LRA			50Hz	PFJ								
				TF5/TW5	179.0	203.0	231.0	239.0	273.0			
				TFD	101.0	95.0	111.0	118.0	118.0	140.0	174.0	
			60Hz	PFV								
				TF5/TW5	164.0	195.0	225.0	239.0	245.0	300.0	340.0	
				TF7/TW7	100.0	123.0	140.0	145.0	145.0	139.0	196.0	
				TFD	100.0	95.0	114.0	125.0	125.0	150.0	179.0	
RLA			KQ	PFJ								
				PFV								
				TF5/TW5	25.0	32.1	33.6	41.4	47.1	53.6	58.6	
				TF7/TW7	12.1	16.7	18.6	23.6	24.4	28.6	35.7	
			KQE	TFD	12.1	16.4	17.3	20.0	22.1	25.0	27.9	
				PFJ								
				PFV								
				TF5/TW5	26.0	32.1	33.6	41.4		61.4	65.0	
				TF7/TW7		17.1	18.6	23.6		35.0	42.9	
Max Continuous Current			KQ	TFD	13.6	16.4	17.3	20.0		26.4	28.6	
				PFJ								
				PFV								
				TF5/TW5	35.0	45.0	47.0	54.0	66.0	75.0	82.0	
			KQE	TF7/TW7	17.0	23.4	26.0	33.1	34.2	40.0	50.0	
				TFD	17.0	23.0	24.2	26.9	31.0	35.0	42.0	
				PFJ								
				PFV								
				TF5/TW5	36.4	43.0	44.0	58.0		86.0	91.0	
Run Capacitor (1 phase)			50Hz	PFJ								
Run Capacitor (1 phase)			60Hz	PFV								
Nominal power(HP)				7	8	9	10	12	13	15		
Crankcase Heater(W)				70	90	90	90	90	90	90		
Connection Tube size(inch)												
Discharge Tube outer Diameter				3/4	7/8	7/8	7/8	7/8	7/8	7/8		
Suction Tube outer Diameter				7/8	1 1/8	1 3/8	1 3/8	1 3/8	1 3/8	1 3/8		
Dimension(mm)												
Length				242	264	264	264	264	264	264		
Width				242	284	284	284	284	285	285		
Height				457	477	546	546	546	552	553		
Mounting pants installation size (hole size)				190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)	190x190(8.5)		
Oil Recharge(L)												
TFD/TF5/TF7				1.80	2.51	3.25	3.25	3.25	3.30	3.30		
Weight(kg)												
Net				40	57	59	62	62	62	63		
Gross				44	60	62	65	65	65	66		

ZB Series

Dimensions

Brazing Connection

ZB15~ZB29 (BOM 524)

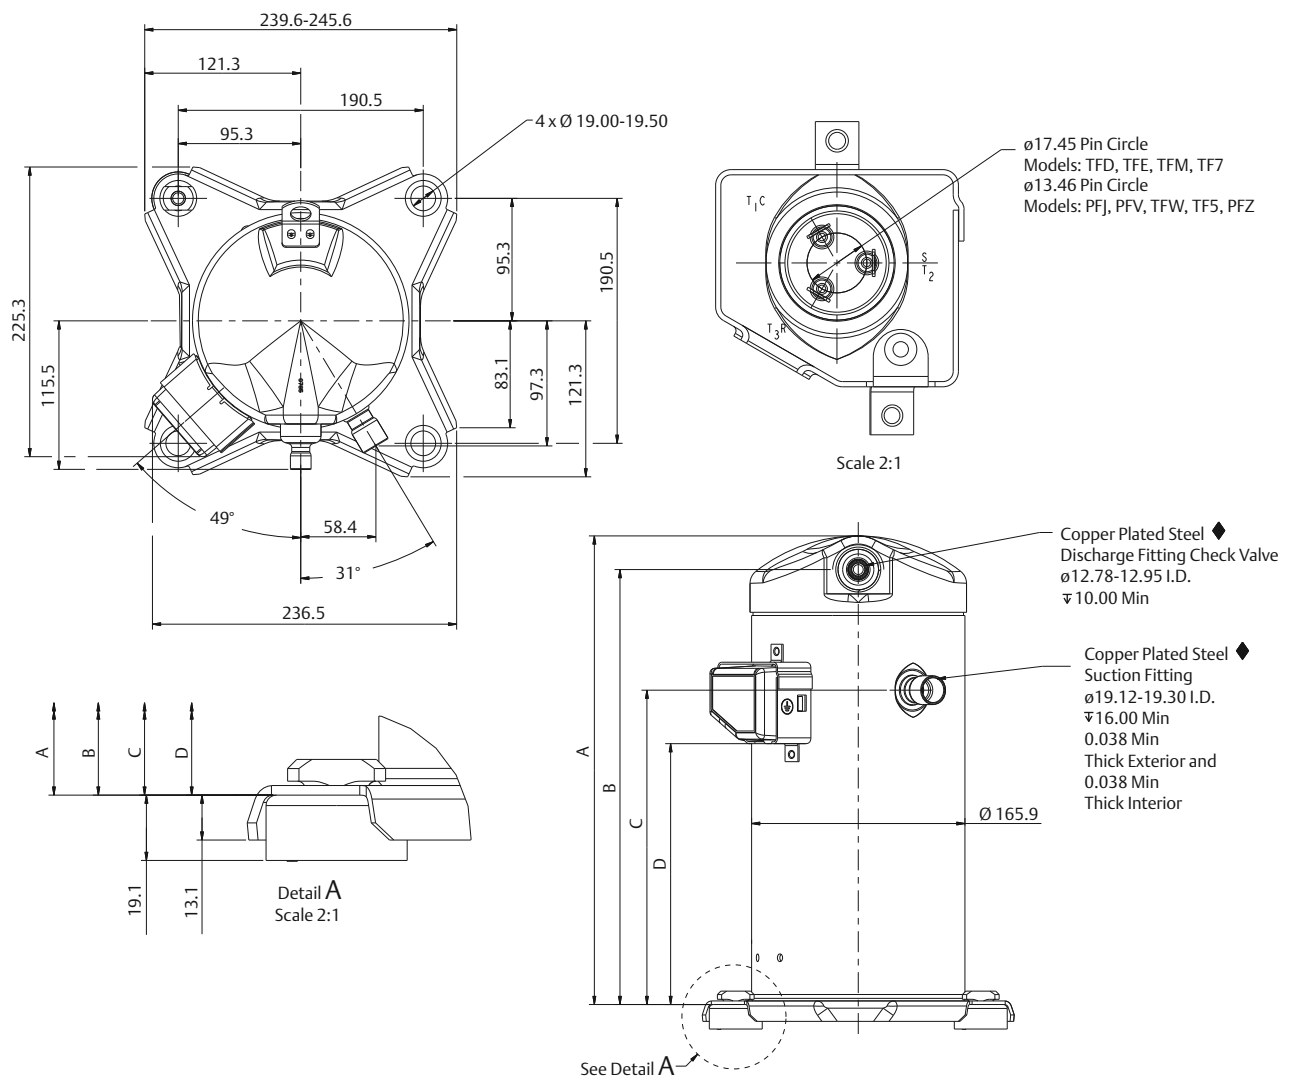


Compressor model	A±3	B±3	C±3	D±3
ZB15KQ/ZB15KQE	363.8	338.3	244.5	202.9
ZB19KQ/ZB19KQE				
ZB21KQ/ZB21KQE	386.4	360.9	264.4	222.8
ZB26KQ/ZB26KQE	400.2	374.6	277.1	235.5
ZB29KQ/ZB29KQE	417.8	389.9	294.1	252.5

ZB Series

Dimensions

Brazing Connection

ZB38~ZB48 (BOM 524)




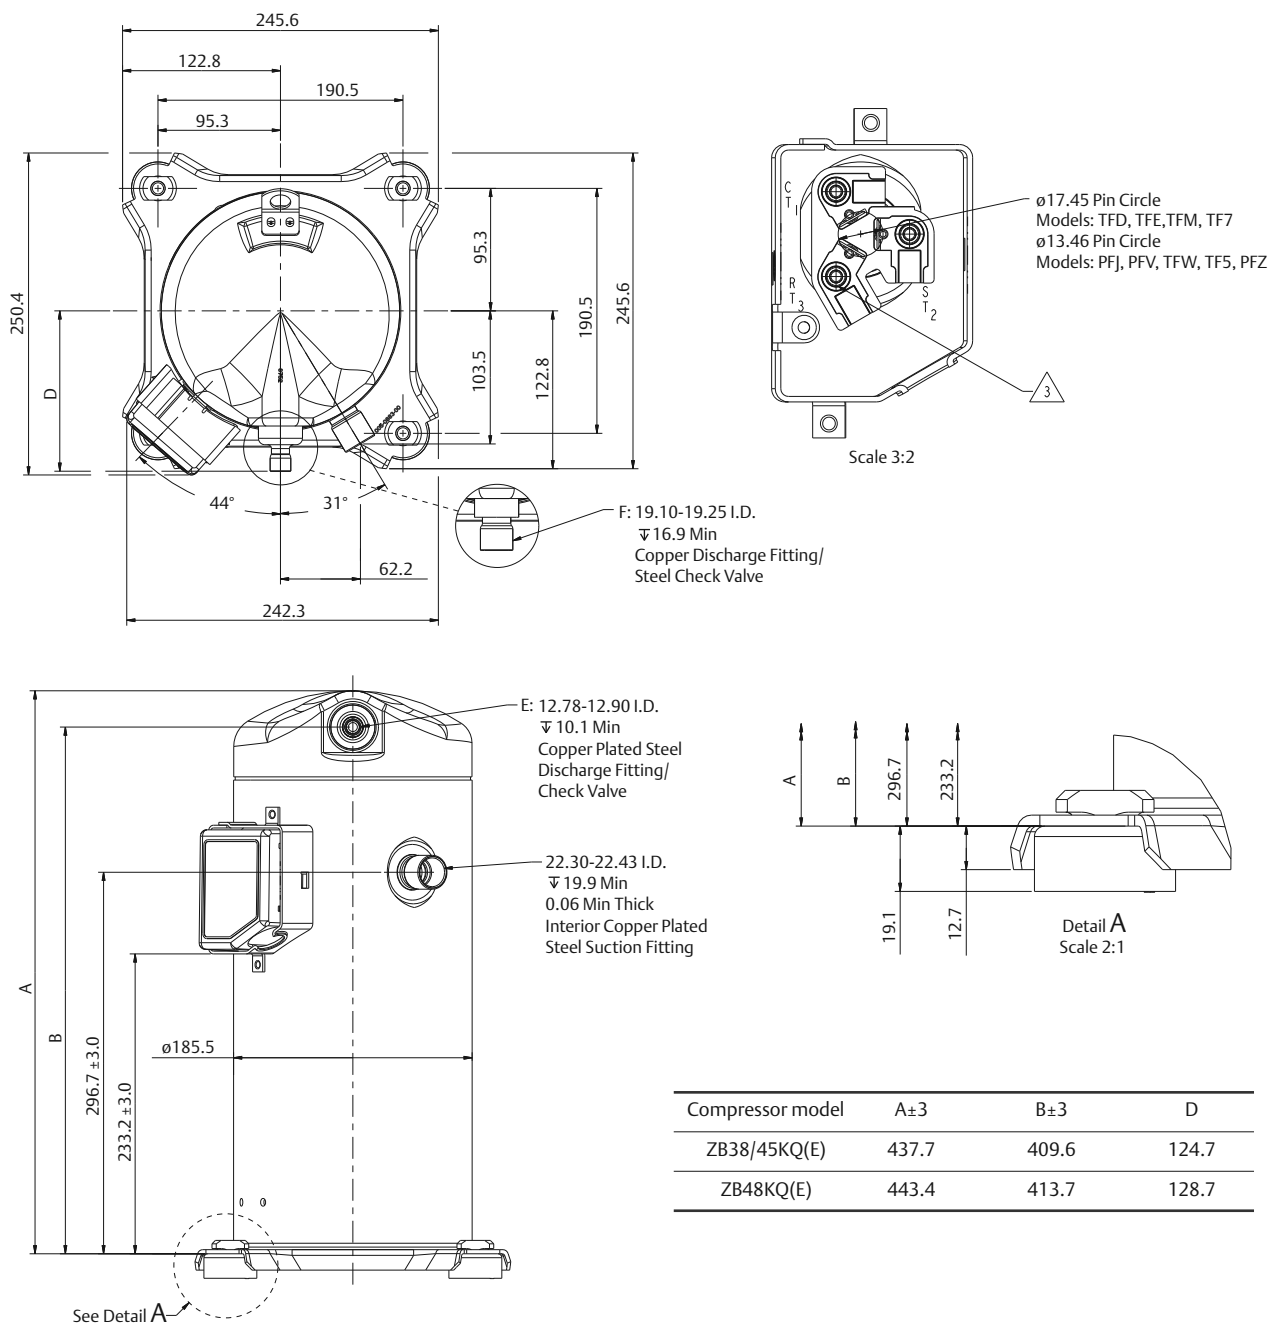


ZB Series

Dimensions

Brazing Connection

ZB58 (BOM 524)

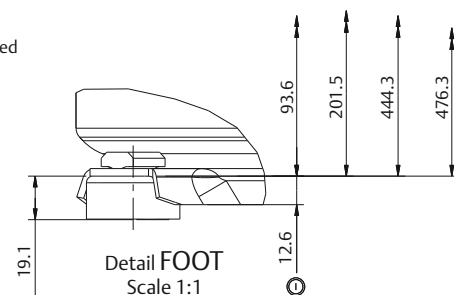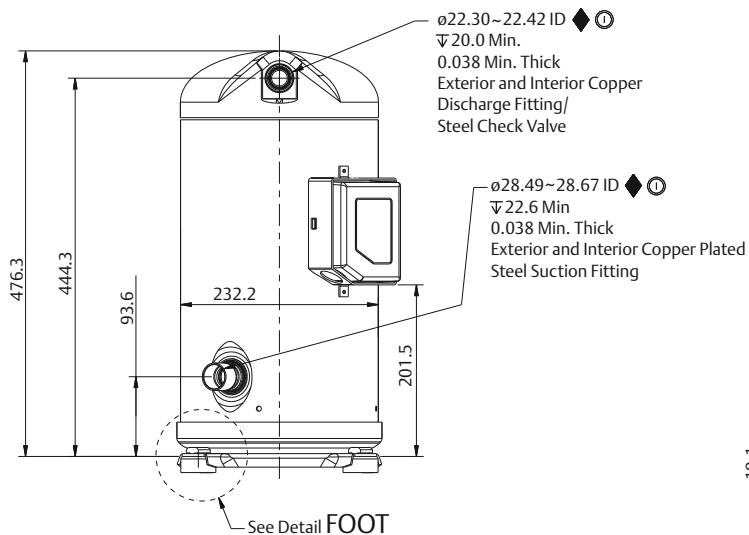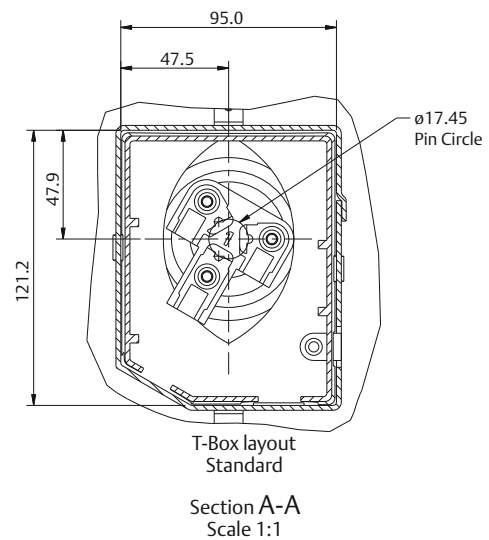
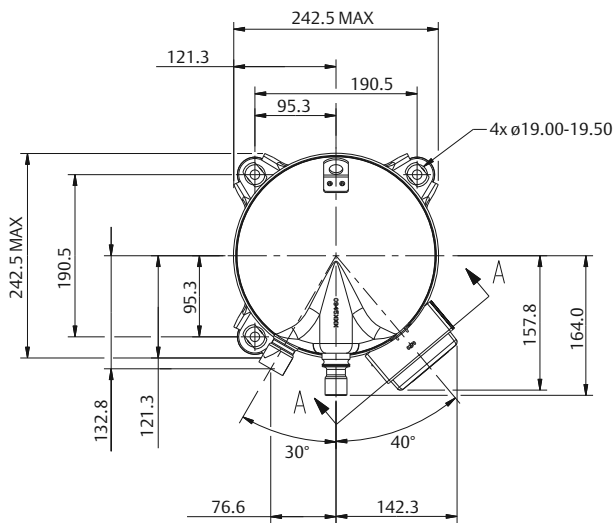


ZB Series

Dimensions



Brazing Connection

ZB66~ZB88 (BOM 524)

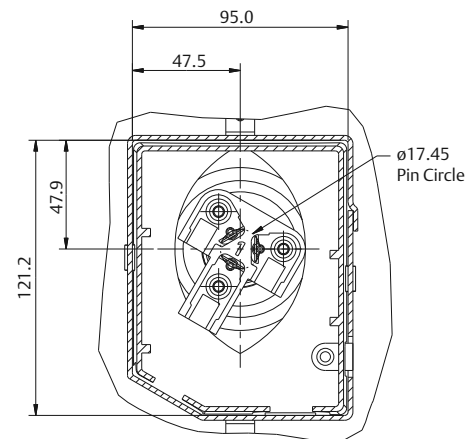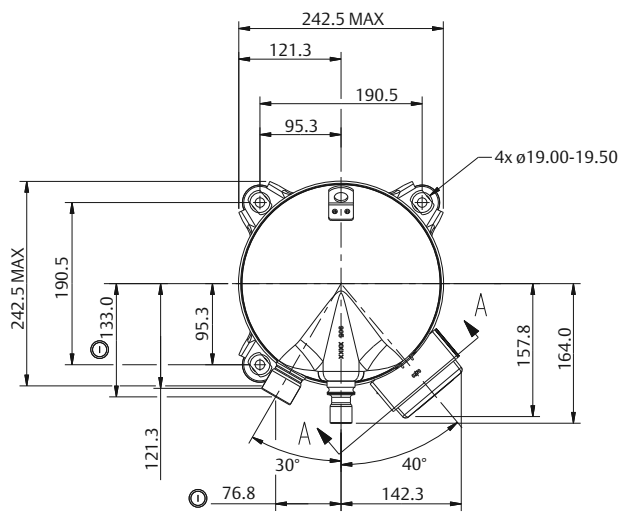

T-Box layout
Standard

Section A-A
Scale 1:1

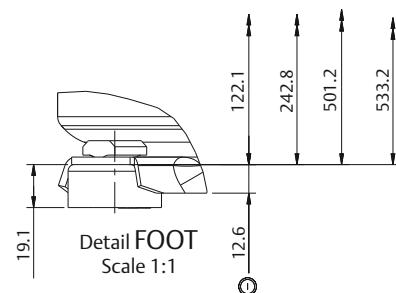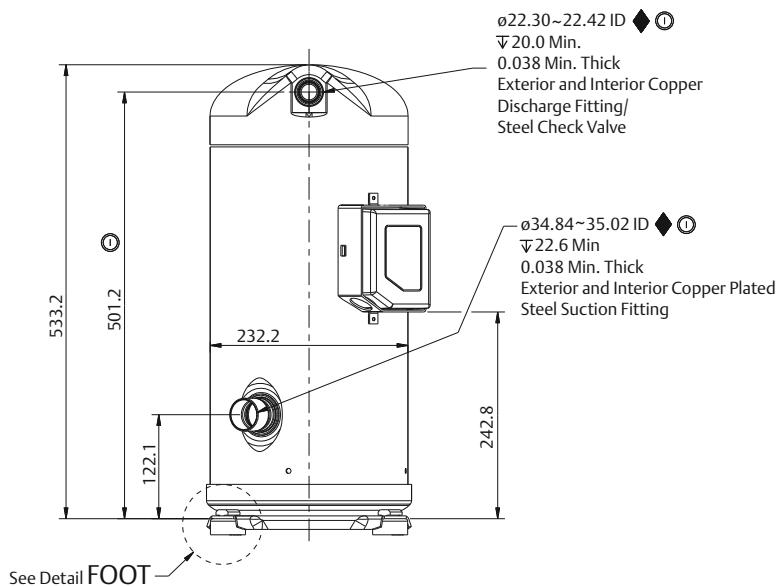


ZB Series

Dimensions

Rotalock Connection

ZB15~ZB29 (BOM 523)


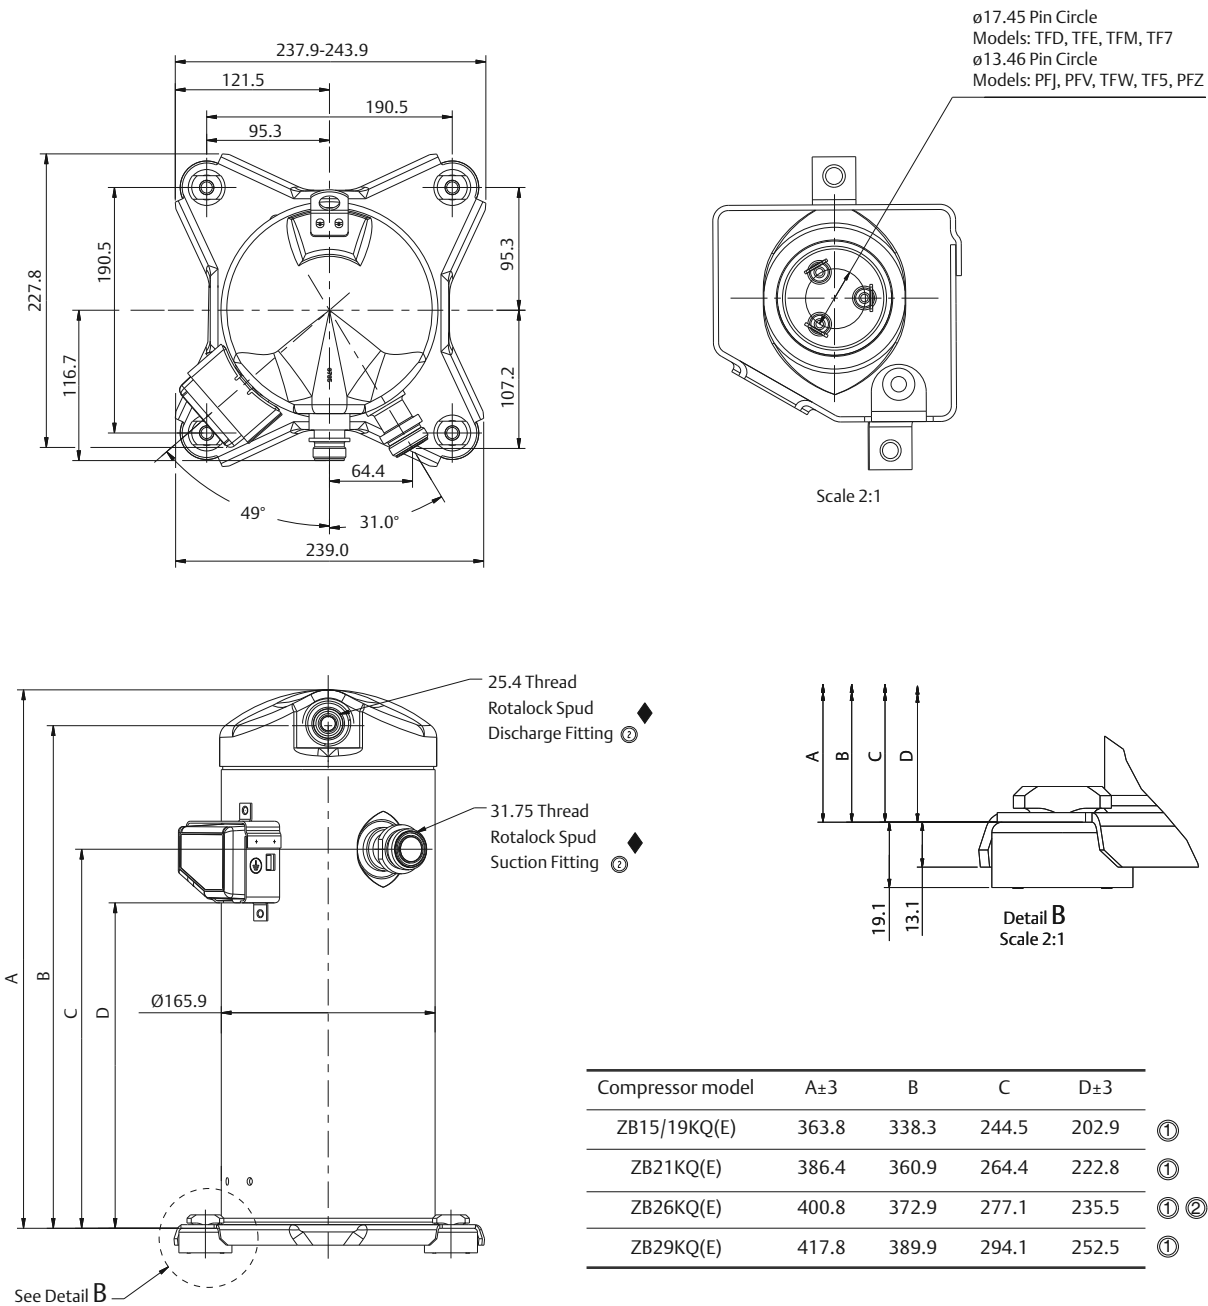


ZB Series

Dimensions


Rotalock Connection

ZB38~ZB48 (BOM 523)

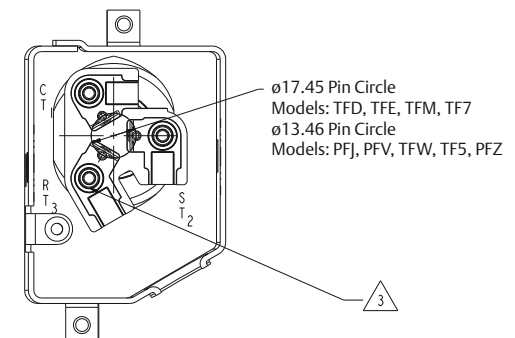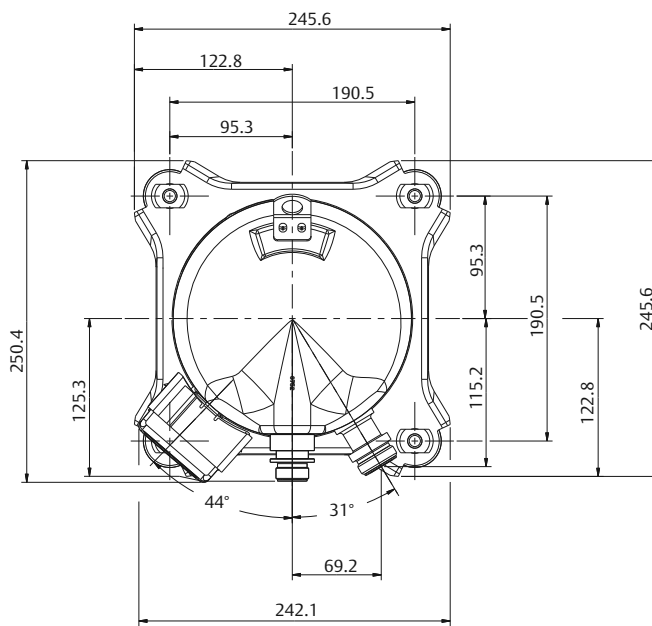


Terminal Box Layout Options
Terminal Box Cover Not Shown

View A-A
Scale 3:2

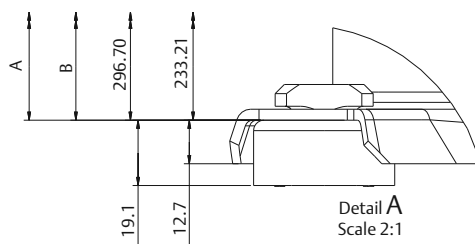

Compressor model	A±3	B±3
ZB38/45KQ(E)	437.7	409.6
ZB48KQ(E)	443.4	413.7

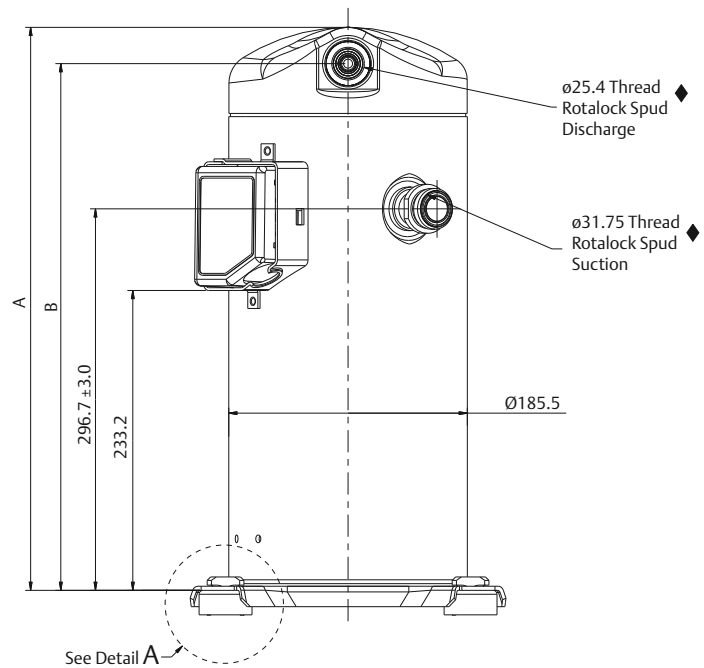



Rotalock Connection

ZB Series



Dimensions

Rotalock Connection

ZB66~ZB88 (BOM 523)

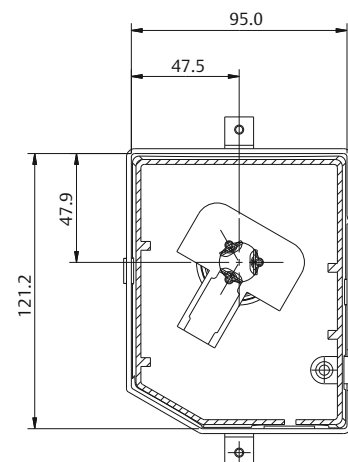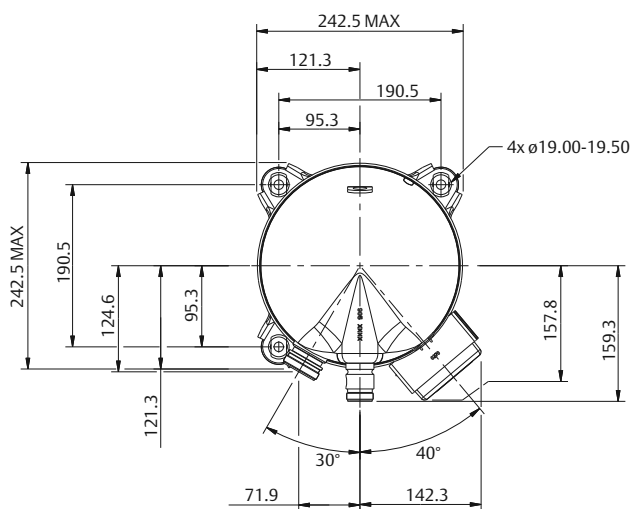

Section A-A
Scale 1:1

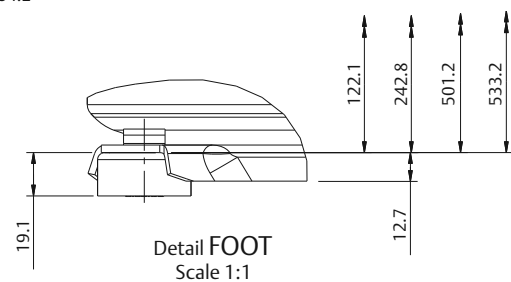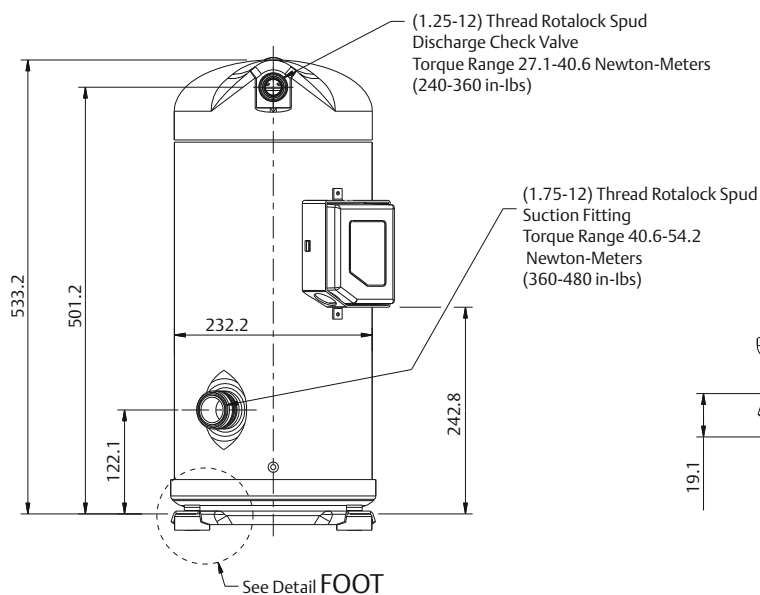





Detail FOOT
Scale 1:1

ZB Series

Dimensions

Brazing & Sight Glass

ZB15~ZB29 (BOM 558)

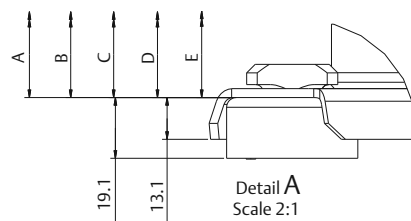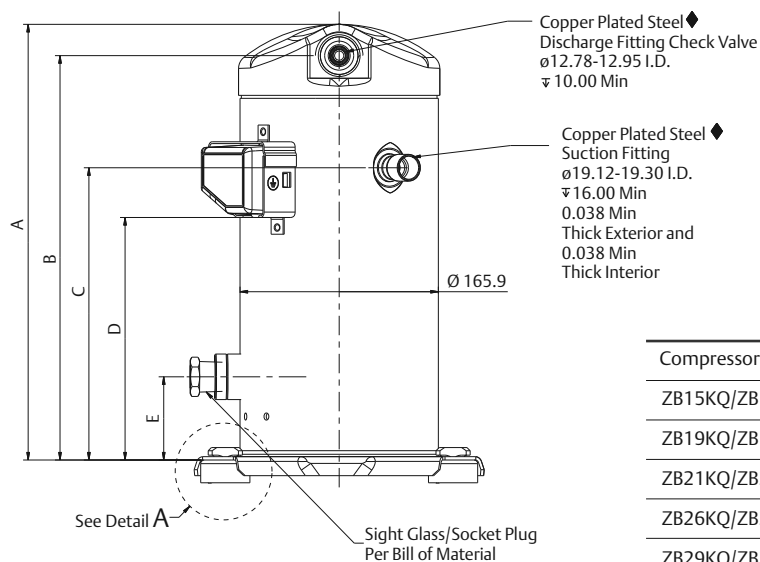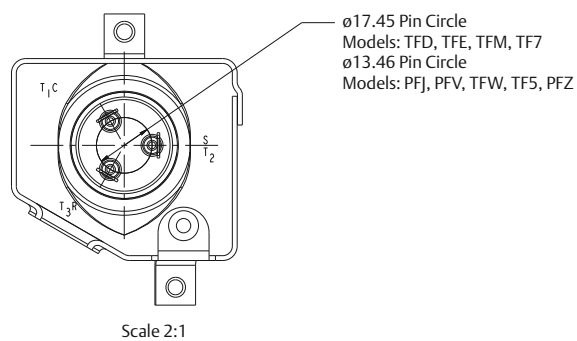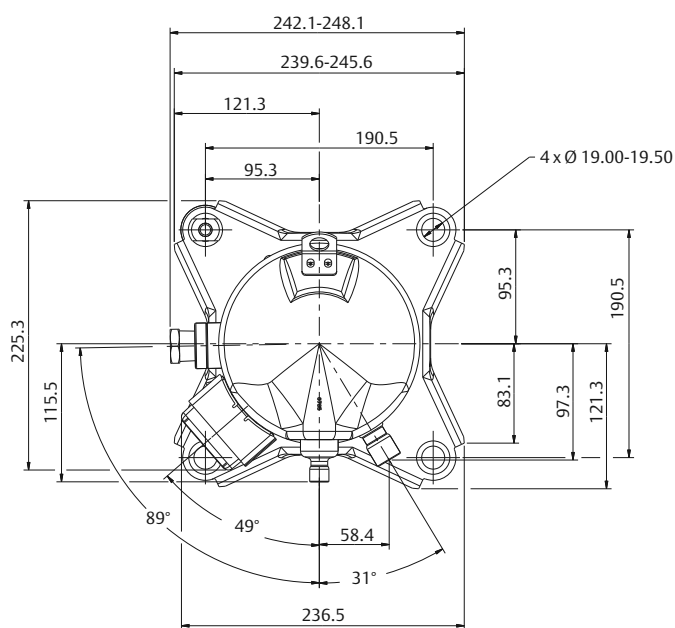


Compressor model	A±3	B±3	C±3	D±3	E±3
ZB15KQ/ZB15KQE	363.8	338.3	244.5	202.9	69.6
ZB19KQ/ZB19KQE					
ZB21KQ/ZB21KQE	386.4	360.9	264.4	222.8	64.9
ZB26KQ/ZB26KQE	400.2	372.9	277.1	235.5	77.6
ZB29KQ/ZB29KQE	417.8	389.9	294.1	252.5	67.4

ZB Series

Dimensions

Brazing & Sight Glass

ZB38~ZB48 (BOM 558)

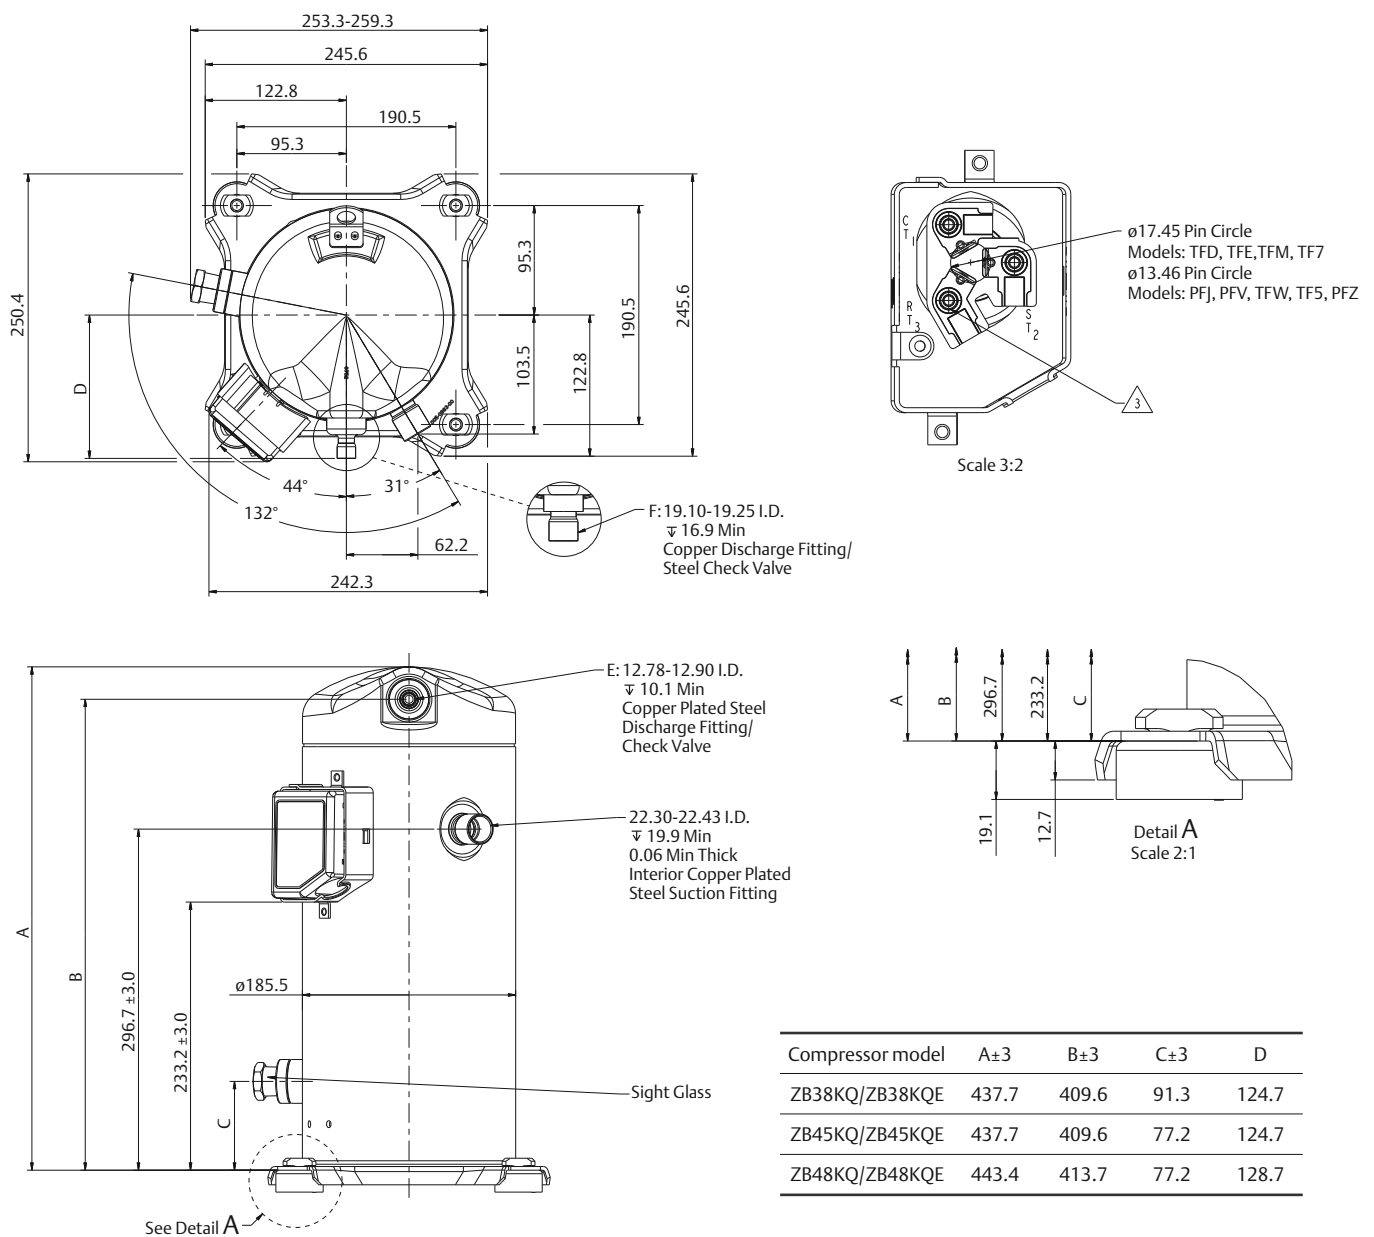


ZB Series

Dimensions

Brazing, Sight Glass & Oil Schrader Valve

ZB58 (BOM 550)

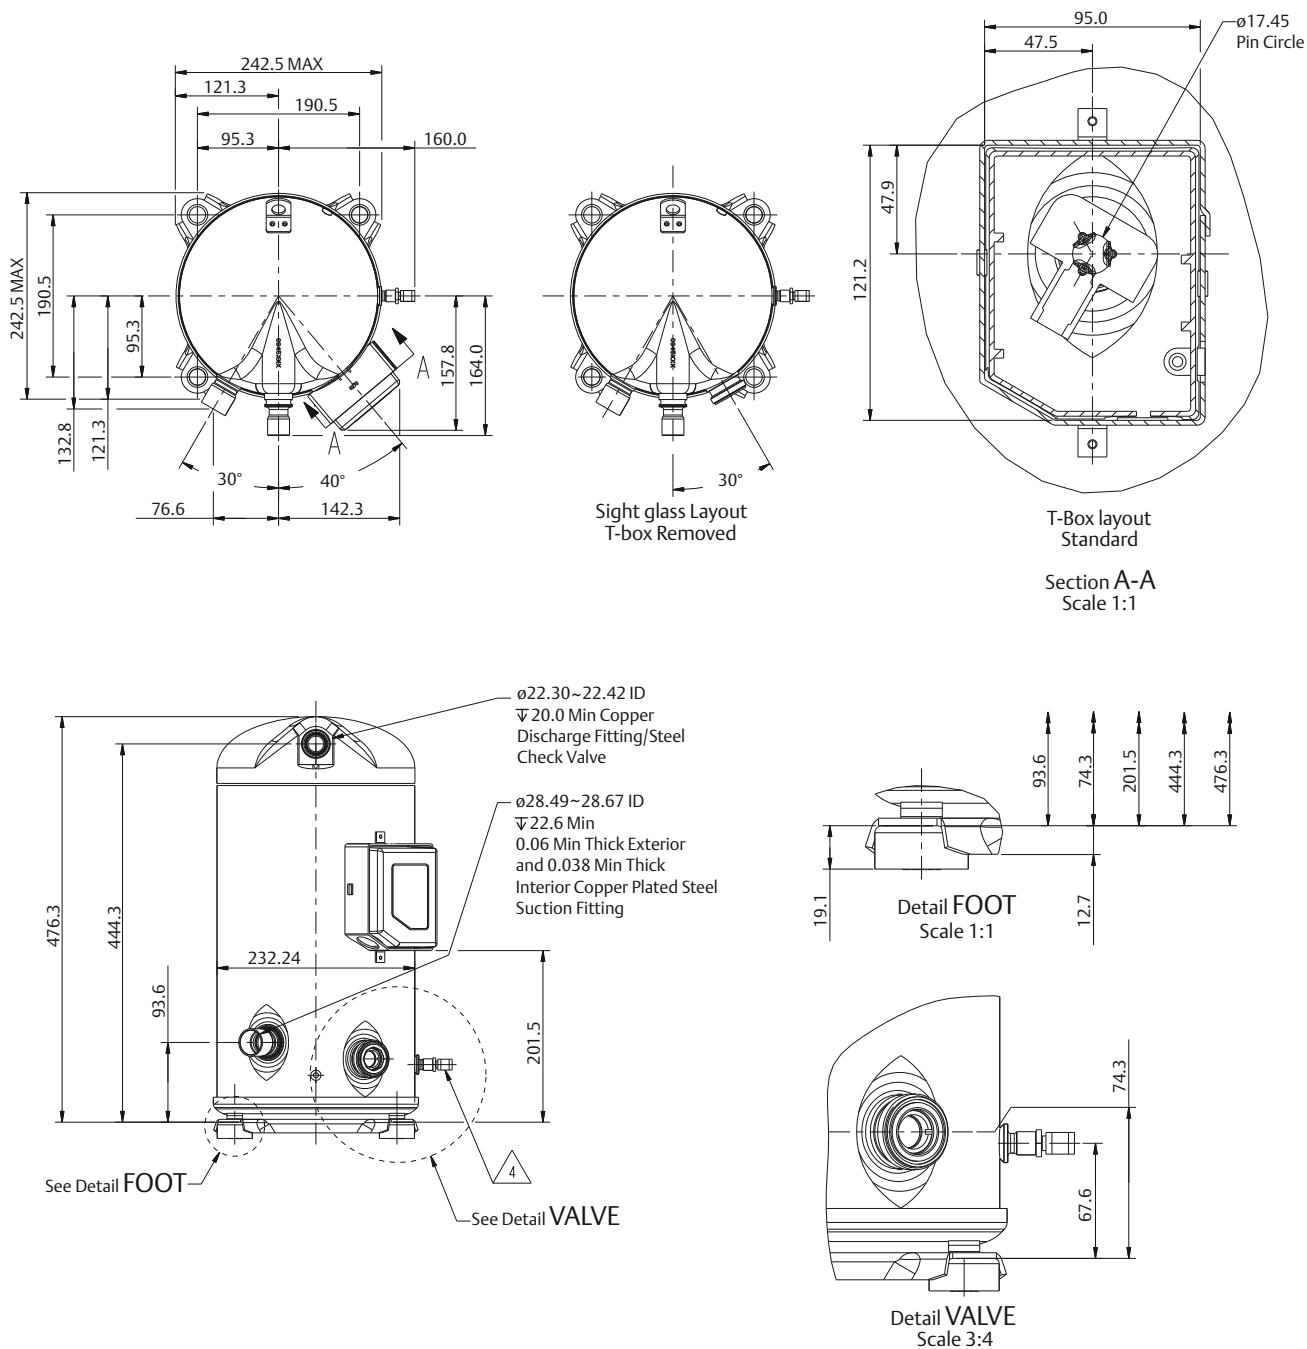


ZB Series

Dimensions

Brazing, Sight Glass & Oil Schrader Valve

ZB66~ZB88 (BOM 550)

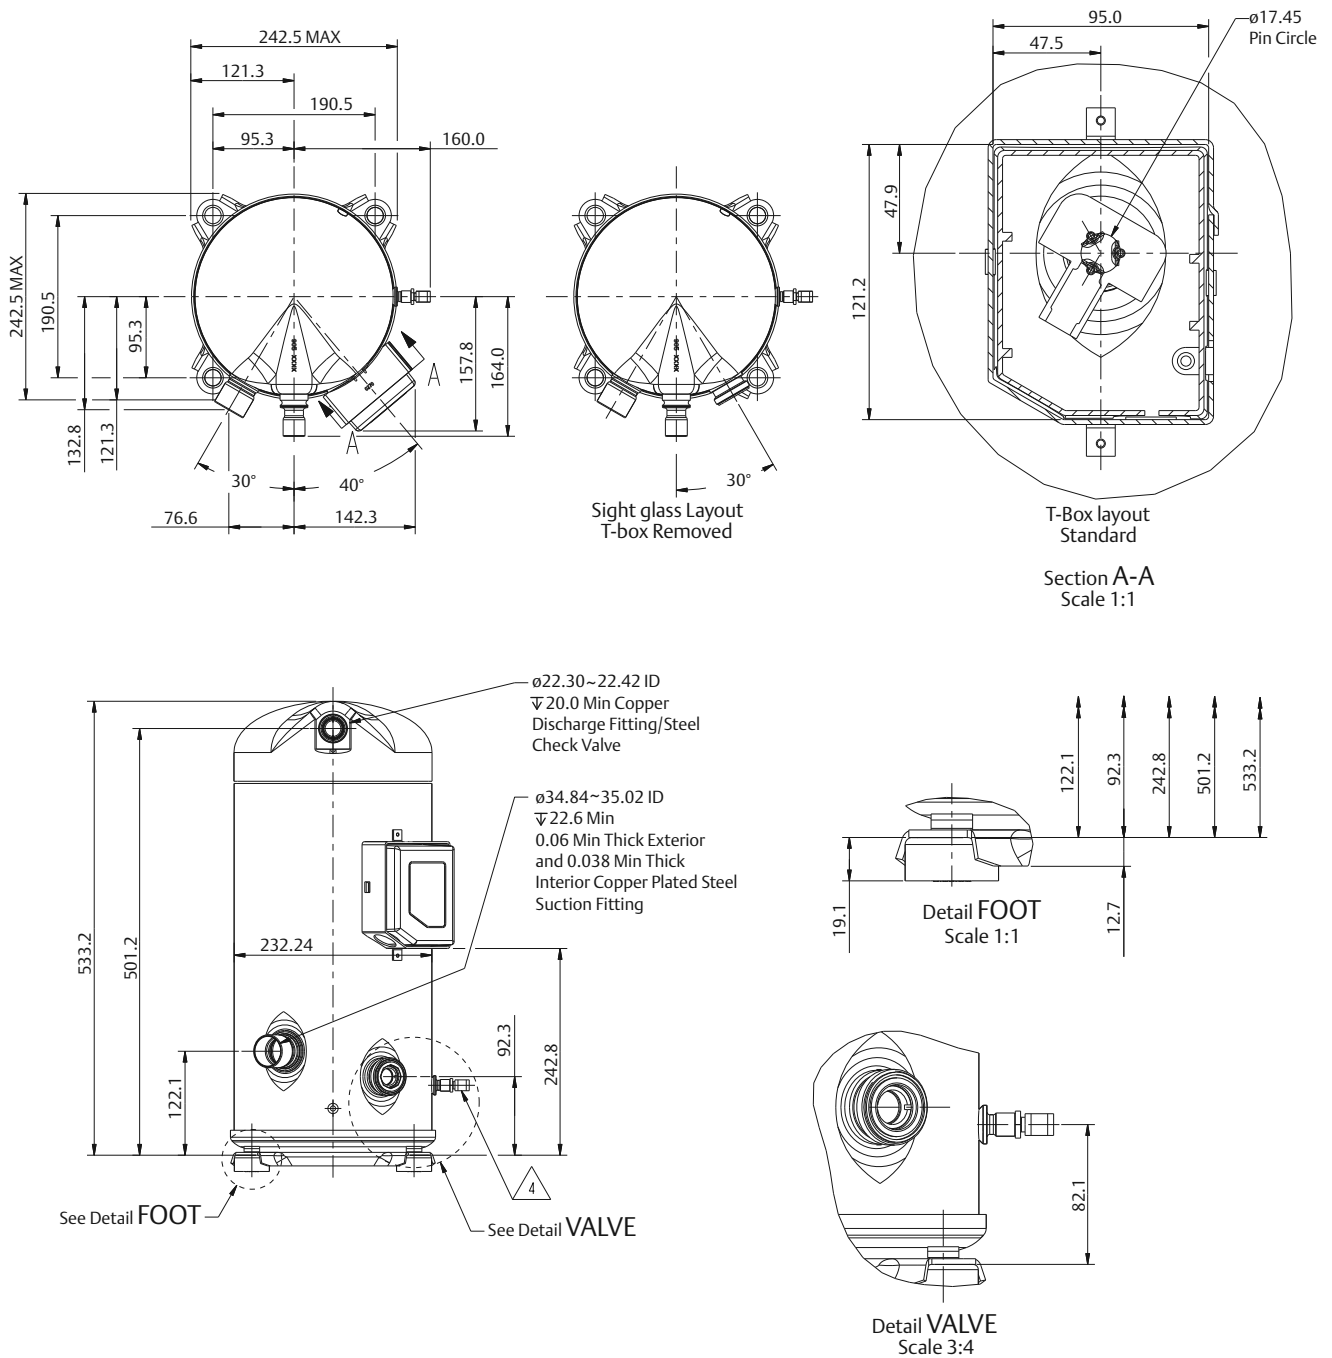


ZB Series

Dimensions

Brazing, Sight Glass & Oil Schrader Valve

ZB95~ZB114 TFD (BOM 550)


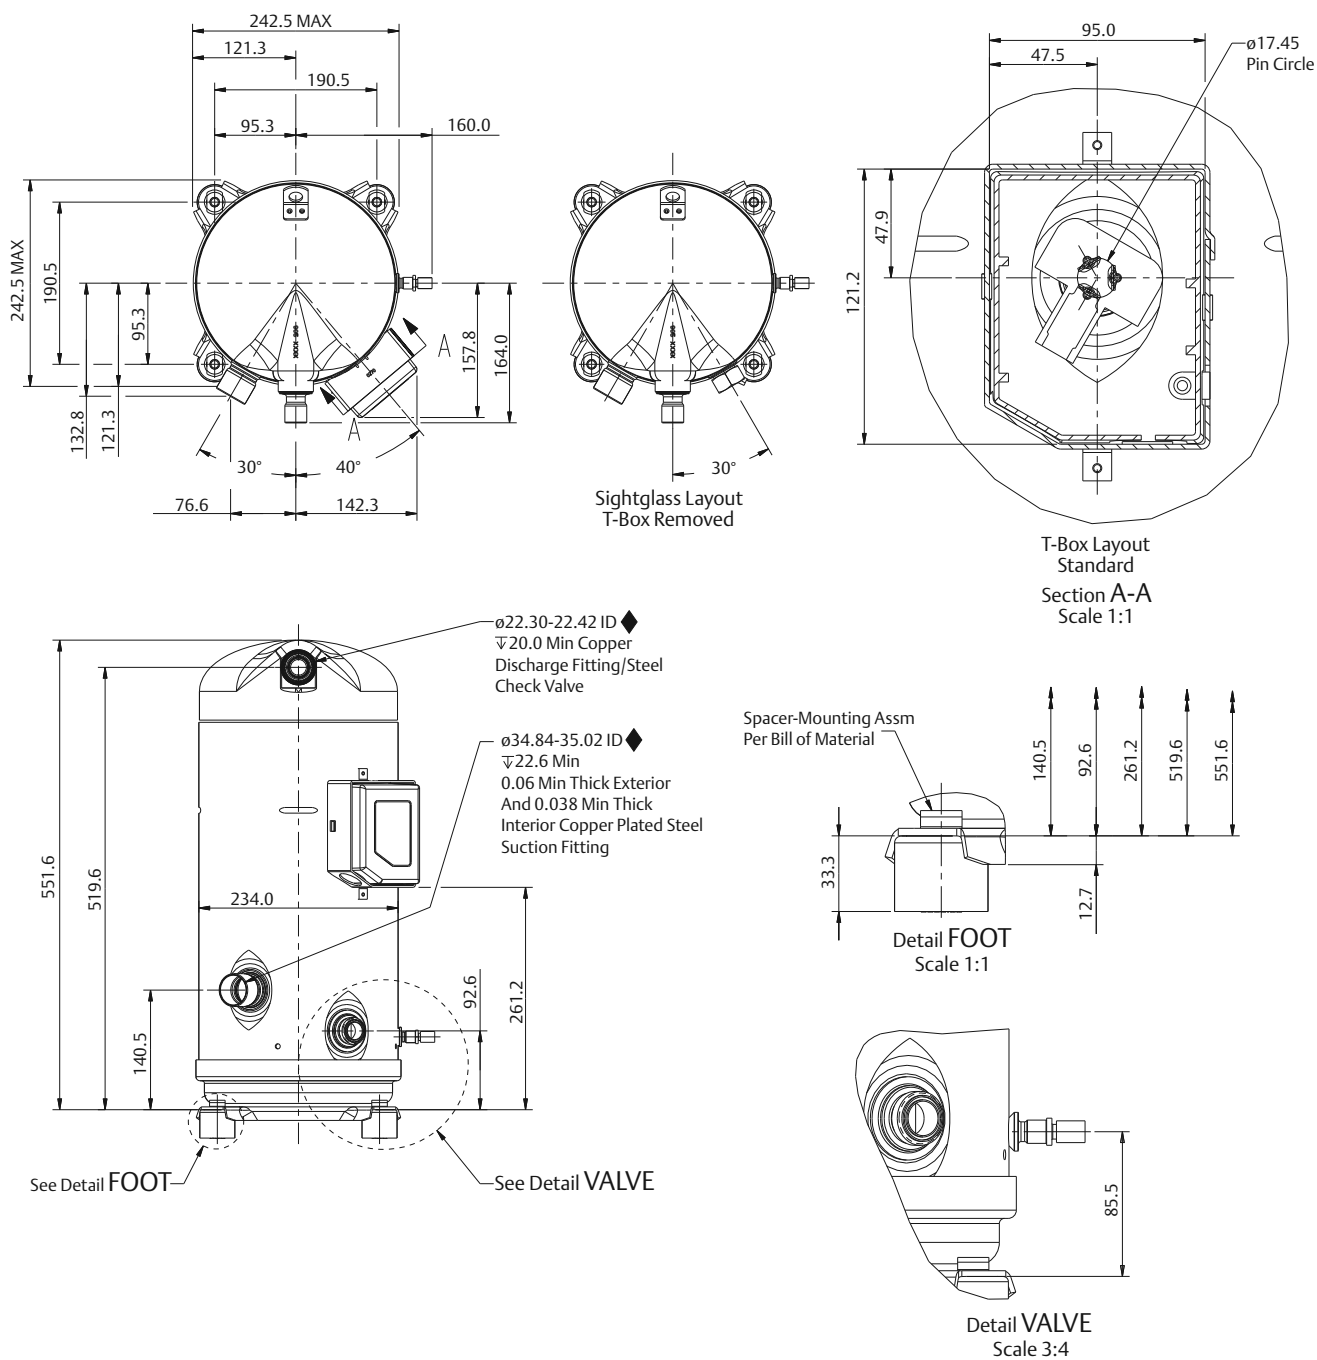


ZB Series



Dimensions

Brazing, Sight Glass & Oil Schrader Valve


ZB95~ZB114 TW7/TW5 (BOM 550)

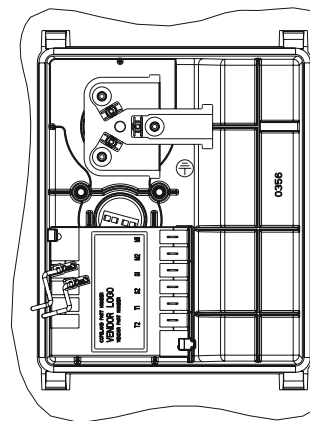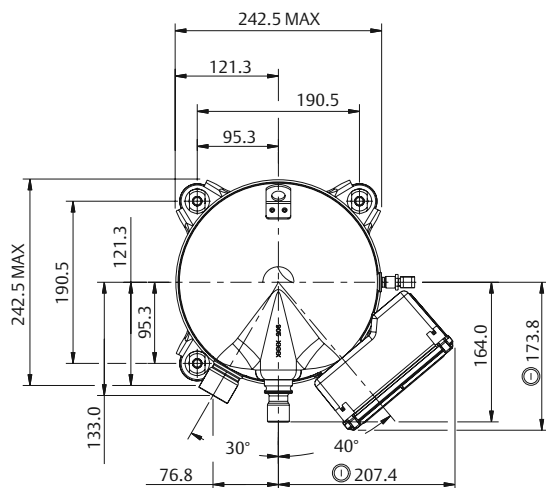

Terminal Box layout Standard ①
Scale 3:4

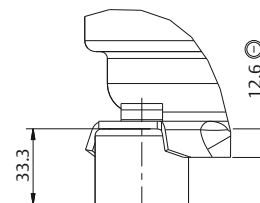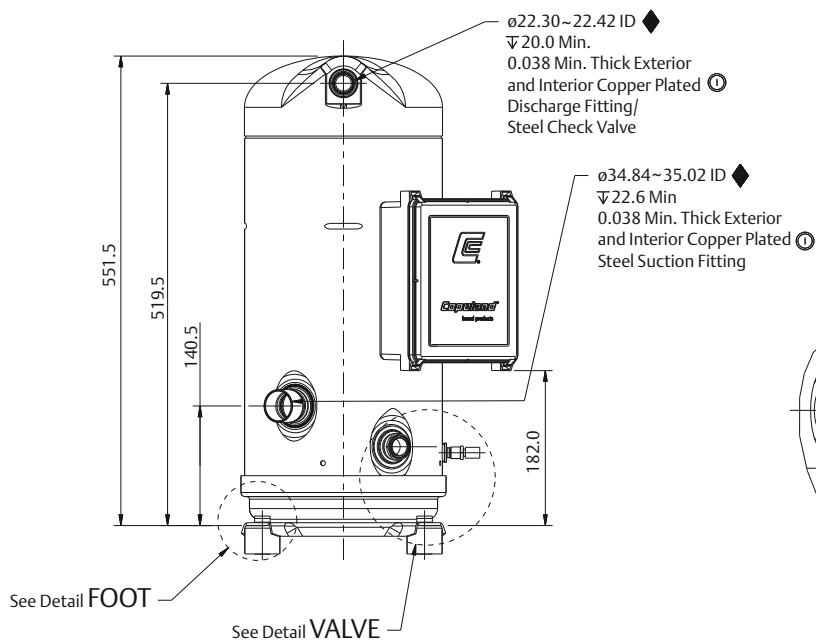

Detail FOOT
Scale 1:1

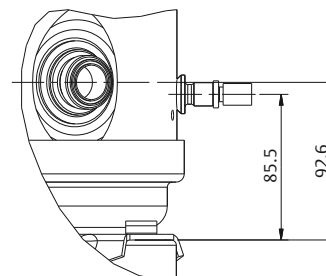


Detail VALVE
Scale 3:4

ZB Series

Dimensions

Rotalock & Sight Glass

ZB15~ZB29 (BOM 559)


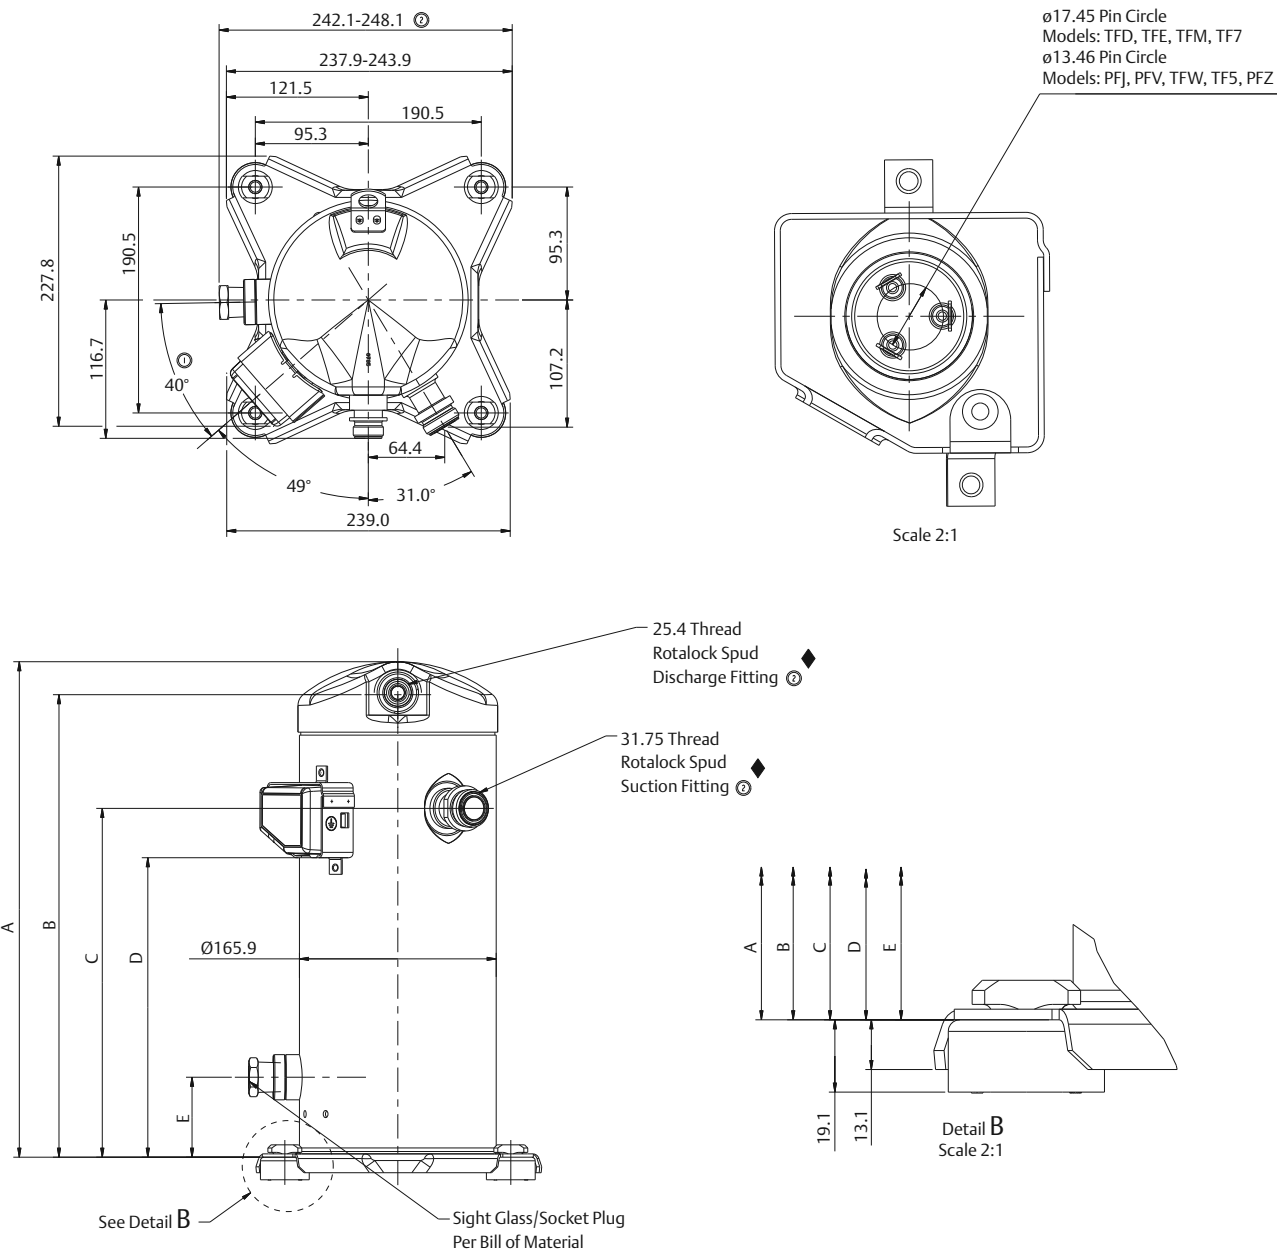


ZB Series



Dimensions

Rotalock & Sight Glass

ZB38~ZB48 (BOM 559)

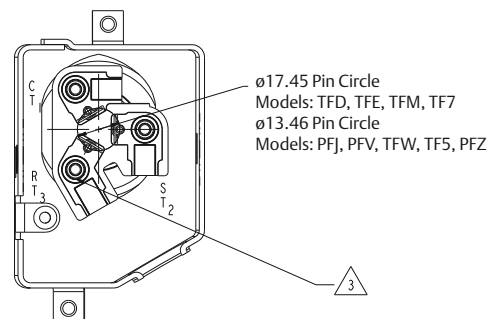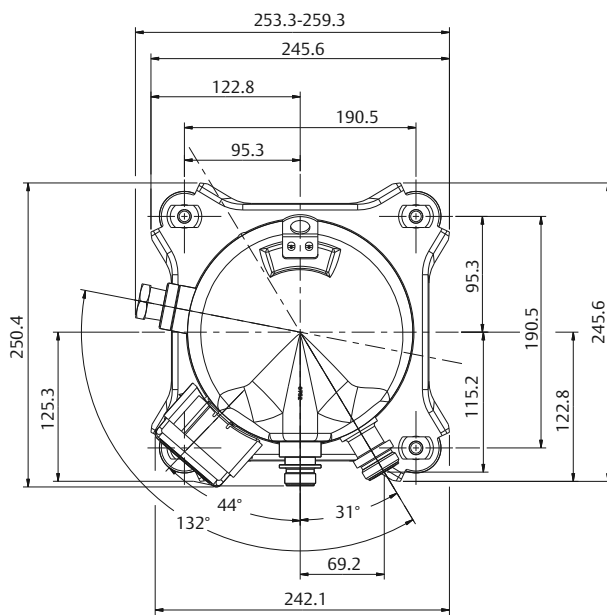

Terminal Box Layout Options
Terminal Box Cover Not Shown
View A-A
Scale 3:2

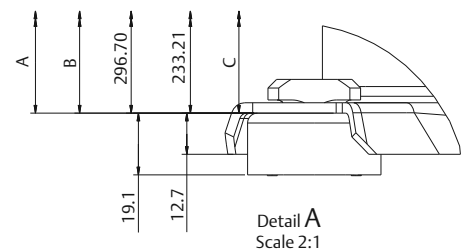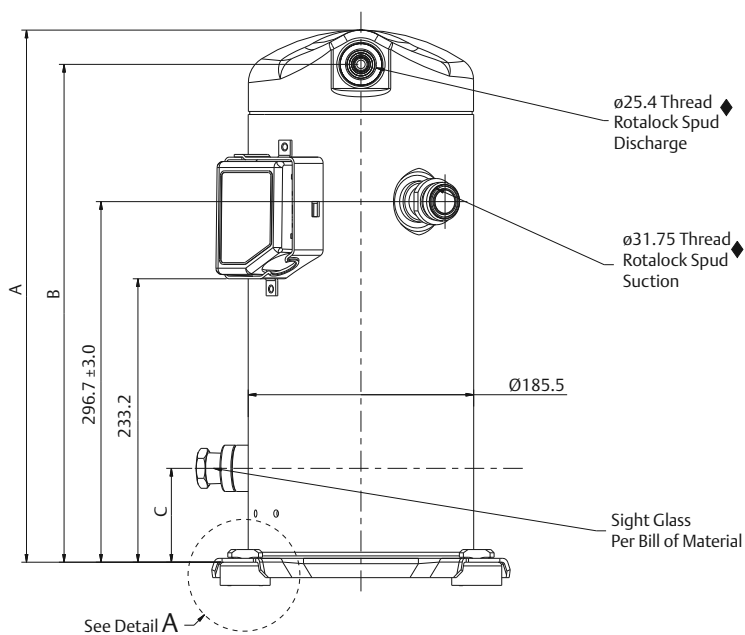


Detail A
Scale 2:1

ZB Series

Dimensions

Rotalock, Sight Glass & Oil Schrader Valve

ZB58 (BOM 551)

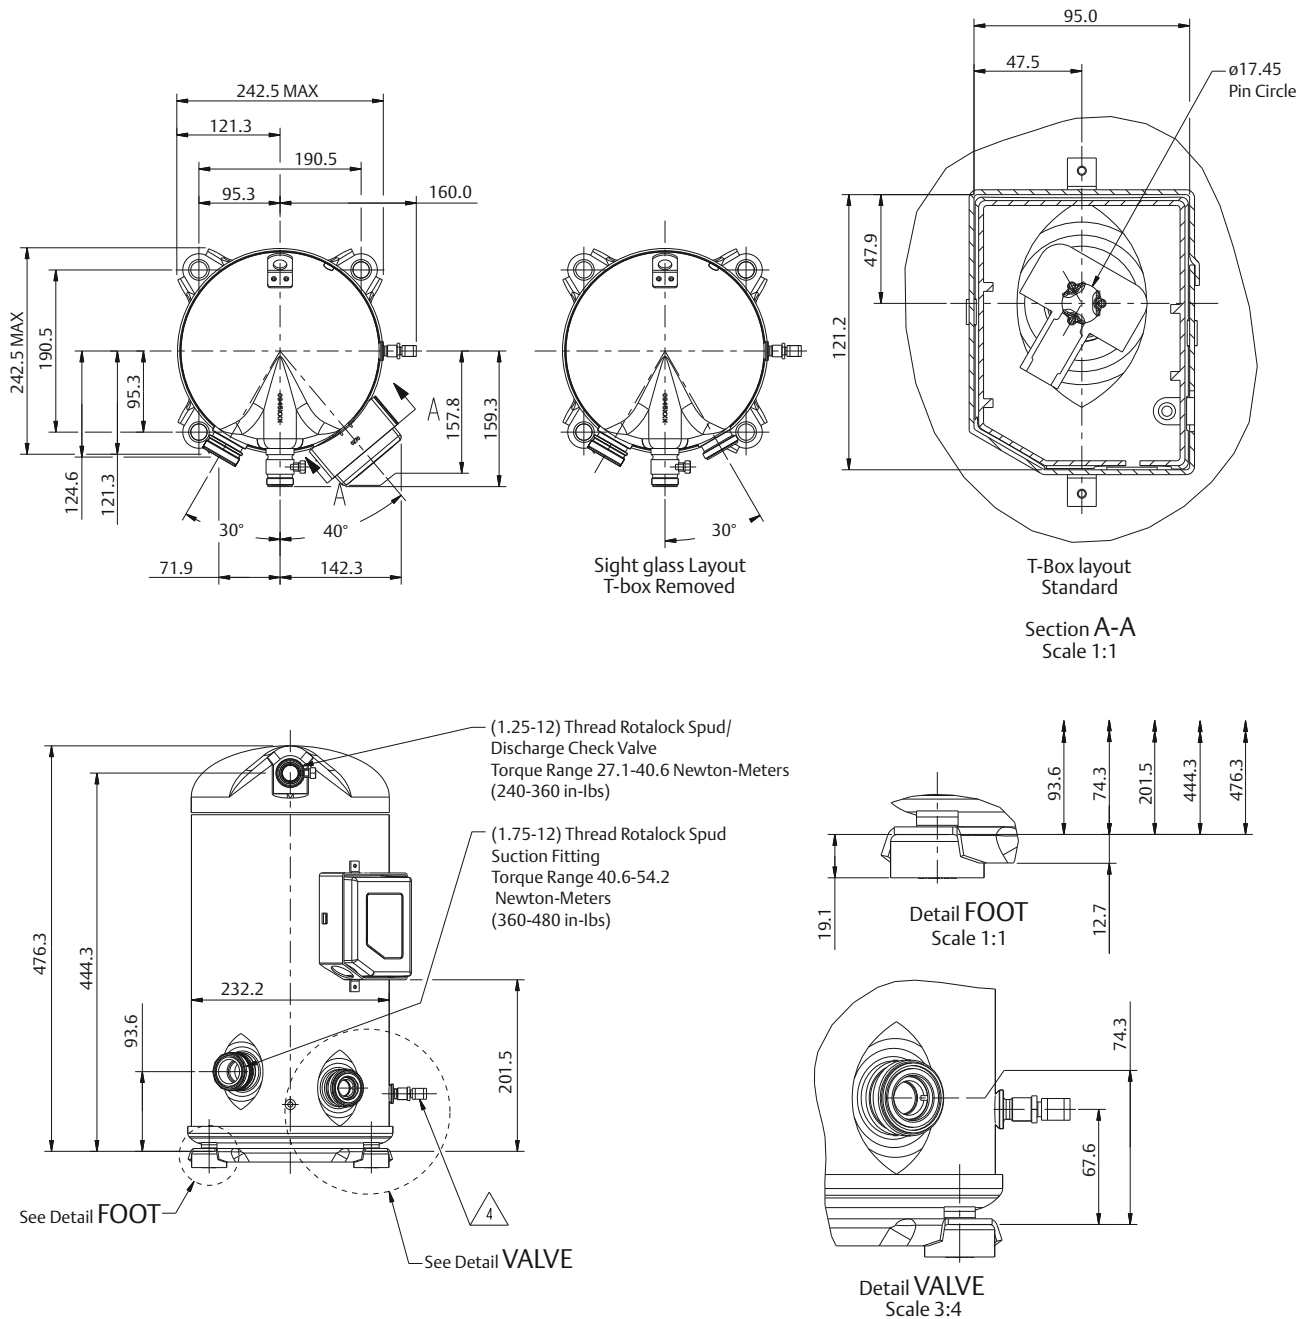


ZB Series

Dimensions

Rotalock, Sight Glass & Oil Schrader Valve

ZB66~ZB88 (BOM 551)

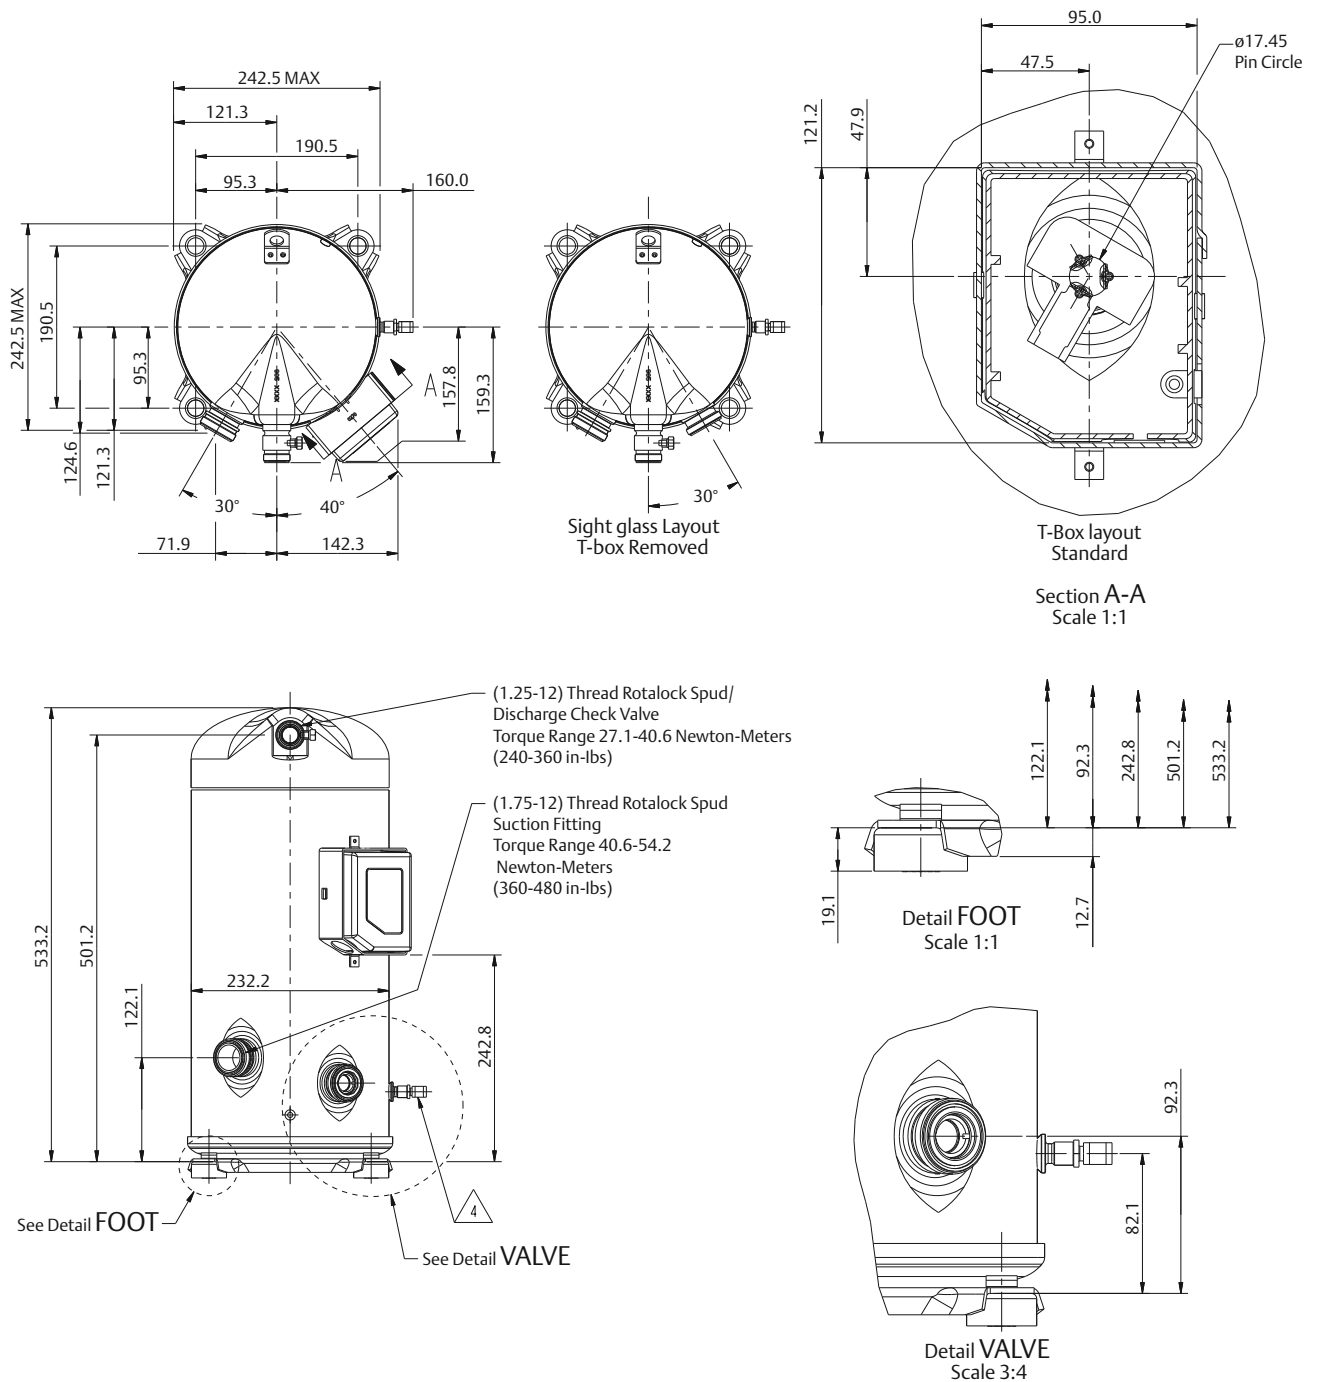


ZB Series

Dimensions

Rotalock, Sight Glass & Oil Schrader Valve

ZB95~ZB114 TFD (BOM 551)


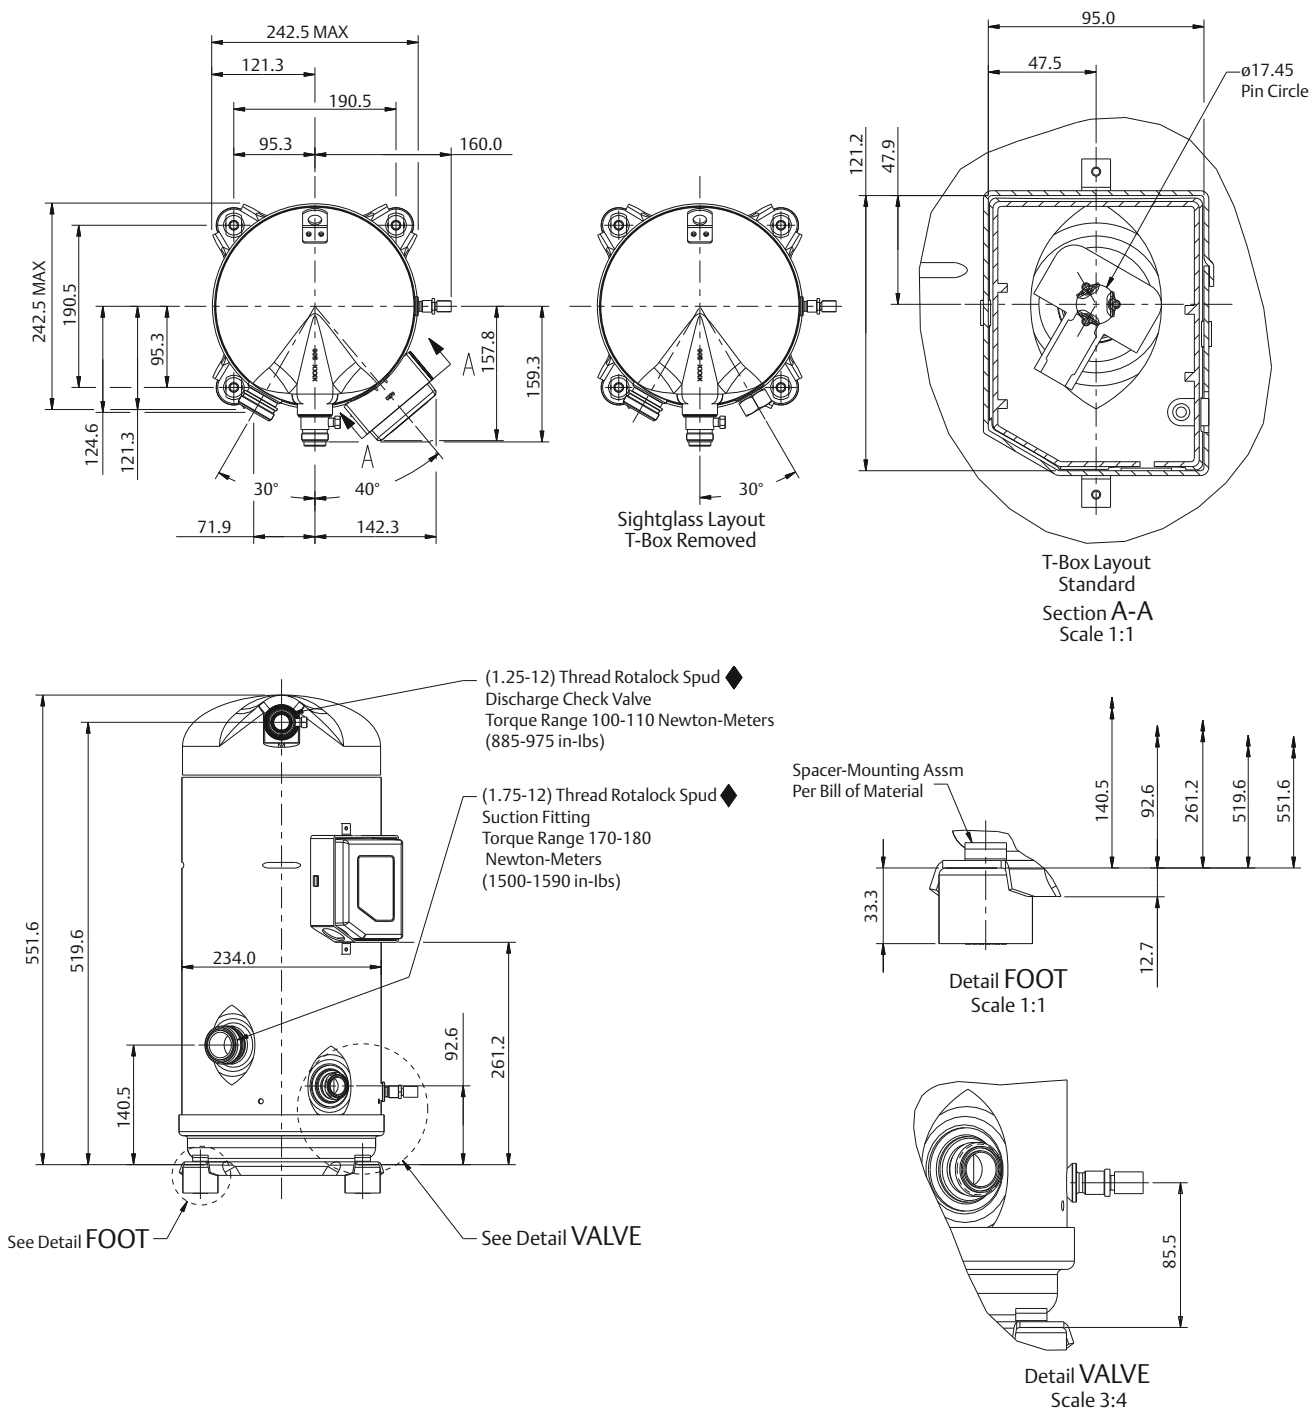


ZB Series



Dimensions

Rotalock, Sight Glass & Oil Schrader Valve


ZB95~ZB114 TW7/TW5 (BOM 551)

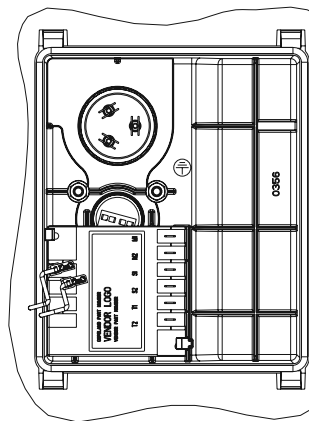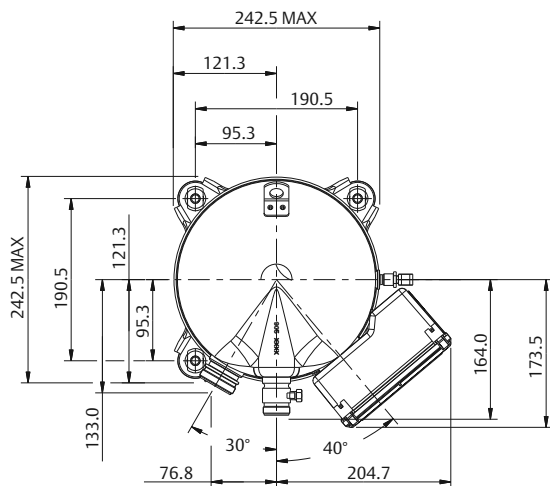

Terminal Box Layout Standard
Scale 3:4

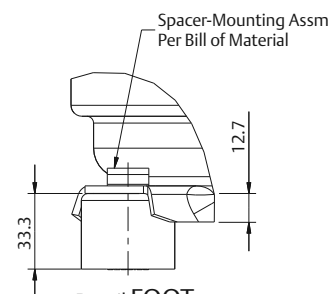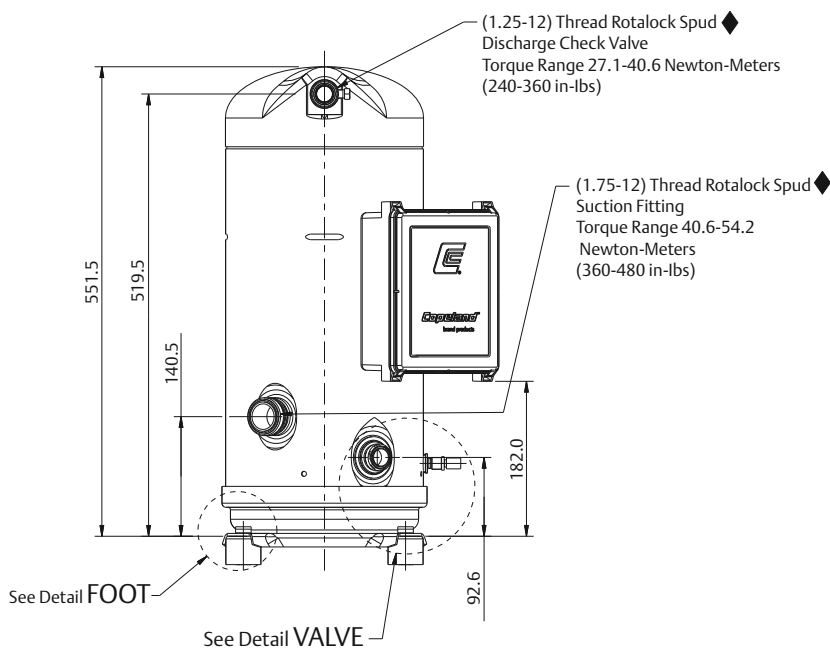

Detail FOOT
Scale 1:1

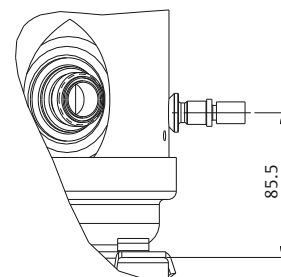


Detail VALVE
Scale 3:4

ZB Series

Electrical Wiring Diagram

ZB15~ZB114

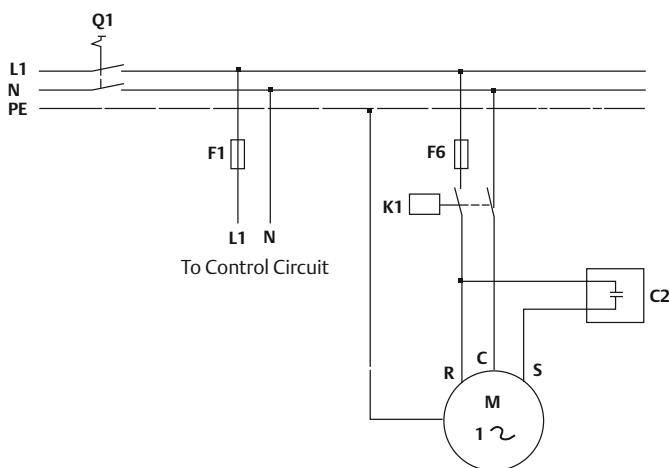

Single Phase Circuit (ZB15-ZB29)

Electrical Schematics

L1/N/PE: Single Phase Lines (line/neutral/ground)

Q1: Manual Switch


F1/F6: Fuse

K1: Compressor Contactor

C2: Run Capacitor

M: Compressor Motor

R/C/S: Compressor Terminal

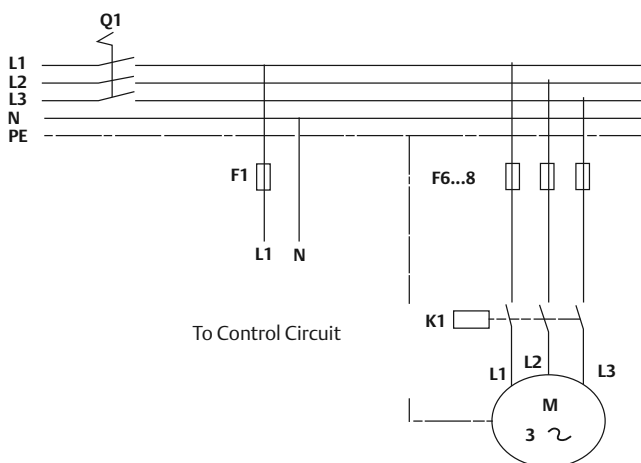

3 Phase (ZB15-ZB114)

(with Motor Protection Code "F")

Electrical Schematics

L1/L2/L3/N/PE: 3 Phase Lines (line/neutral/ground)

Q1: Manual Switch

F1/F6...8: Fuse

K1: Compressor Contactor






M: Compressor Motor

L1/L2/L3: Compressor Terminal

ZB Series

Electrical Wiring Diagram

ZB15~ZB114 Control Circuit

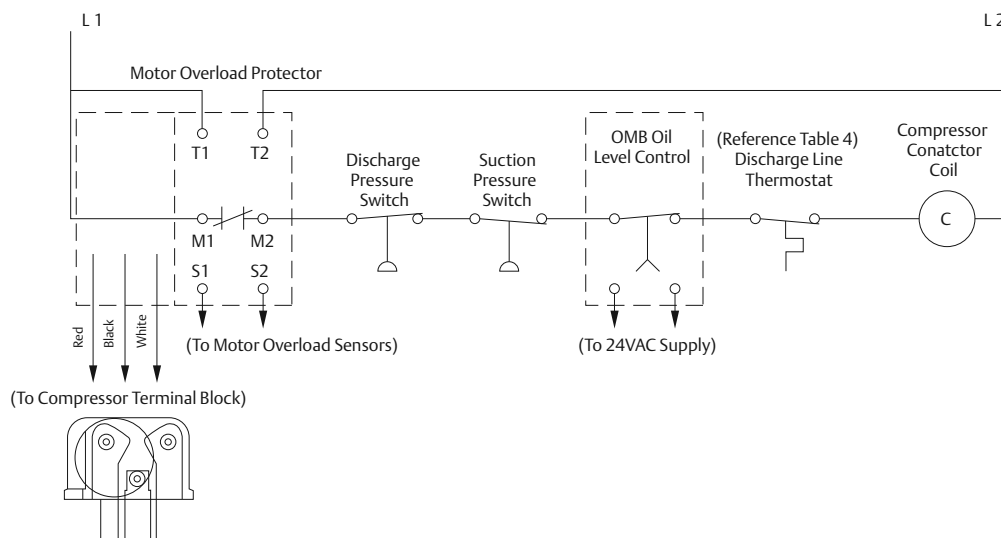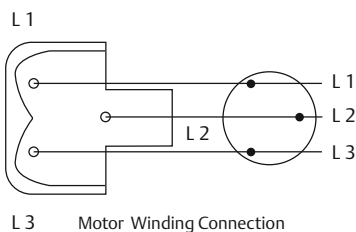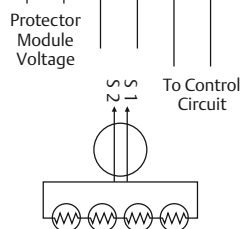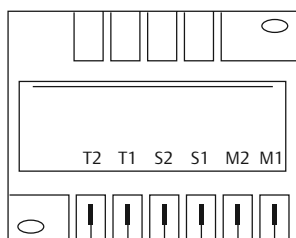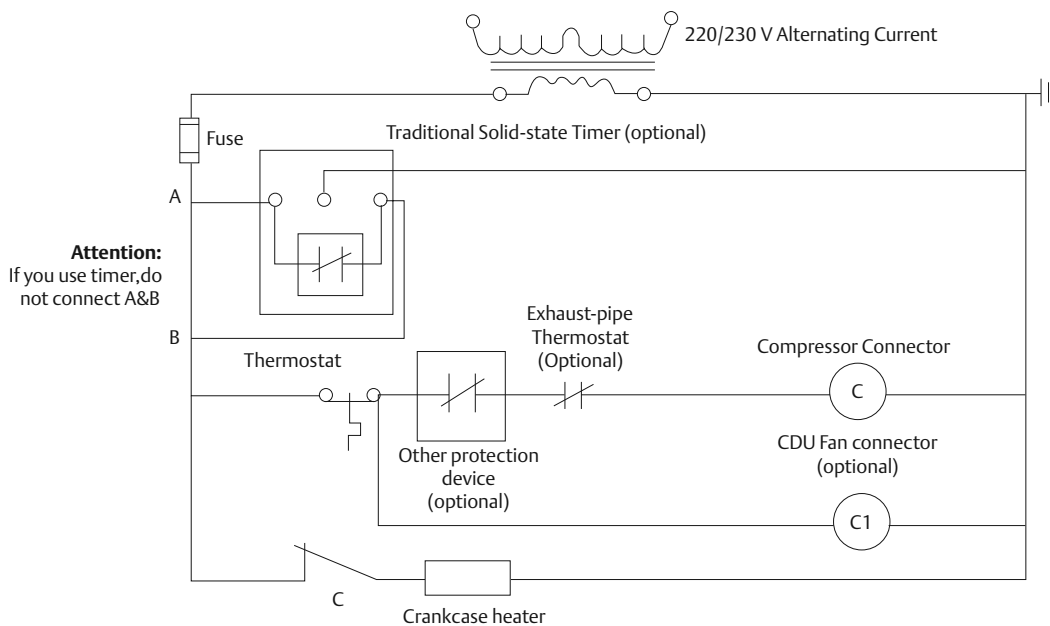

Contact us at:

**Emerson Climate Technologies,
Asia Pacific Headquarters**
10/F, Pioneer Building,
213 Wai Yip Street,
Kwun Tong, Kowloon, Hong Kong.
Tel: (852) 2866 3108
Fax: (852) 2520 6227

Australia
Emerson Climate Technologies Australia Pty Ltd
Unit R7, 391 Park Road
Regents Park, NSW 2143, Australia
Tel: (61-2) 9795 2800
Fax: (61-2) 9738 1699

China - Shanghai
c/o Emerson Climate Technologies (Suzhou) Co. Ltd
Shanghai Sales Office
11th Floor, Innov Tower,
1801 Hong Mei Road,
Xujiahui District
Shanghai 200233, P. R. China
Tel: (86-21) 3395 0000
Fax: (86-21) 3367 8100

China - Beijing
c/o Emerson Climate Technologies (Suzhou) Co. Ltd
Beijing Sales Office
Room 310, Canway Building
66 Nan Lishi Road, Xicheng District
Beijing 100045, China
Tel: (86-10) 6805 7825
Fax: (86-10) 6805 6301

China - Guangzhou
c/o Emerson Climate Technologies (Suzhou) Co. Ltd
Guangzhou Sales Office
Room 508-509, R&F Yinglong Plaza
No. 76 Huangpu Road West,
Guangzhou 510623, PRC.
Tel: (86-20) 2886 7668
Fax: (86-20) 2886 7622

China - Suzhou
c/o Emerson Climate Technologies (Suzhou) Co. Ltd
Suzhou Plant
No. 69 Suhong West Road,
Suzhou Industrial Park, Suzhou,
Jiangsu Province, P.R.C. 215021 China.
Tel: (86-512) 6257 5505
Fax: (86-512) 6257 5506

India - PUNE
Emerson Climate Technologies (India) Ltd
Plot No. 23, Rajiv Gandhi Infotech Park,
Phase - II, Hinjewadi,
Pune 411 057, Maharashtra, India
Tel: (91-20) 2553 4988
Fax: (91-20) 2553 6350

India - Mumbai
Emerson Climate Technologies (India) Ltd
Unit No. 4, 5, 6 & 7, Bhaveshwar Arcade
LBS Marg, Opp. Shreyas Cinema
Ghatkopar (West)
Mumbai 400 086, Maharashtra, India
Tel: (91-22) 2500 6630/ 2500 6632
Fax: (91-22) 2500 6570

Indonesia
PT. Emerson Indonesia
Wisma Kota BNI 46 16th floor Suite 16.01
Jl. Jend. Sudirman Kav.1 Jakarta 10220
Tel: (62)21-2513003 ext.6000
Fax: (62)21-2510622

Japan
c/o Emerson Japan Ltd
Shin-yokohama Tosho Building No. 3
3-9-5 Shin-Yokohama, Kohoku-ku
Yokohama 222-0033 Japan
Tel: (81-45)475 6371
Fax: (81-45)475 3565

South Korea
c/o Emerson Electric (South Korea) Ltd
12F, Narae B/D, 719-1, Yeoksam-dong
Gangnam-gu, Seoul, South Korea 135-080
Tel: (82-2) 3483-1500
Fax: (82-2) 592-7883 / 592-7886

Malaysia
c/o Emerson Electric (Malaysia) Sdn. Bhd.
Level M2, Blk A, Menara PKNS-PJ
Jalan Yong Shook Lin
46050 Petaling Jaya, Selangor, Malaysia
Tel: (60-3) 7949 9222
Fax: (60-3) 7949 9333

Philippines
Emerson Climate Technologies
Global Service Centre - Manila
4th floor, San Miguel Properties Center (SMPC),
No. 7, St. Francis Avenue., Mandaluyong City
Philippines
Trunkline: (63-2) 4795-100/4795-200/4795-300
Tel: (63-2) 702 1579
Fax: (63-2) 479 5271

Taiwan
c/o Emerson Electric (Taiwan) Co. Ltd
5th Floor, No.2 Jen Ai Road
Section 4, Taipei 10650, Taiwan
Tel: (886-2) 2325 9555
Fax: (886-2) 2702 9630 / 2784 0022

Thailand - Rayong Plant
c/o Emerson Electric (Thailand) Ltd
No. 24 Moo 4 Tambol Pluakdaeng, Amphur
Pluakdaeng, Rayong 21140, Thailand
Tel: (66-38) 957 000
Fax: (66-38) 954 251

Thailand - Bangkok
c/o Emerson Electric (Thailand) Ltd
34th Floor Nation Tower
1858/133 Bangna Trad
Bangkok 10260, Thailand
Tel: (66-2) 716-4700
Fax: (66-2) 751-4240

aprefrigeration@emersonclimate.com